


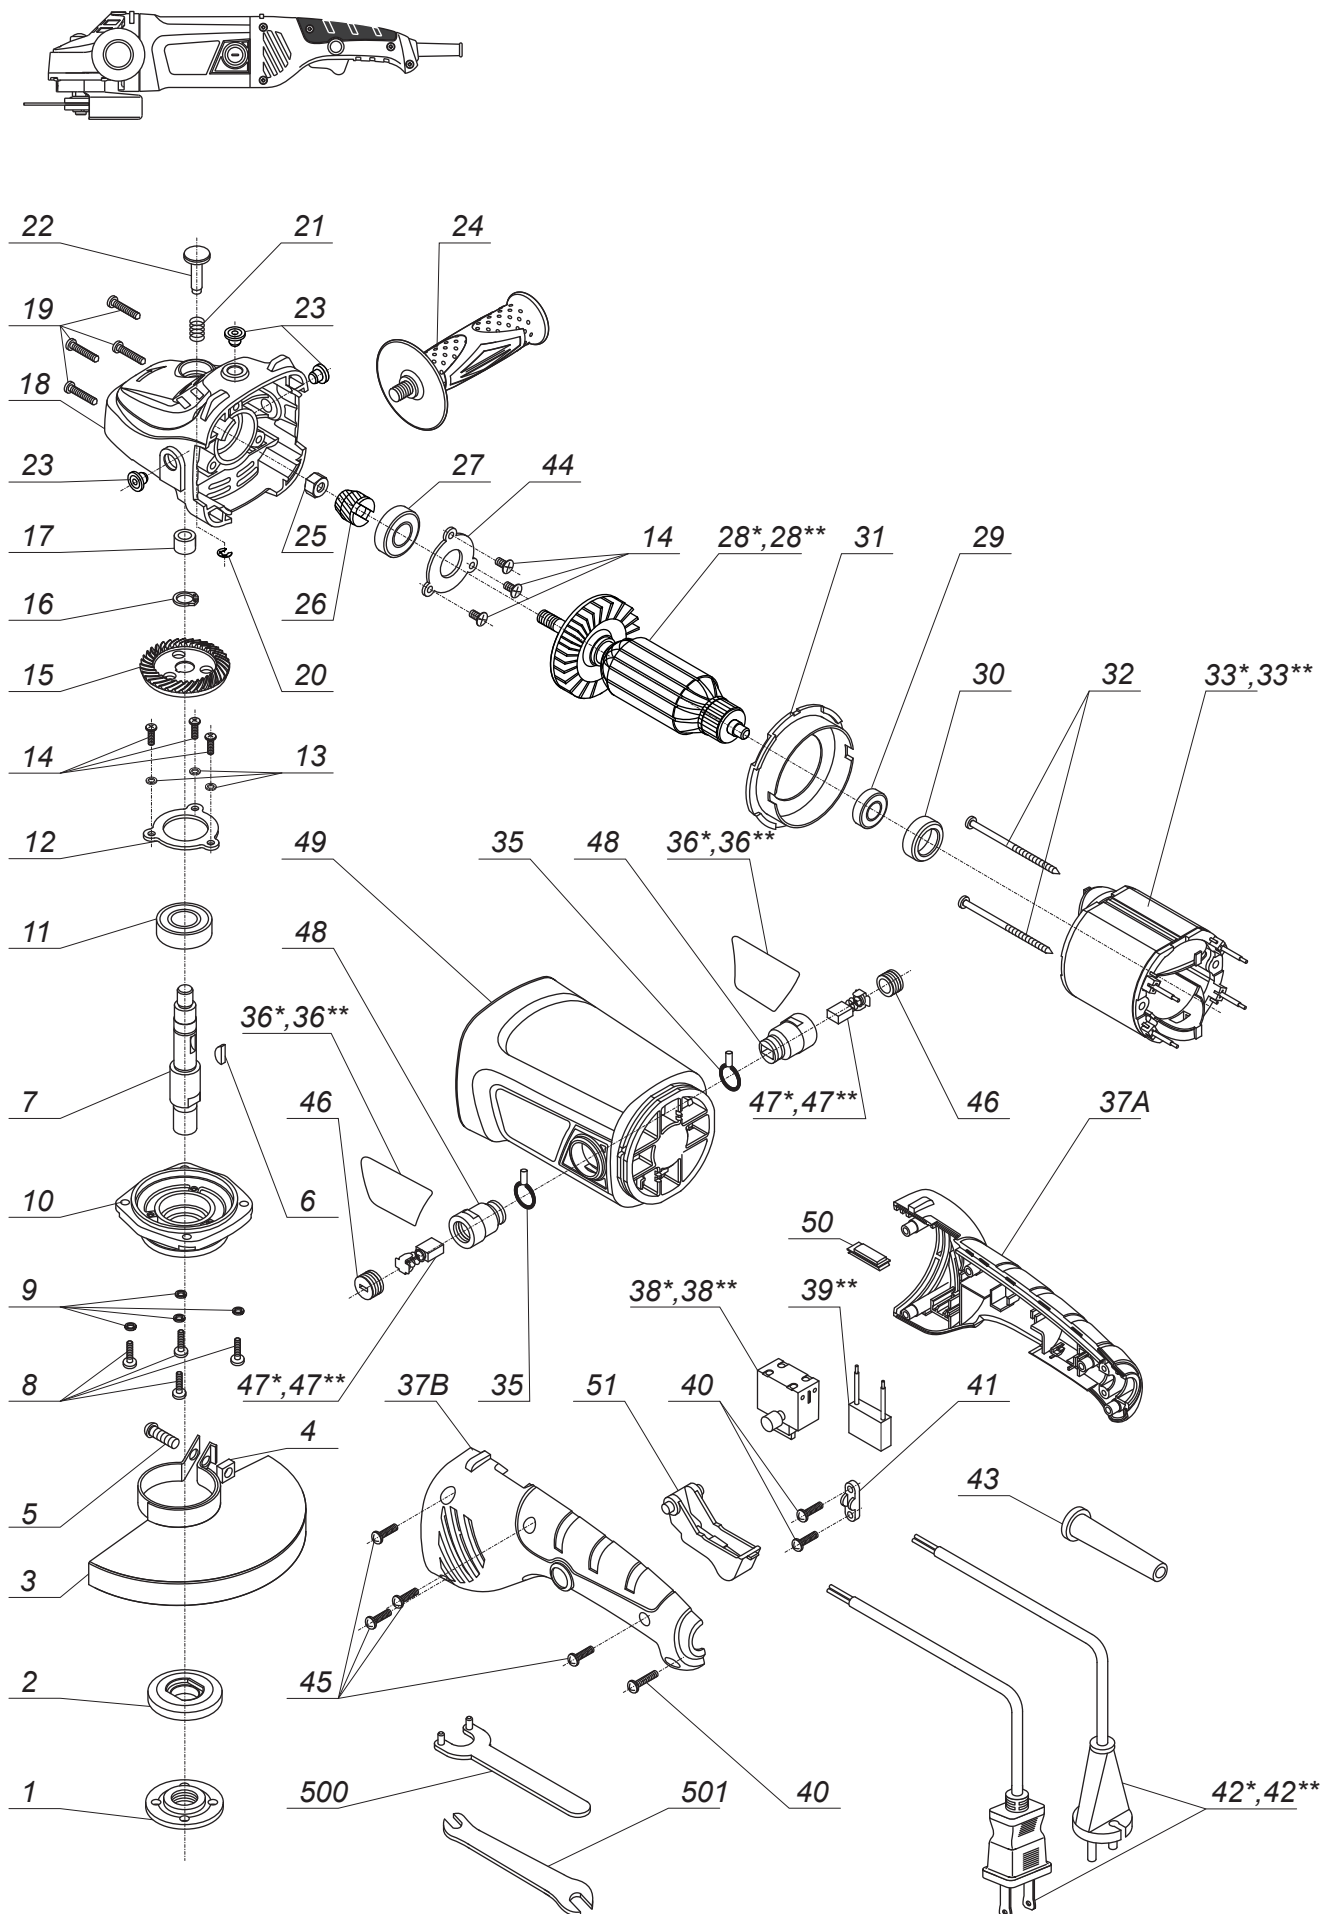

* - 127 V
 ** - 230 V

PRICE LIST OF SPARE PARTS

Pos.	Part Number	Description (Q-ty)	Description National Language (Q-ty)	Price, USD
1	M-090	Outside flange		
2	M-091	Inner flange		
3	P-008	Wheel guard Ø150		
4	S-125	Square nut M6		
5	S-047	Screw M6x25		
6	R-017	Key 4x5x13		
7	K-058	Spindle		
8	S-039	Screw M5x16 (4)		
9	S-024	Spring washer Ø5 (4)		
10	G-042	Gear housing cover		
11	O-010	Ball bearing 6002.RS		
12	M-097	Bearing cover Ø28		
13	S-023	Spring washer Ø4		
14	S-100	Screw M4x10		
15	F-037	Big gear		
16	S-097	Circlip for shaft Ø15		
17	O-069	Bronze bush Ø15xØ10x10		
18	G-033	Gear housing		
19	S-181	Screw ST5x35 (4)		
20	S-176	"C" ring 6,3		
21	R-074	Brake spring		
22	L-042	Brake pin		
23	S-105	Rubber plunge (2)		
24	Q-040	Side handle		
25	S-178	Lock nut M8x1.25		
26	F-044	Small gear		
27	O-014	Ball bearing 6201.RS		
28*	1A-029	Armature 127V		
28**	A-029	Armature 230V		
29	O-002	Ball bearing 608.RS		
30	M-007	Bearing bush Ø25xØ22x9		
31	I-029	Guide wind circle		
32	S-089	Screw ST4x75 (2)		
33*	1B-028	Stator 127V		
33**	B-028	Stator 230V		
35	J-014	Connection spring Ø12.5 (2)		
36*	1T-068	Brand label (2) 127 V (WS13-150T)		
36**	T-068	Brand label (2) 230 V (WS13-150T)		
37A	H-079	Handle A		
37B	H-087	Handle B		
38*	1C-017	Switch 127V		
38**	C-017	Switch 230V		
39**	E-006	Condenser 0.33µF 230V		
40	S-074	Screw ST4x14 (4)		
41	M-002	Cord clip		
42*	1E-003	Cord 127V		
42**	E-003	Cord 230V		
43	M-003	Rubber sleeve		
44	M-098	Bearing cover Ø19,5		
45	S-075	Screw ST4x16 (4)		
46	J-028	Brush cap (2)		
47*	1D-011	Carbon brush (2) 127V		
47**	D-011	Carbon brush (2) 230V		
48	J-021	Brush holder (2)		

49	H-061	Housing		
50	L-045	Cover plate		
51	I-034	Switch button		
500	Q-043	Spanner		
501	Q-045	Wrench spanner M6		