



ENGLISH

FAN HEATER

Description

- 1. Air output grid in the turbo mode
- 2. Air output grid
- 3. Supporting legs
- 4. Air input
- 5. Thermostat control
- 6. Operating modes switch
- 7. Handles for carrying
- 8. Operating modes indicator

Safety Measures

Before switching the unit on, read these instructions carefully.

- Use the unit only for its intended purposes as stated in this manual.

Before using the appliance for the first time, make sure that the electricity supply corresponds to the voltage of current specified on the housing.

The power cord is equipped with a «euro plug»; connect it to the socket with a secure grounding.

In order to avoid risk of fire, do not use adaptors while connecting the appliance to the outlet.

In order to avoid network overloading, provide that no other electrical appliances with higher power consumption are connected to the same outlet the unit is connected to.

When mounting the unit on the wall, place it in a way that the socket should be below the unit and easy to access.

When mounting the unit on the wall, the distance from the floor and from the front and upper panels till the objects should be not less than 50 cm, the distance from the side panels till the objects should be not less than 10 cm.

Mark the mounting points of the «A» brackets on the wall.

Set the unit on the «A» brackets. Insert two «B» brackets in the air input grid, as shown in the picture.

Mark the mounting points of the «B» brackets on the wall.

Remove the heater, drill the holes in the wall and insert expansion anchors in them.

Set the unit on the «A» brackets and lock the heater using the «B» brackets.

Operation

Insert the plug into the socket.

Use the switch (6) to set the desired operation mode:

• 0+off; • MIN - power 800 W;

• MED - power 1200 W;

• MAX - power 2000 W

Switching on the ventilation mode:

• MIN - power 800 W and the ventilation mode;

• MED - power 1200 W and the ventilation mode;

• MAX - power 1200 W and the ventilation mode.

Turn the thermostat control (5) to set the desired level of the room heating.

To switch off the unit, set the thermostat control (5) to the «0» position, the switch (6) – to the «OFF» position, and then unplug the unit.

Note:

When using the unit for the first time, the heating element burns, some smoke and foreign odor can appear, it is normal.

Do not open the doors and the windows when the unit is operating. There should be good heat insulation in the room; otherwise you will not get the desired results, due to cold air flow.

Frost watch function, the thermostat control in the «**» position

The heater has a function of switching on while a significant decrease of the air temperature.

Switching on the «Frost watch» function:

• Set the operating modes switch (6) to «MAX» or «MED» depending on the room sizes.

• Set the thermostat control to the left – switching on of the «Frost watch» function.

• It is not guaranteed that the heater will switch on during the night.

• Turn the thermostat control (5) to the «0/off» position, and then unplug the unit.

For additional protection you can install a residual current device with nominal current of operation, not exceeding 30 mA into the mains, when installing, contact a specialist.

• Do not place the unit on the surfaces from which it can fall into a bath or other container filled with water.

• Provide that water does not get on the panel of the unit.

• If some water fell on the unit, before touching the unit take the plug out of the socket in order to avoid risk of electric shock.

• Do not use the unit in the rooms where inflammable substances are kept or used.

• Do not cover the unit during operation.

• Avoid blocking of the openings of the unit by any objects or interior elements of the room.

• Do not insert any foreign objects in the grids of the unit in order to avoid getting injuries and damaging the unit.

• Do not turn the unit over during its operation.

• Do not allow children to use the unit as a toy.

• Close supervision is necessary when the unit is used near children or disabled persons.

• This unit is not suitable for use by persons with disabilities. Please follow the necessary instructions on safety measures and information about danger which can be caused by improper usage of the unit.

• When using the supporting legs, place the unit on a flat stable surface.

• Do not pull the unit by the power cord.

• Use only the accessories supplied.

• Never leave the operating unit unattended.

• Always unplug the unit if it is not being used.

• Plug the appliance, set room temperature again.

If the unit does not switch on, it may mean that there are damages in the unit. In this case contact the authorized service center for repair.

Clean and care

• Before cleaning unplug the unit and let it cool down.

• Clean the unit regularly to avoid dust accumulation.

• Wipe the outer surface of the unit with a damp cloth. Do not use abrasive substances to remove dirt.

• Do not immerse the fan heater in water or any other liquids. Provide that the unit does not get into the fan heater case in order not to damage it or avoid electric shock.

• Let the unit cool down completely before taking the unit away for keeping or before cleaning.

• To clean the air output and input grids use a vacuum cleaner with a corresponding attachment.

• Schatten Sie das Gerät vom Stromnetz ab, wenn Sie die Stufe der Aufheizung des Raumes erreicht haben. Falls sich das Gerät nicht einschaltet, kann dies bedeuten, dass der Heizlüfter eine andere Beschädigung hat. Bitte wenden Sie sich in diesem Falle an ein autorisiertes Kundendienstcenter, um das Gerät zu reparieren.

Reinigung und Pflege

• Vor der Reinigung schalten Sie das Gerät vom Stromnetz ab, und lassen Sie es komplett abkühlen.

• Reinigen Sie das Gerät regelmäßig, um die Staubsammlung zu vermeiden.

• Wischen Sie die Außenseite des Geräts mit einem feuchten Tuch ab.

• Nutzen Sie die Entfernung der Verschmutzung durch einen speziellen Waschmittel.

• Stellen Sie das Gerät nicht in Wasser oder an andere Flüssigkeiten zu tauchen, achten Sie darauf, dass die Flüssigkeit ins Gehäuse des Geräts nicht eindringt, um das Strömungsschlagrisiko zu vermeiden.

• Stellen Sie das Gerät in einem trockenen und für Kinder unzugänglichen Ort auf.

• Das Gerät ist nur für den Gebrauch im Haushalt geeignet.

Vorbereitung zur Inbetriebnahme

ATTENTION! Portable electric heaters are intended for additional rooms heating.

They are not meant for operation as main heating device.

Take the unit out of the packaging which can be used for the storage of the unit.

Before using the appliance for the first time, make sure that the electricity supply corresponds to the voltage of current specified on the housing.

Make sure that the operating modes switch (6) is in the «0/off» position and the thermostat control (5) is in the «**» position.

Installation

Option 1 - Floor-mounted installation

• Insert the grooves of the supporting legs (3) in the guides on the housing of the unit.

• Set the unit on the supporting legs (3).

Option 2 - Wall-mounted installation

Attention! Before drilling a hole in the wall, make sure that there is no electrical wiring at this place.

• Use the brackets «A» and «B», supplied with the unit, to lock the unit.

• When mounting the unit on the wall, place it in a way that the socket should be below the unit and easy to access. The distance from the

unit to the wall should be not less than 50 cm, the distance from the side panels till the objects should be not less than 10 cm.

• Mark the mounting points of the «A» brackets on the wall.

• Set the unit on the «A» brackets. Insert two «B» brackets in the air input grid, as shown in the picture.

• Mark the mounting points of the «B» brackets on the wall.

• Remove the heater, drill the holes in the wall and insert expansion anchors in them.

• When mounting the unit on the wall, place it in a way that the socket should be below the unit and easy to access. The distance from the

unit to the wall should be not less than 50 cm, the distance from the side panels till the objects should be not less than 10 cm.

• Make sure that the Spannung des Geräts mit der Netzspannung übereinstimmt.

• Vergewissern Sie sich, dass sich der Betriebsstufenschalter (6) in der Position „0/AUS“ und der Thermostattreger (5) in der Position „**“ befindet.

Montage

Variante 1 - Bodenmontage

• Stellen Sie die Auspuffungen der Stützfüße (3) in die Leitbahnen der unteren Gehäusewand des Geräts.

• Stellen Sie das Gerät auf die Stützfüße (3) auf.

Variante 2 - Aufhängevorrichtung

Achtung! Bevor Sie die Wand bohren, vergewissern Sie sich, dass keine Kabelleitung an dieser Stelle verlegt wurde.

• Verwenden Sie die Spannungsabnehmer (3) in направлении, расположенные на корпусе устройства.

• Platzieren Sie das Gerät auf die Stützfüße (3).

Benutzungsduar der Teekanne - 5 Jahre

GARANTIE

Detaile regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Service life of the unit - 5 years

ATTENTION! Portable electric heaters are intended for additional rooms heating.

They are not meant for operation as main heating device.

Take the unit out of the packaging which can be used for the storage of the unit.

Before using the appliance for the first time, make sure that the electricity supply corresponds to the voltage of current specified on the housing.

Make sure that the operating modes switch (6) is in the «0/off» position and the thermostat control (5) is in the «**» position.

Preparing for operation

Specifications

Power supply: 230 V ~ 50 Hz

Maximal power: 2000 W

3-position heating switch (800/1200/2000 W)

Heating space up to 25 sq.m

The manufacturer reserves the right to change the device's characteristics without prior notice.

Technische Eigenschaften

Stromversorgung: 230 V ~ 50 Hz

Maximale Leistung: 2000 W

Heizfläche bis 25 m²

Dieses Erzeugnis entspricht allen erforderlichen europäischen und russischen Vorschriften- und hygienischen Vorschriften.

Garantiebedingungen

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Nehmen Sie das Gerät aus der Verpackung heraus, die zur Aufbewahrung des Geräts benutzt werden kann.

Vor der ersten Inbetriebnahme vergewissern Sie sich, dass die Spannung des Geräts mit der Netzspannung übereinstimmt.

• Vergewissern Sie sich, dass sich der Betriebsstufenschalter (6) in der Position „0/AUS“ und der Thermostattreger (5) in der Position „**“ befindet.

Montage

Variante 1 - Bodenmontage

• Stellen Sie die Auspuffungen der Stützfüße (3) in die Leitbahnen der unteren Gehäusewand des Geräts.

• Stellen Sie das Gerät auf die Stützfüße (3) auf.

Variante 2 - Aufhängevorrichtung

Achtung! Bevor Sie die Wand bohren, vergewissern Sie sich, dass keine Kabelleitung an dieser Stelle verlegt wurde.

• Verwenden Sie die Spannungsabnehmer (3) in направлении, расположенные на корпусе устройства.

• Platzieren Sie das Gerät auf die Stützfüße (3).

Benutzungskennzeichnung

#####

