


BM-1050 M

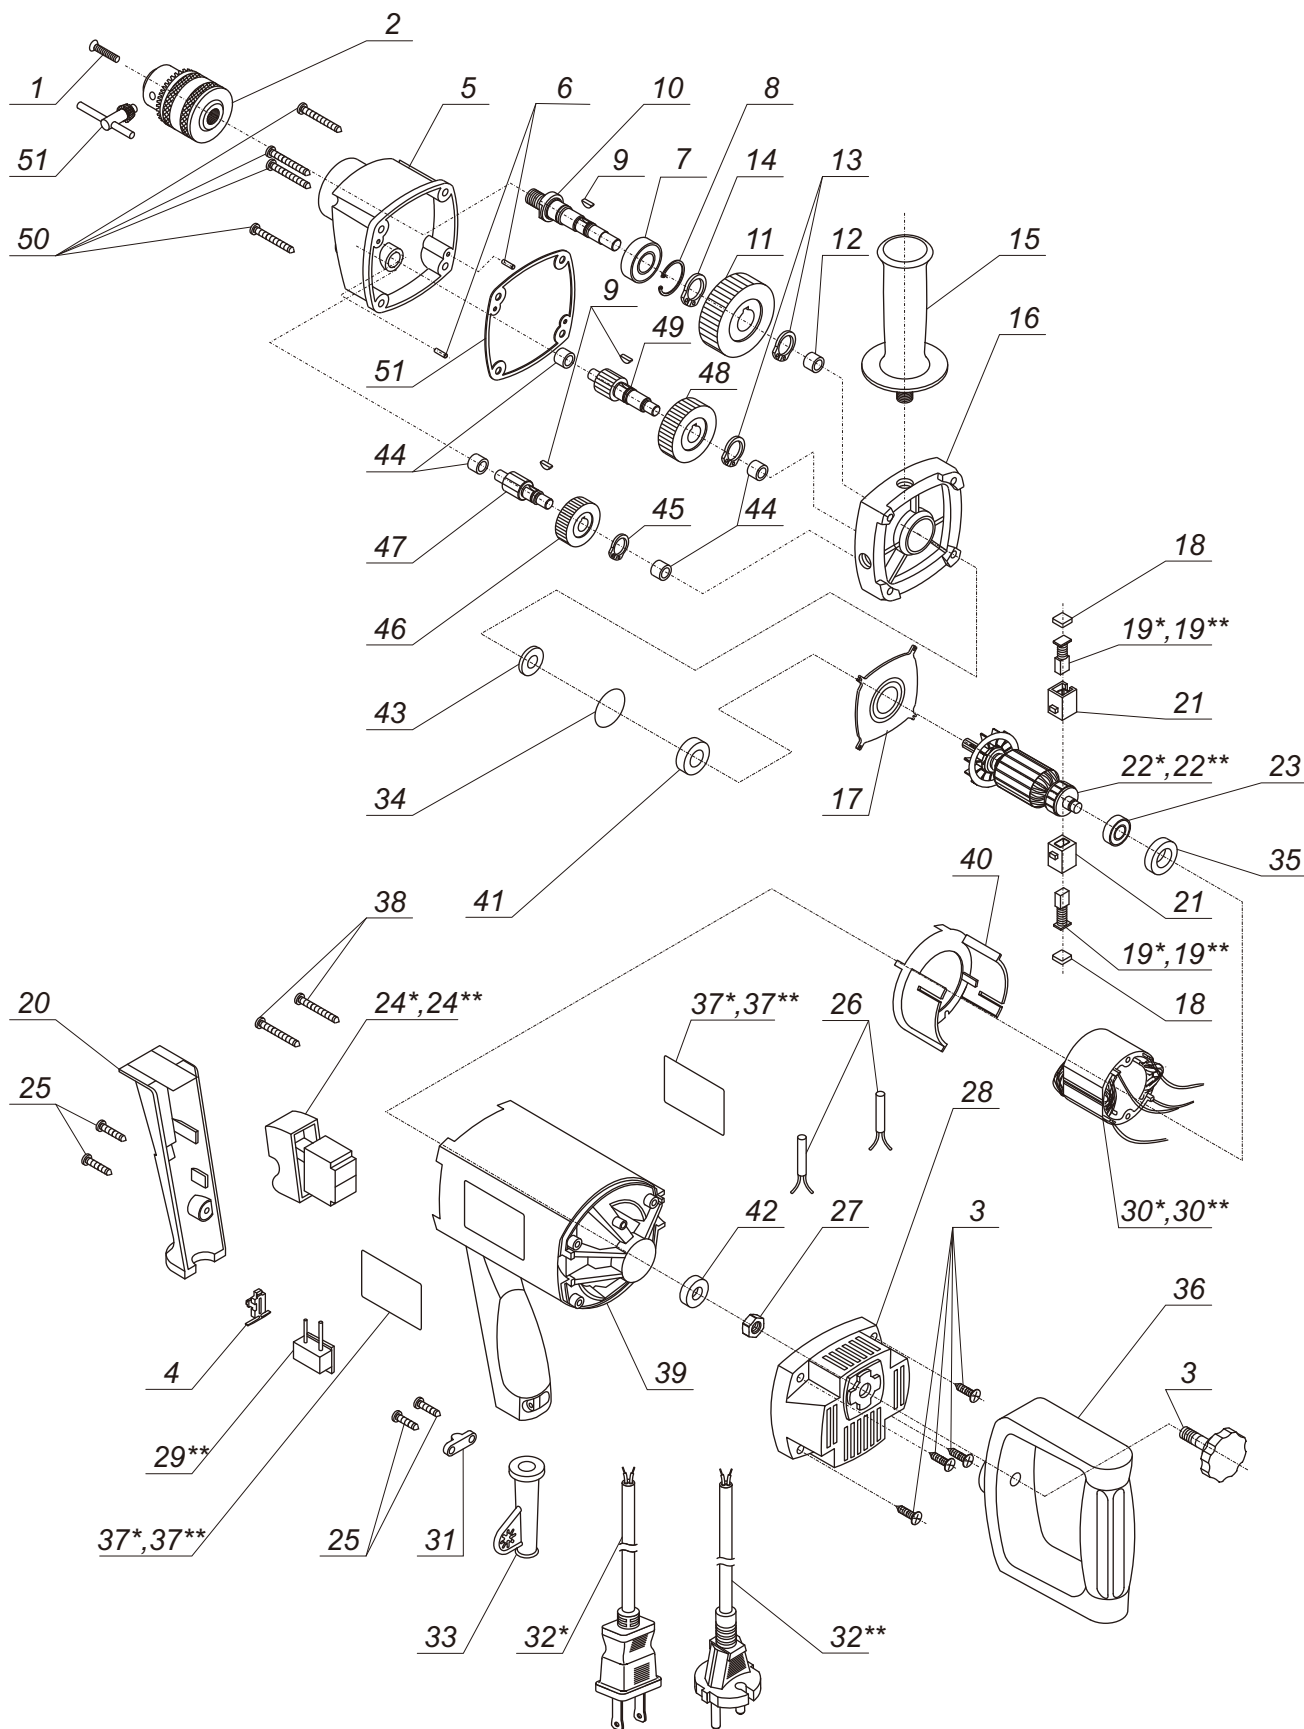

* - 127 V
 ** - 230 V

PRICE LIST OF SPARE PARTS

Pos.	Part Number	Description (Q-ty)	Description National Language (Q-ty)	Price, USD
1	S-170	Screw M6x22L		
2	Q-051	Chuck 13mm		
3	S-187	Locking screw M8x28		
4	I-015	Lock button		
5	G-030	Gear housing		
6	L-031	Pin Ø3x10 (2)		
7	O-010	Ball bearing 6002.RS		
8	S-108	Circlip for hole Ø32		
9	R-014	Key 3x3.7x10 (3)		
10	K-055	Spindle		
11	F-018	Gear		
12	O-038	Needle bearing HK 1012		
13	S-095	Circlip for shaft Ø12 (2)		
14	S-097	Circlip for shaft Ø15		
15	Q-040	Side handle		
16	G-039	Gear housing cover		
17	M-102	Bearing cover		
18	J-026	Brush cap (2)		
19*	1D-010	Carbon brush (2) 127 V		
19**	D-010	Carbon brush (2) 230 V		
20	H-076	Handle cover		
21	J-018	Brush holder (2)		
22*	1A-021	Armature 127 V		
22**	A-021	Armature 230 V		
23	O-002	Ball bearing 608.RS		
24*	1C-015	Switch 127v		
24**	C-015	Switch 230v		
25	S-075	Screw ST4x16 (8)		
26**	E-034	Inductor 18µH 230V(2)		
27	S-064	Hex.nut M8		
28	H-003	Rear cover		
29**	E-038	Condenser with plate 0.33µF 230V		
30*	1B-020	Stator 127 V		
30**	B-020	Stator 230 V		
31	M-002	Cord clip		
32*	1E-002	Cord 127V		
32**	E-002	Cord 230V		
33	M-068	Rubber sleeve		
34	M-103	"O" ring Ø26		
35	M-007	Bearing bush Ø25xØ22x9		
36	Q-063	Rear D-handle		
37*	1T-085	Brand label 127V		
37**	T-085	Brand label 230V		
38	S-085	Screw ST4x55 (2)		
39	H-057	Housing		
40	I-026	Guide wind circle		
41	O-008	Ball bearing 6000.RS		
42	L-009	Nut cover		
43	M-105	Sealing ring Ø20xØ10x3		
44	O-037	Needle bearing HK0810 (2)		
45	S-094	Circlip for shaft Ø10		
46	F-027	First reductor gear		
47	F-033	First reductor shaft		
48	F-029	Second reductor gear		

49	F-030	Second reductor shaft		
50	S-092	Screw ST5x55 (4)		
51	M-107	Gasket		
500	Q-052	Chuck key		