
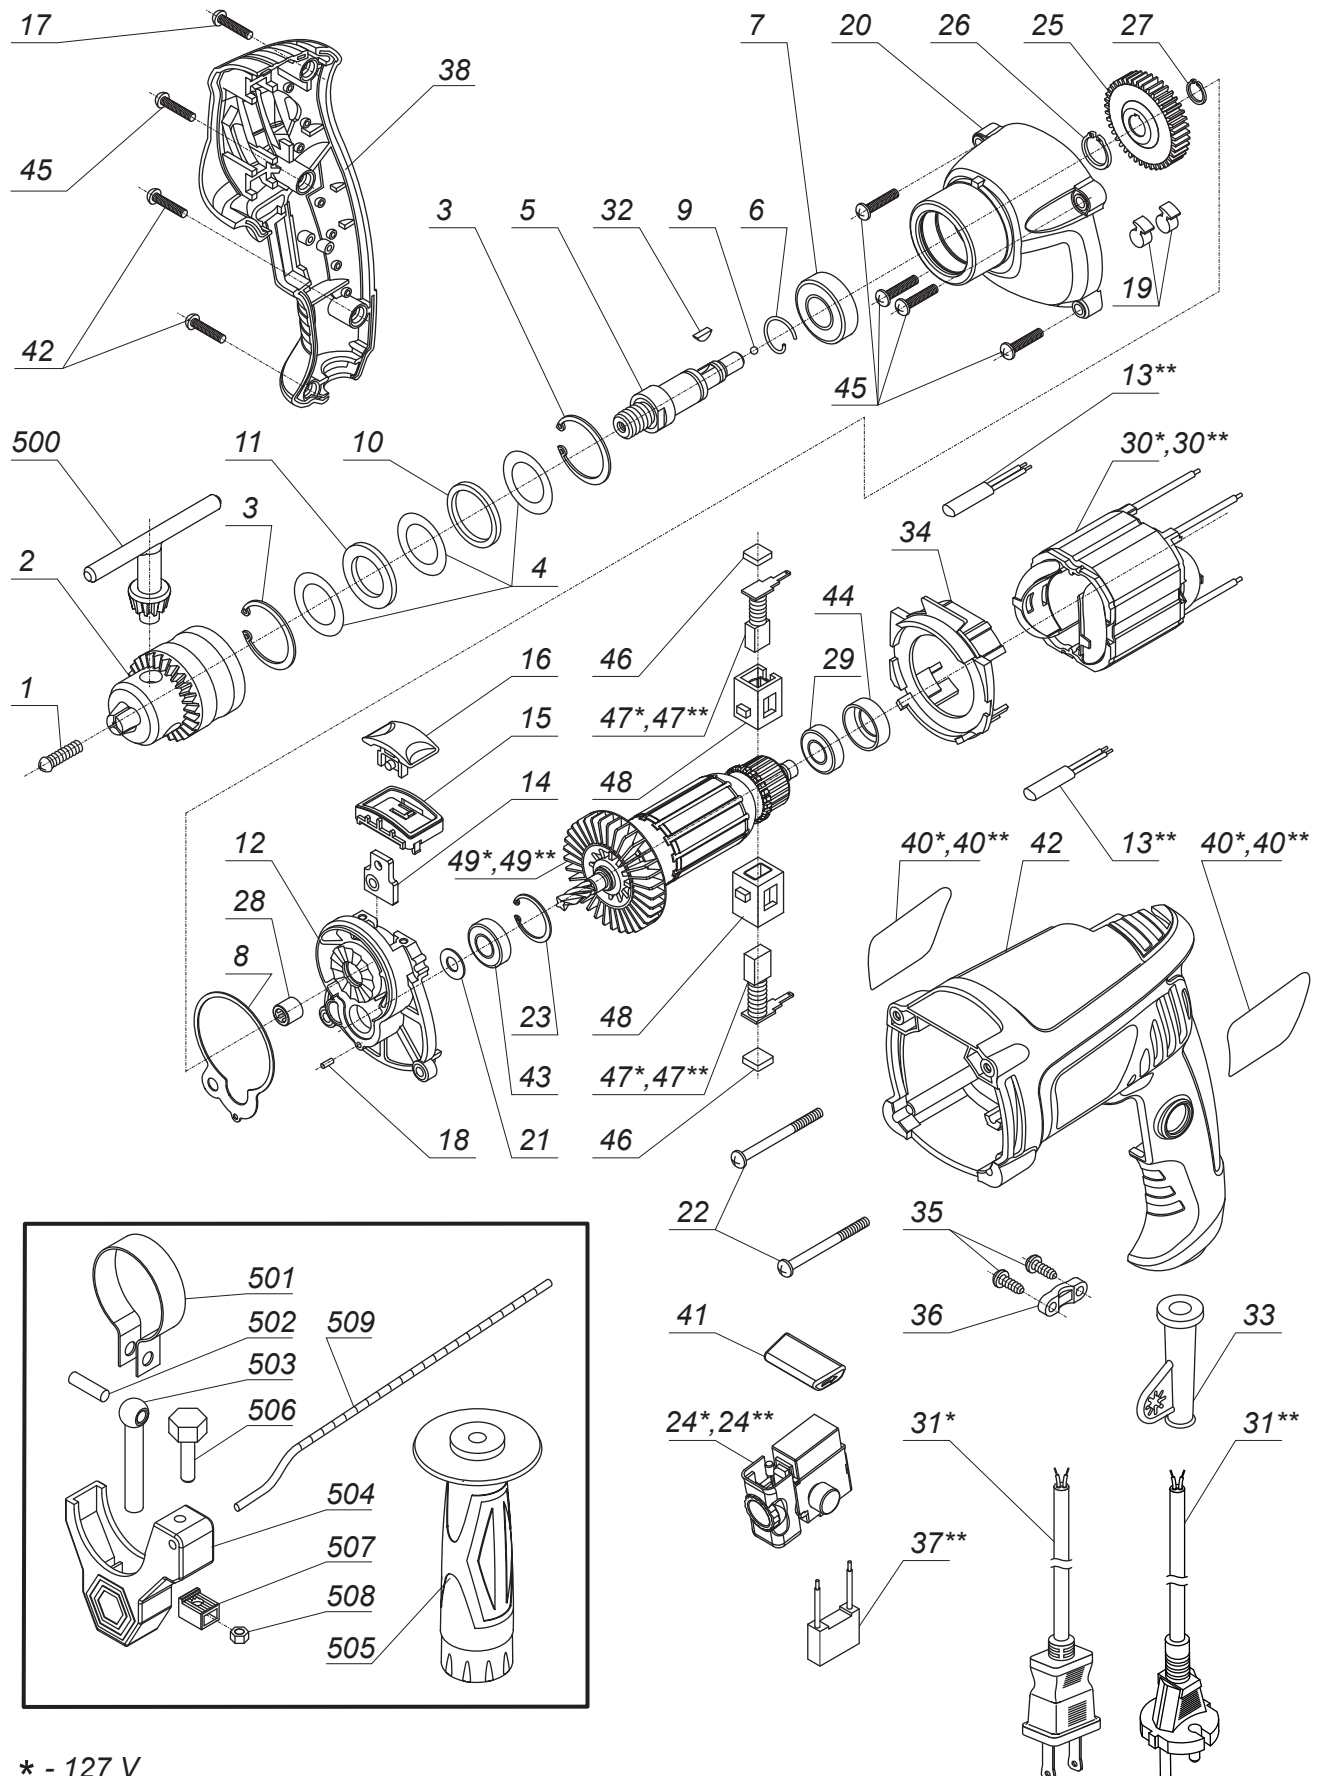


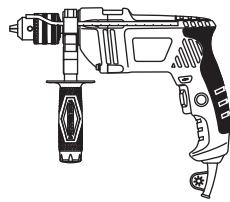

* - 127 V
 ** - 230 V

PRICE LIST OF SPARE PARTS

Pos.	Part Number	Description (Q-ty)	Description National Language (Q-ty)	Price, USD
1	S-170	Screw M6x22L		
2	Q-051	Chuck 13 mm		
2#	Q-054	Keyless chuck 13 mm(SBM-810C)		
3	S-108	Circlip for hole Ø32 (2)		
4	S-172	Washer Ø32 (2)		
5	K-053	Spindle		
6	R-070	Spring		
7	O-010	Ball bearing 6002.2RS		
8	M-101	Gasket		
9	R-002	Steel ball Ø4		
10	M-086	Sealing ring Ø32x3,7		
11	M-084	Felt ring Ø32x4		
12	G-037	Gear housing cover		
13**	E-032	Inductor 10µH 230V (2)		
14	N-104	Impact washer		
15	N-109	Change button set		
16	N-106	Impact change button		
17	S-081	Screw ST4x30		
18	L-037	Pin 3x8 (2)		
19	M-070	Oiling felt (2)		
20	G-028	Gear housing		
21	M-087	Rubber ring Ø19xØ8x1		
22	S-085	Screw ST4x55 (2)		
23	S-113	Circlip for hole Ø25		
24*	1C-014	VS switch 127V		
24**	C-014	VS switch 230V		
25	F-023	Big gear		
26	S-097	Circlip for shaft Ø15		
27	S-094	Circlip for shaft Ø10		
28	O-037	Needle bearing HK0810		
29	O-002	Ball bearing 608.2Z		
30*	1B-022	Stator 127V		
30**	B-022	Stator 230V		
31*	1E-002	Cord 127V		
31**	E-002	Cord 230V		
32	R-014	Key 3x3.7x10		
33	M-068	Rubber sleeve		
33	M-003	Rubber sleeve (SBM-810C)		
34	I-024	Guide wind circle		
35	S-074	Screw ST4x14 (2)		
36	M-002	Cord clip		
37**	E-006	Condenser 0.33 µF		
38	H-073	Handle cover		
39	H-055	Housing		
40*	1T-052	Brand label 127V		
40*	T-052	Brand label 230V		
41	I-032	Switch pole		
42	S-076	Screw ST4x18 (2)		
43	O-023	Ball bearing 609.2RS		
44	M-007	Bearing bush Ø25xØ22x9		
45	S-078	Screw ST4x22 (5)		
46	J-026	Brush cap (2)		
47*	1D-010	Carbon brush 127V (2)		

47**	D-010	Carbon brush 230V (2)		
48	J-018	Brush holder (2)		
49*	1A-024	Armature 127V		
49**	A-024	Armature 230V		
500	Q-052	Chuck key		
501	Q-046	Chuck ring		
502	L-046	Chuck ring pin		
503	S-180	Handle screw		
504	Q-007	Handle clip		
505	Q-001	Side handle		
506	S-061	Hex.head screw M6		
507	Q-017	Arresting lever fixed block		
508	S-065	Nut M6		
509	Q-022	Depth gauge		