

RR – Service Manual



Sommario

1. Spare Parts and Internal Componets.....	3
2. Manifold vers. 6/2008	10
3. Manifold Ve 07/2009 with inverted EV	12
4. Version from July 2011	14
5. Power Supply Board: model with printer	16
6. Power Supply Board: model without printer	17
7. CPU Board.....	18
8. Control and calibration of CLEVER scale.....	19
a. Balance calibration (with empty bottle).....	19
b. How to empty the bottle:.....	20
c. Scale calibration (without bottle).....	20
9. SENSOR CALIBRATION 7-KEY ELECTRONIC BOARD	22
10. PARAMETERS VERIFICATION -version 2008	23

1. Spare Parts and Internal Componets

To open the upper panel:

- Unscrew the 2 screws installed on the top of the sides of the station (fig. 1A);
- Loosen the lower screws (fig. 1B)

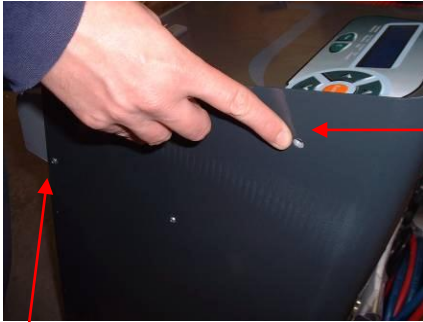


Fig. 1

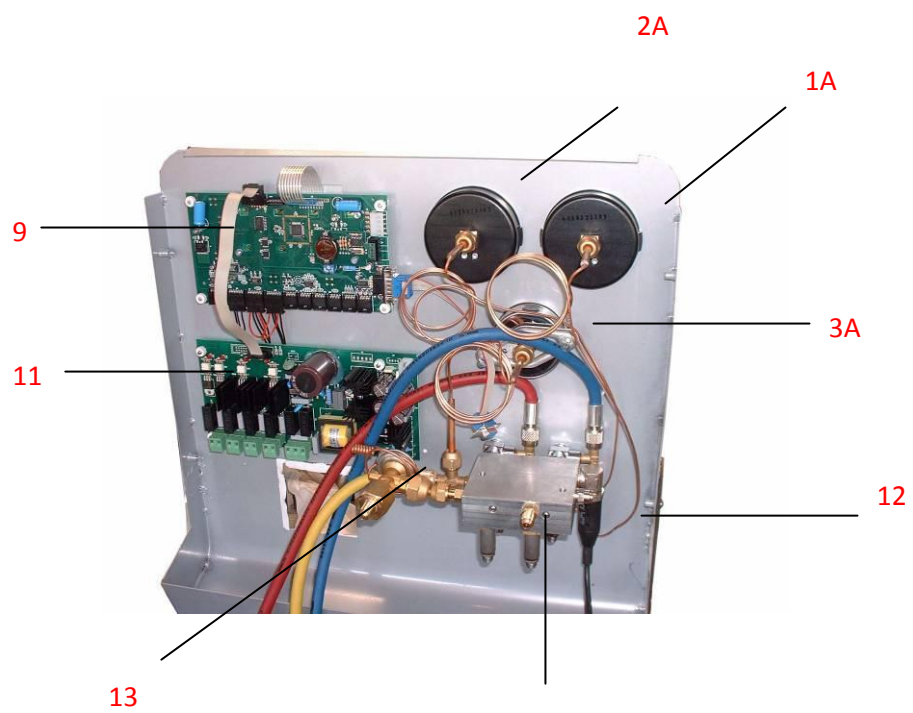
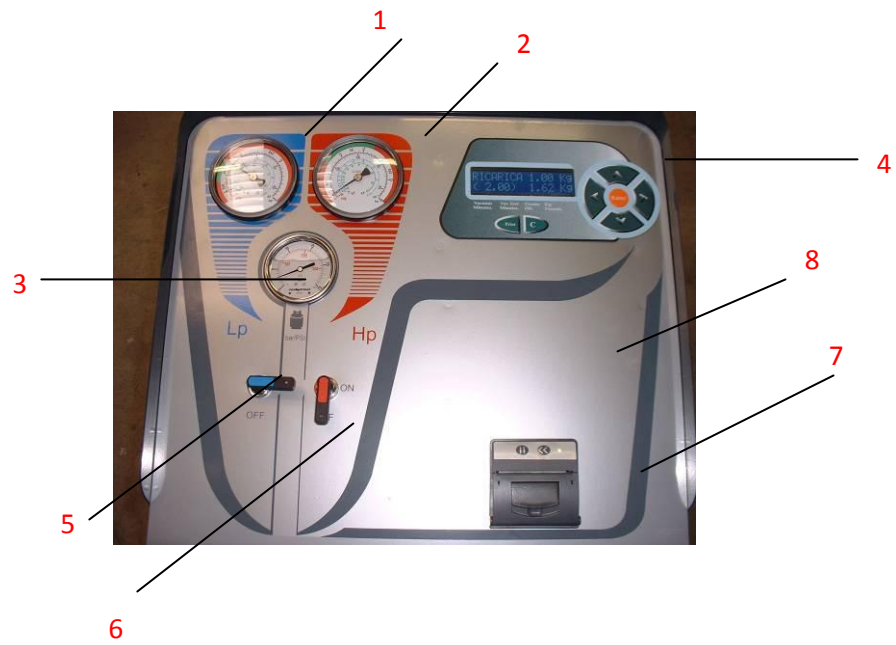


Fig. 2

- Lift up the upper panel
- To work on the front part, remove the plastic carter (fig. 3)

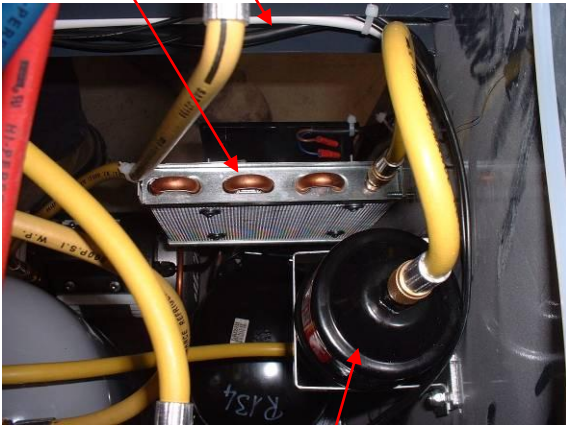


Fig. 3



15a

15




16

14*





16

20

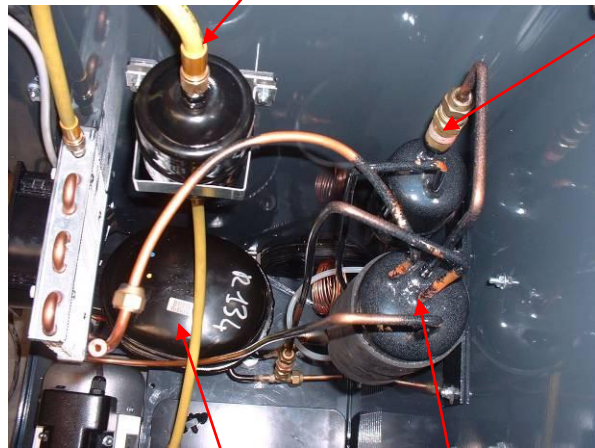


17

18

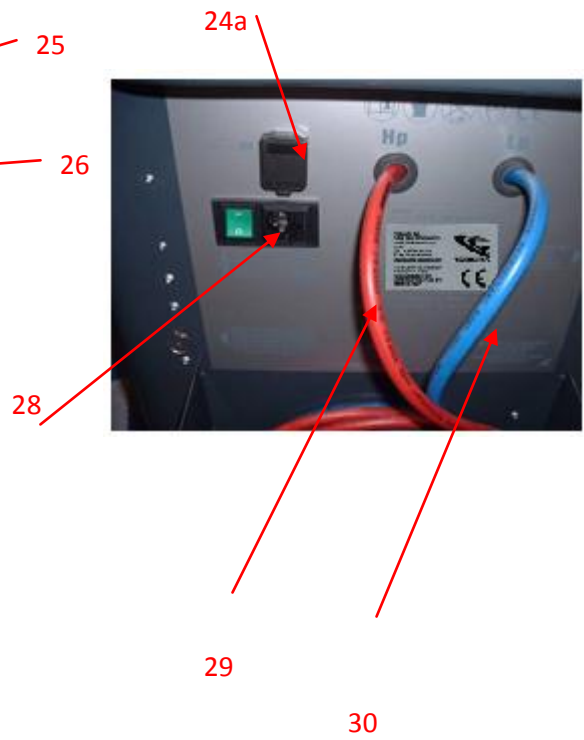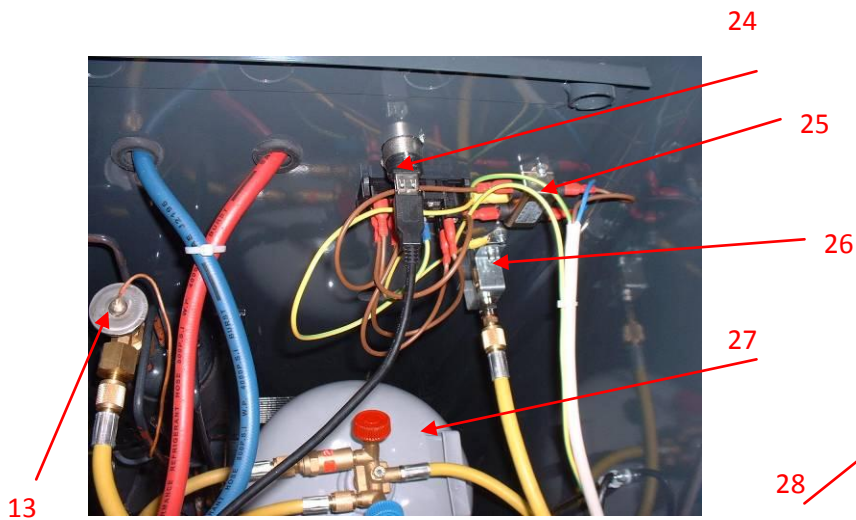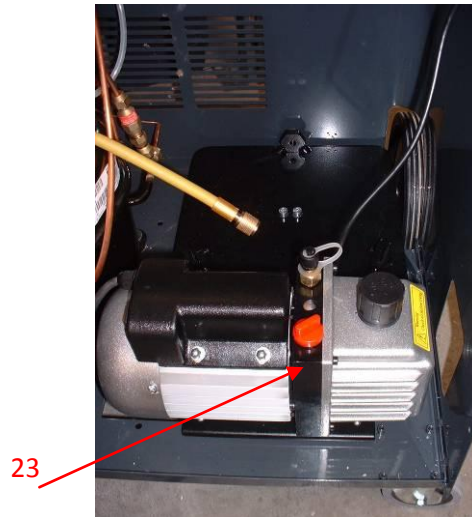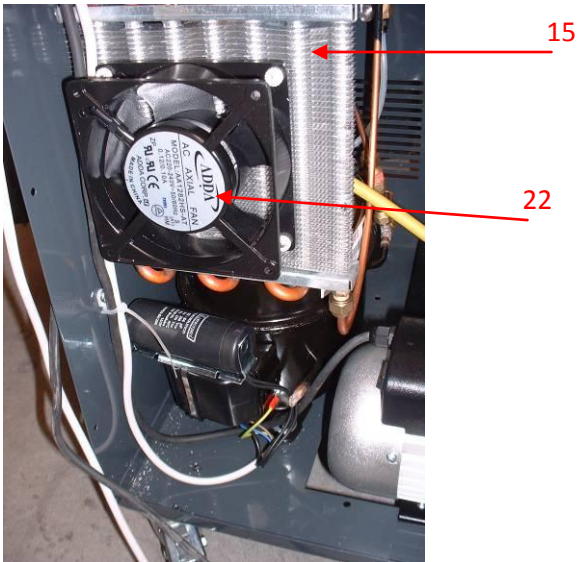




31

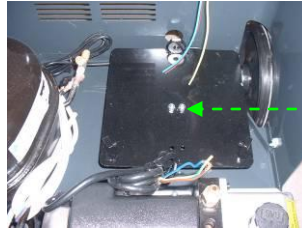

32

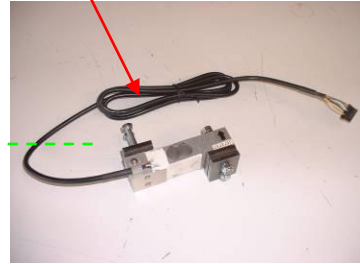


33



33

28

25

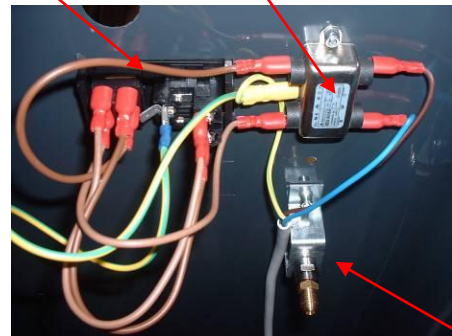

26




34



35

33



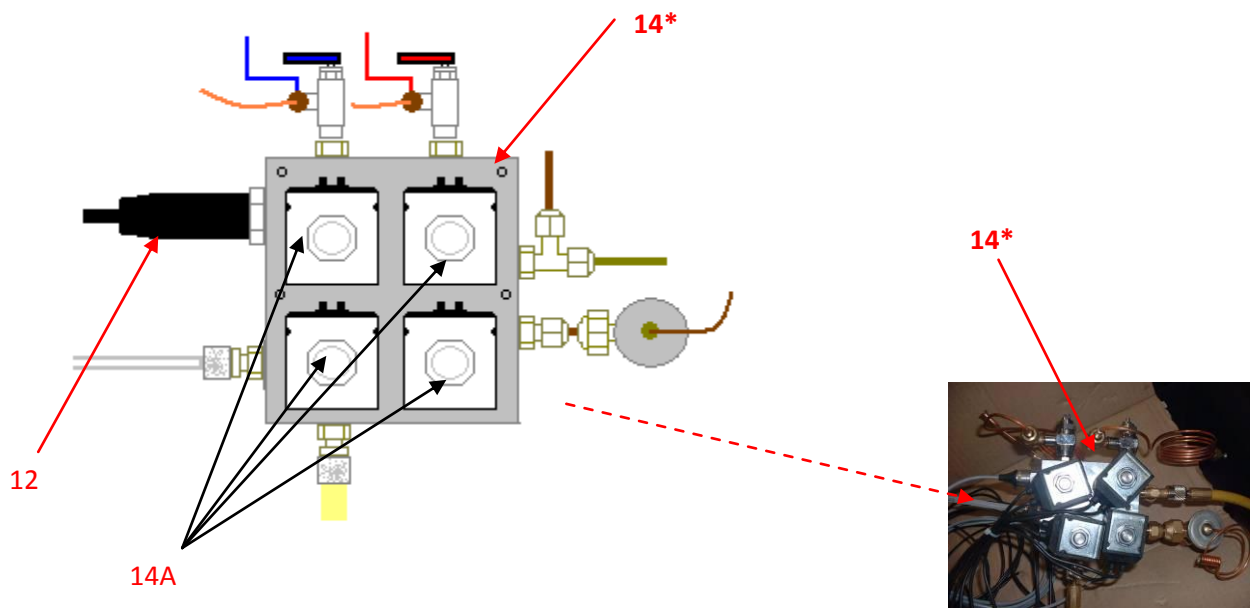


Position	Description	Code
1	BACK GAUGE L.P.-1/+15 D80	OMN040CR000
2	BACK GAUGE H.P.-1/+30 D80	OMN041CR000
3	BACK GAUGE 0-25 D63	OMN013CR047
4	MEMBRANE KEYBOARD	0AD279CR000
5	TAP VALVE 1/8F-F HNBR	0RC372CR000
6	TAP VALVE 1/8F-F HNBR	0RC372CR000
7	THERMAL PRINTER (OPTIONAL)	0SR016CR000
8	LABEL CLEVER CONTROL	0AD293CR000
9	CPU BOARD DATABASE ENTRY LEVEL	0SE087CR000
11 BIS	POWER BOARD.4 C.+P.S..SW.50W (PRINTER ONLY)	0SE075CR000
11	POWER BOARD.4 CHANNEL 5W	0SE090CR000
12	PRESS SENSOR.-1+15BAR	0EC055CR000
13	EXPANSION VALVE	0RR014CR000
14*	GROUP ELECTROVALVE GAUGE	OMN043CR054


14a	SPARE ELECTROVALVE FOR GROUP	0EC057CR000
15	CONDENSER	0CO004CR045
16	DEHYDRATING FILTER	0AA025CR000
17	COMPRESSOR R134	0MT021CR000
18	EVAPORATOR + SEPARATOR	GAC0092CR000
20	ONE-WAY VALVE M/F	0RR026CR000
22	ELECTROFAN	0EC010CR000
23	VACUUM PUMP	0MT051CR000
24	USB SOCKET	0EC063CR000
24a	PLASTIC COVER FOR USB SOCKET	0PL105CR000
25	NET FILTER A/C	0FI022CR046
26	SAFETY VALVE	0RC022CR000
27	BOTTLE LT.12	0SB013CR000
28	GENERAL SWITCH	0EC019CR000
29	17CR HOSE 3MT H/P	0TG003CR000
30	17CR HOSE 3MT L/P	0TG062CR000
31	RUBBER HOSE F/F L=60 CM	0TG010CR000
32	CHARGE CELL 80KG	GCC0001CR000
33	RAPID COUPLING 1/8F	0AA028CR000
34	14.4CR NEW OIL BOTTLE	WT14CR004
35	14.5CR USED OIL BOTTLE	WT14CR005

*Attention !! The position of the electrovalves on the manifold can vary depending on the version.


The picture shows the version until June/July 2009.


2. Manifold vers. 6/2008

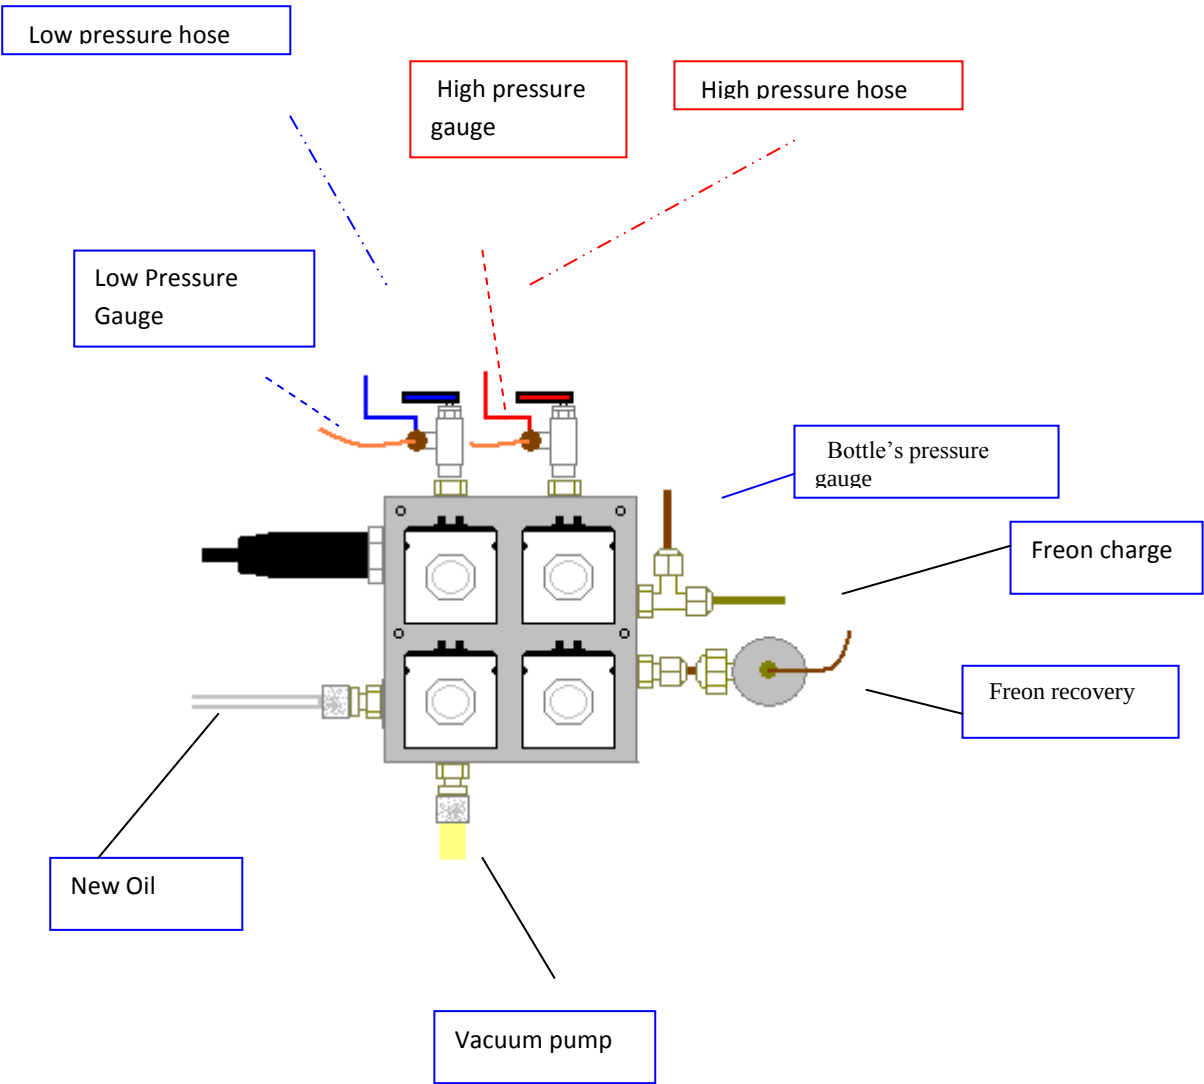

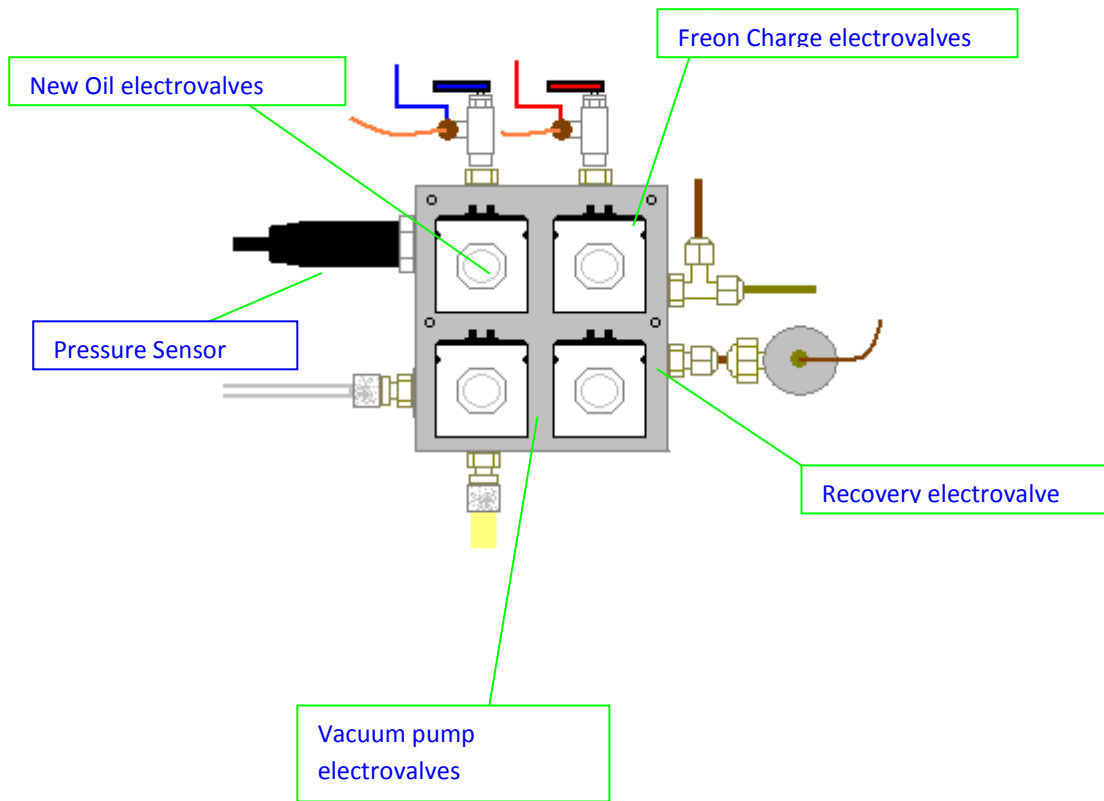


3. Manifold Ve 07/2009 with inverted EV

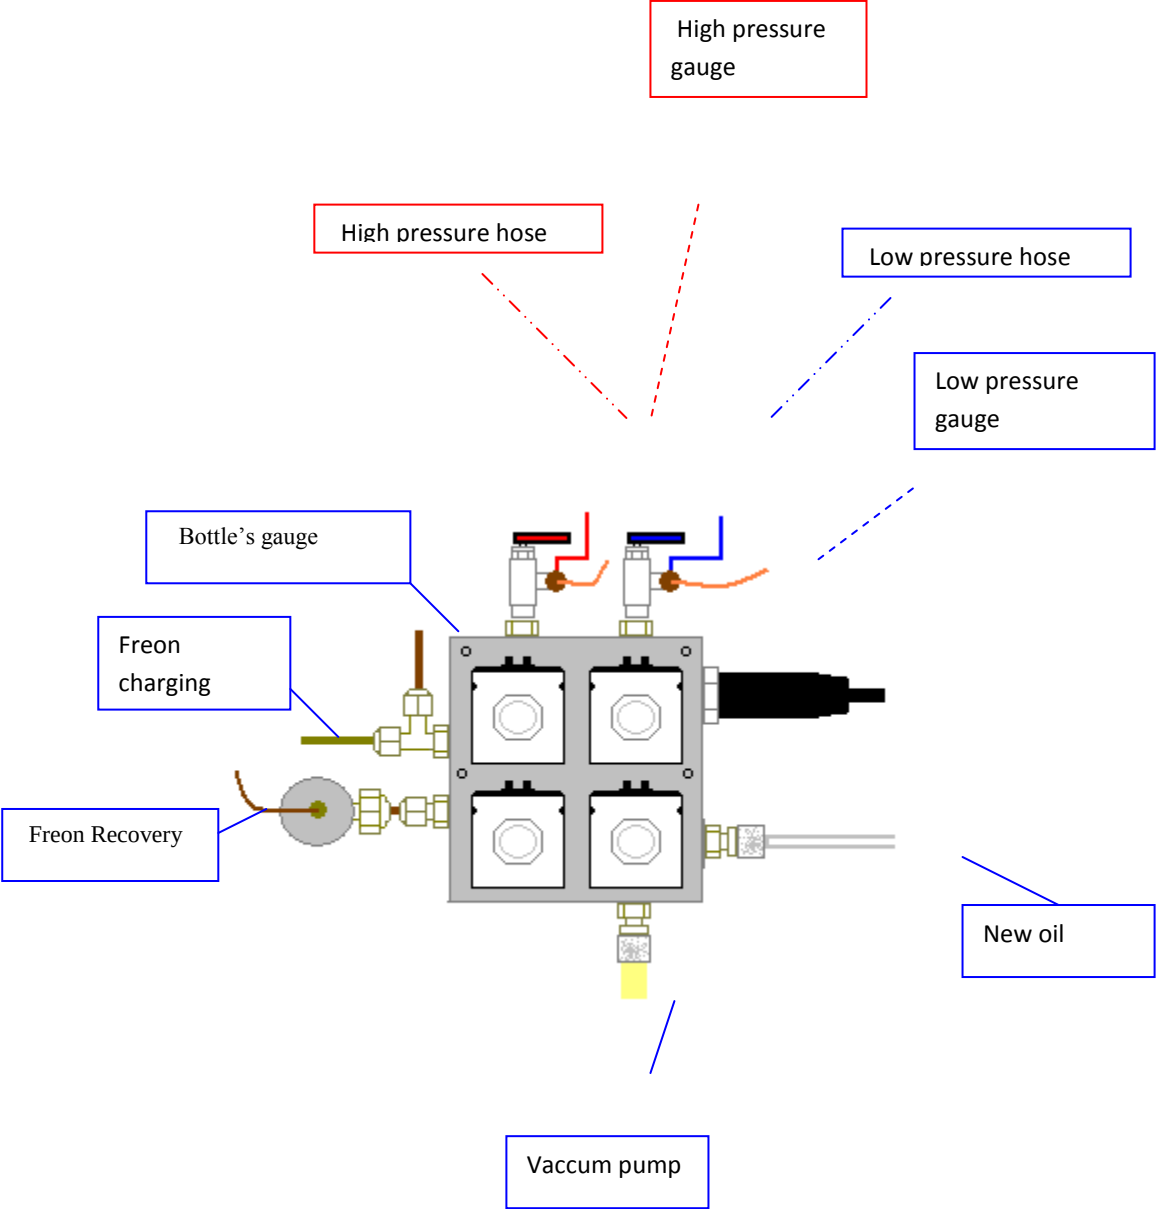


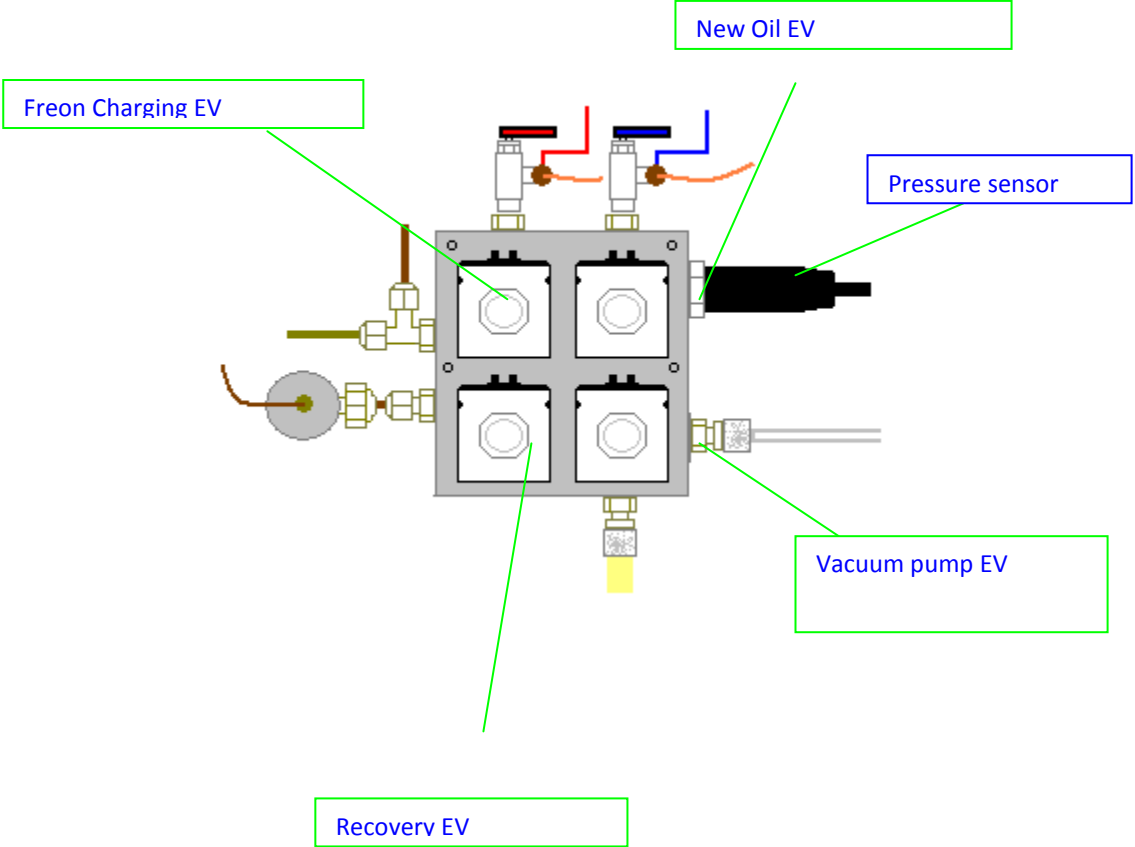


4. Version from July 2011

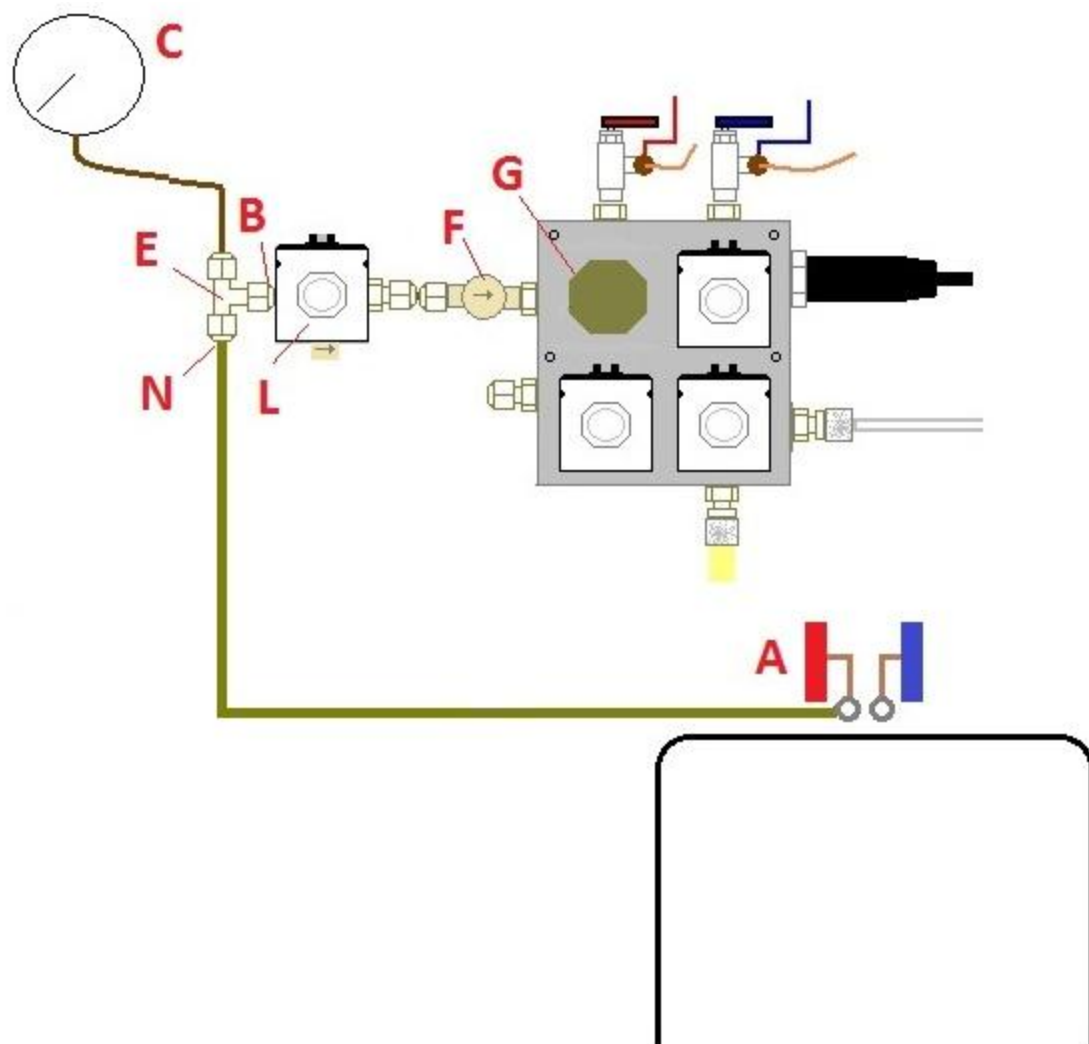

5. Power Supply Board: model with printer

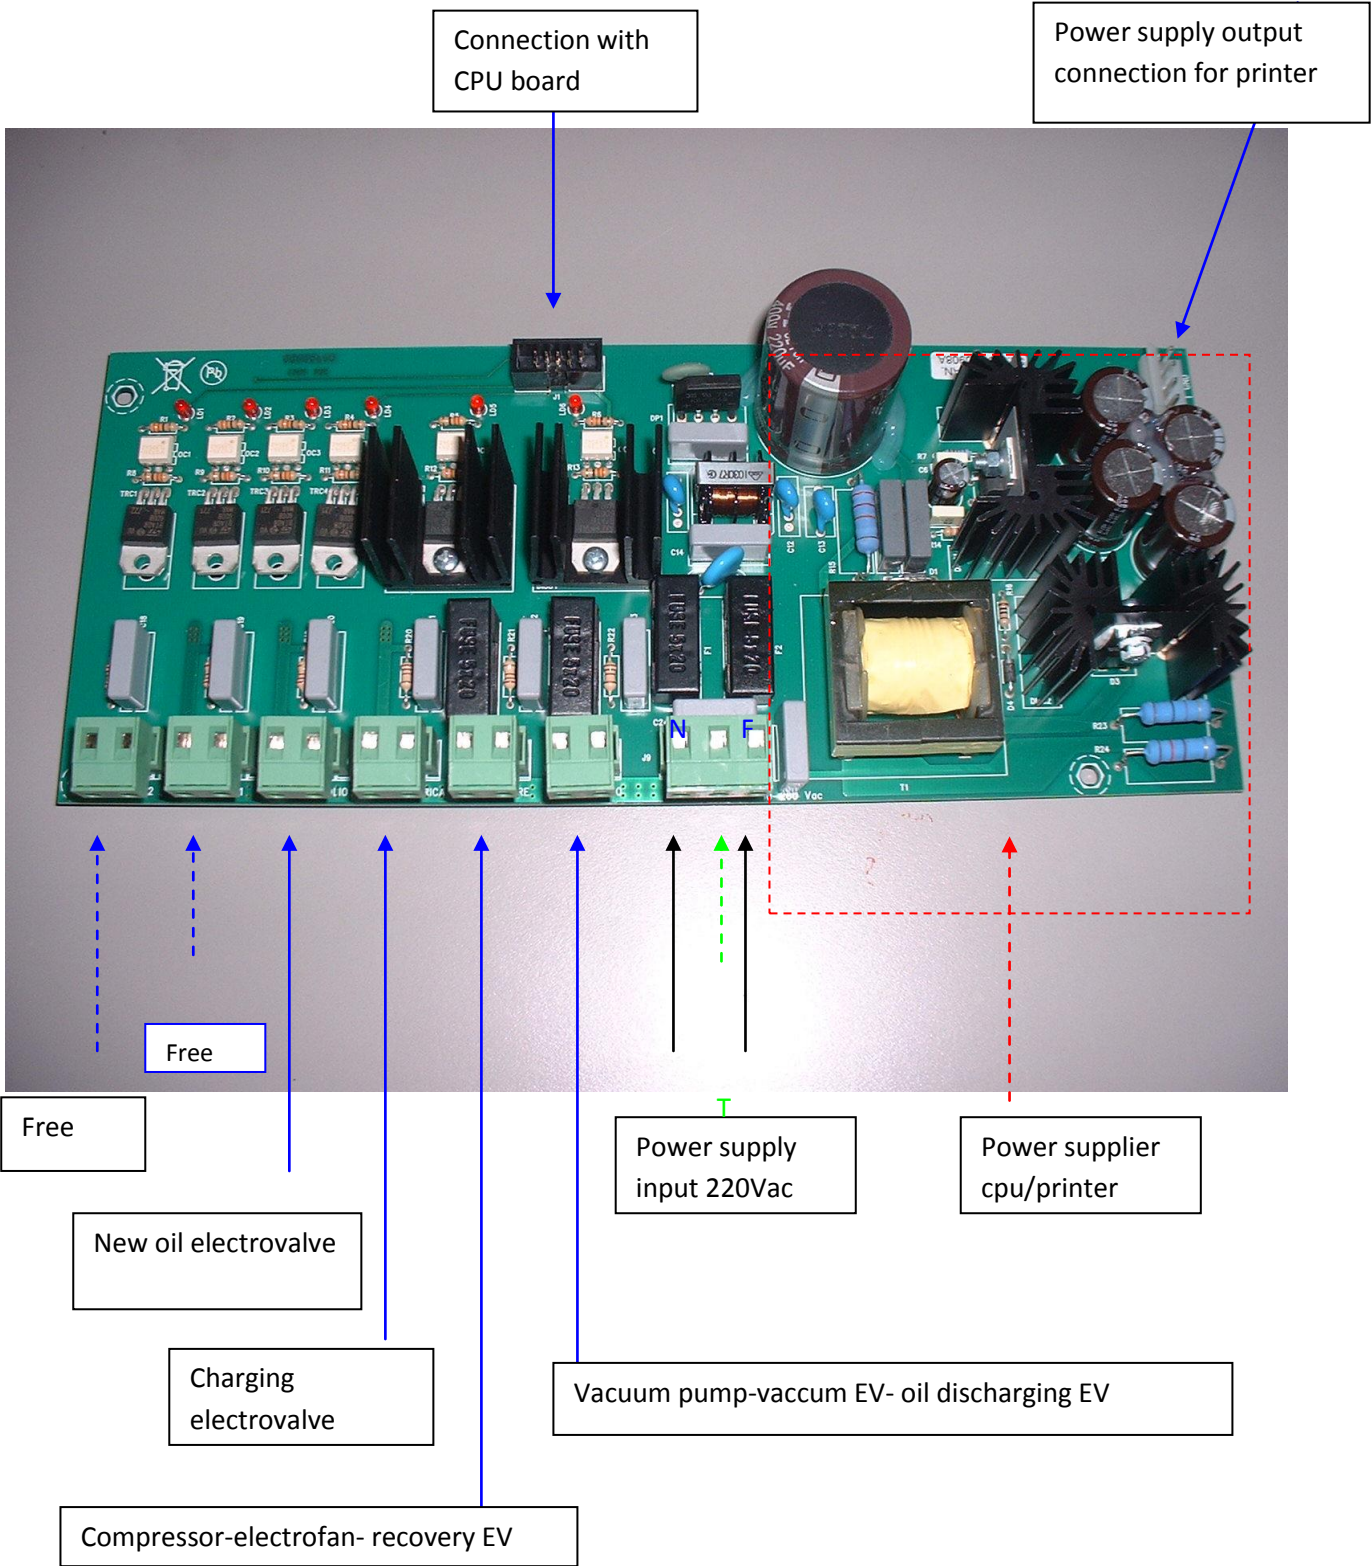

6. Power Supply Board: model without printer

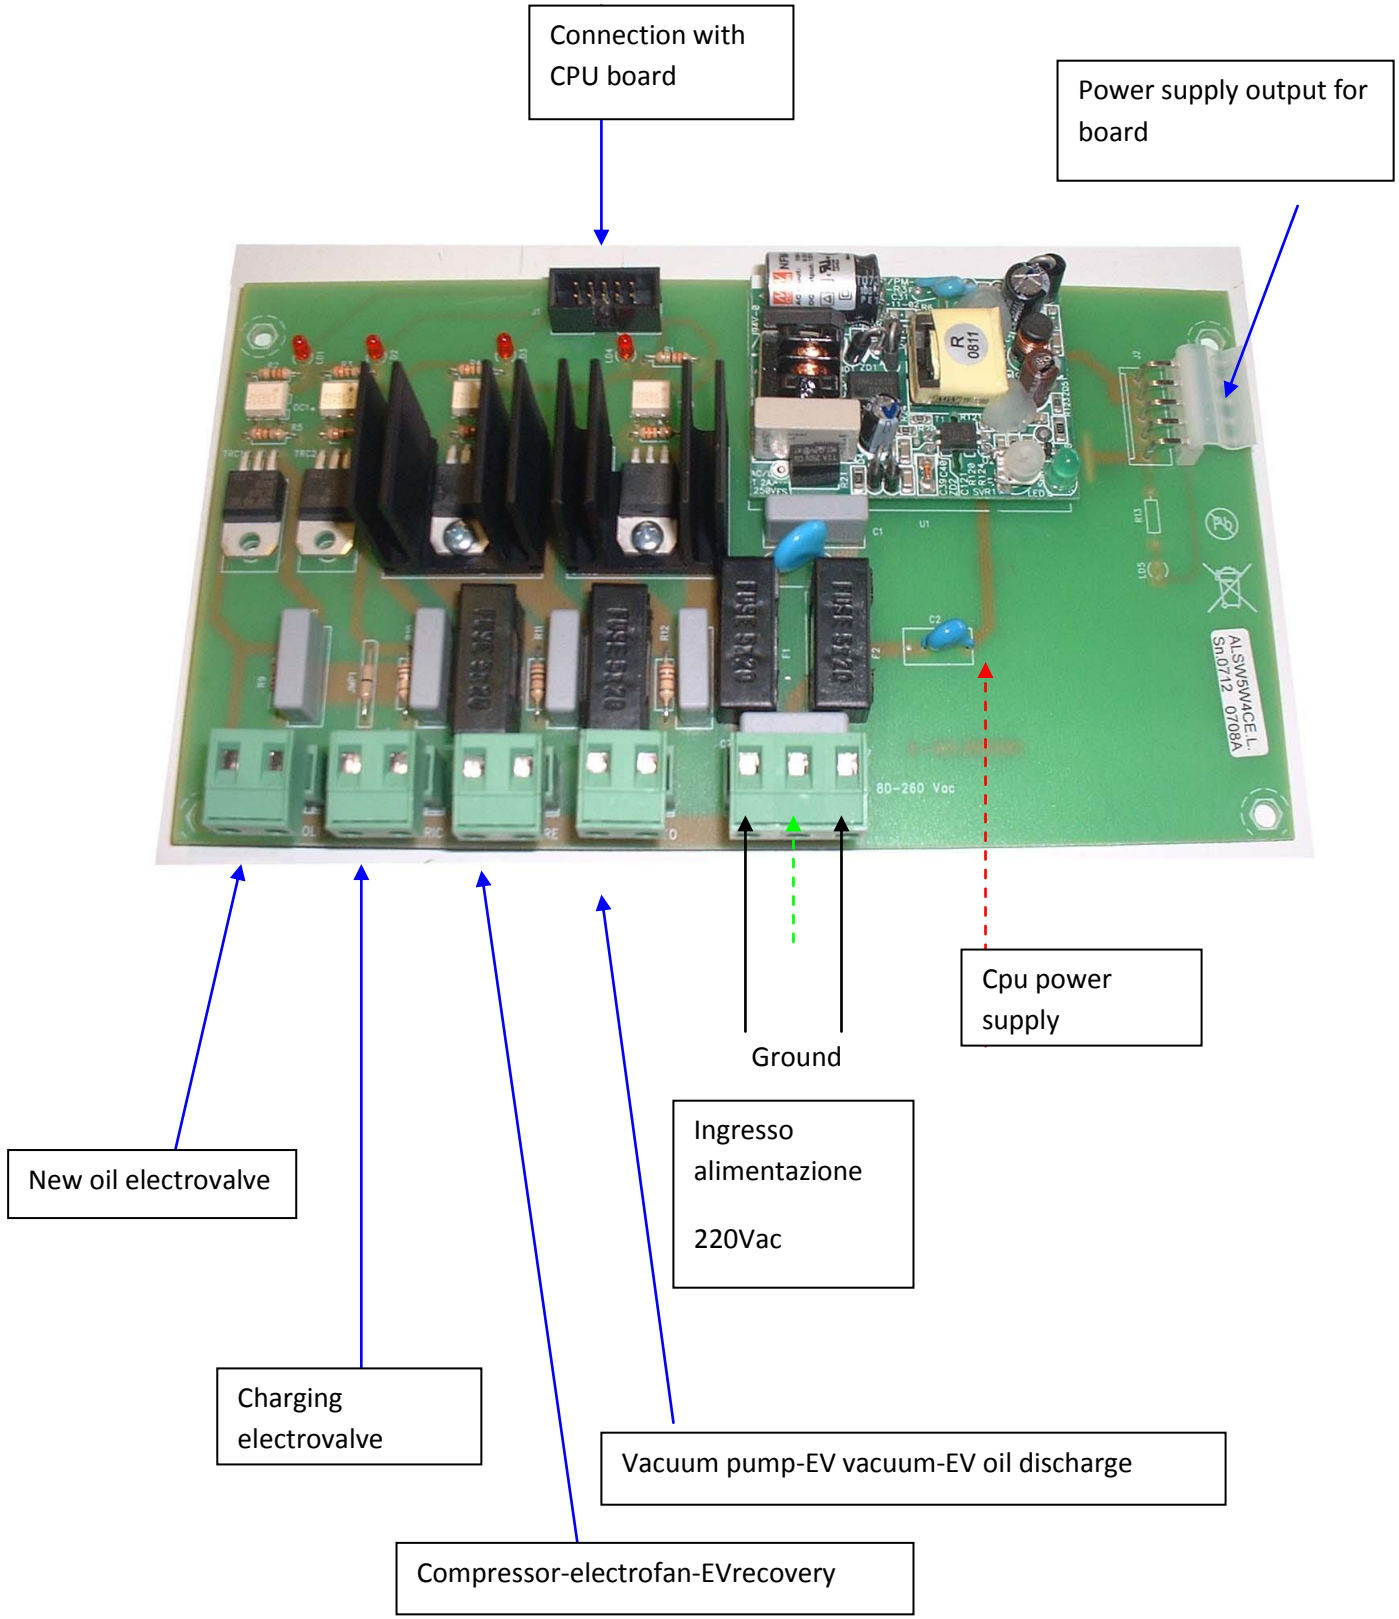

7. CPU Board

