# 210x140mm

Zhongshan Pova Baby Products Co., Ltd Add: No. 83 Tongxing West Road, DongSheng Town, Zhongshan City 528400, Guangdong, China

Mail: sales@zsjoiner.com

V1.0/2202

## **Instruction Manual** Model: SL-168



Please read the product manual carefully before assembling or using it, and keep the manual for future reference.

### CONTENT

Main part list	02
Product character	03
Function characteristics	04
Assembly process	05-1
Warning and safe notice	12
Care and maintenance	13
Common faults and handling	14

### MAIN PART LIST


- 1.Main body
- 2.Safe guard
- 3.Putter
- 4.Canopy 5.Pedal









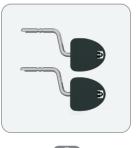

### PRODUCT CHARACTER





Putter adjustment Backrest adjustment Putter fixing button Handhold belt Second device Brake pedal


### **FUNCTION CHARACTERISTICS**

This tricycle has 7 different modes which apply to the kids grow up requirement.






seat reversed

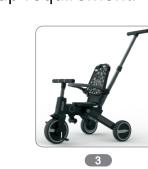

and putter

 Tricycle with backrest





and canopy

Tricycle with backrest

Tricycle with backrest

Simplified tricycle

ASSEMBLY PROCESS



Unfolding the tricycle Step-1 Lift up the backrest as the arrow.



Unfolding the tricycle Step-2 Lift up the backrest to the top.



Unfolding the 2 back

leg tubes as photo.



Unfolding the tricycle Step-3 Turn 90 degree for the backrest adjustment button as the arrow.



Unfolding the tricycle Step-7 When hear the "Ta" sound, means legs position OK, turn the second device tube as the arrow.




Unfolding the tricycle Step-4 After adjust the backrest turn button as photo.



Unfolding the tricycle Step-8

Insert the second device

tube to the right side fixing

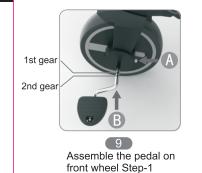

with putter




Assemble the canopy Step-2 Hold the two sides of canopy & unfold as the arrows direction per the photo.



Assemble the pedal on front wheel Step-2 The pedal has 2 gears, called 1st gear and Rotate the pedal till the pedal face right to the arrow on the cover, further insert the pedal into the 2nd gear slot, then the pedal can steer the front wheel.



When there's "Ta" sound, it's the Pull out the putter as the 1st length.Press the adjustment arrow. button and further pull out the putter to the 2nd length, then

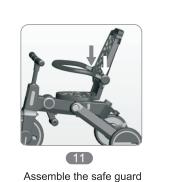

Make the safe guard to align the both sides slots and push to fix the safe



appear the shrapnel.


of canopy to both sides slots, then fix the canopy.

Assemble the canopy Step-1

Insert the two fixed holders



button and take it out.

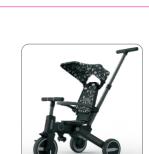

Unfolding the tricycle Step-5

One hand hold the handle tube

pull the handhold belt as the

right arrow to unfold tricycle.

as left arrow and the other hand

Assemble the putter Step-4 Putter installed finished photo, status with backrest, canopy and putter. The putter can



Folding the tricycle Step-4 Turn the second device tube to the left side of

back leg tube.



Folding the tricycle Step-1 Remove the putter to make trycycle as photo status.



Folding the tricycle Step-5 Press both sides buttons as arrow A and fold two legs as arrow B.



Folding the tricycle Step-2 Lift up the safe guard as the arrow till to the backrest side.




Folding the tricycle Step-6


Life up the handhold belt



Folding the tricycle Step-3 Press the button on the right fixing base as arrow A, then turn the second device tube to left side as arrow B.

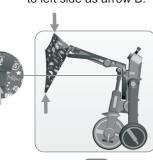

Folding the tricycle Step-7 Retract the canopy as the arrows direction.Pay attention not to let the handle & handle tube press on the seat belt

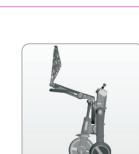

25 Folding the tricycle Step-8



Kid handle runfree function Press arrow A button and lift up the kid handle as arrow B, then the kid handle can turn free and can't steer front wheel. To reset the kid handle, turn straight the front wheel as Photo C, press the arrow

A button and press down the kid handle,

so the kid handle can steer front wheel.



Folding the tricycle Step-9 Hold the backrest and turn the button with 90 degree as the arrow, then backrest can be turned down.



Assemble the pedal on the pedal device area Step-1 Press arrow A button and insert the pedal into the hole to fix it, then assembling finished. The

side pedal.

same way to assemble the other



27 Folding the tricycle Step-10 Further fold the canopy as arrow direction.



Assemble the pedal on the


the pedals shall be removed, or else

pedal device area Step-2

it will affect the tricycle folding.



28 Folding the tricycle Step-11 Folding finished status.

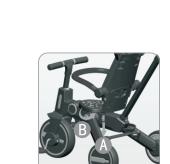


Seat reverse Step-1 Follow up the No.29 process When the young kids' legs are short, to make sure kid handle can let their feet put on the pedals. Pay attention when folding the tricycle, run free, pull down the seat

reverse push button, turn the

ASSEMBLY PROCESS

seat into 180 degree.

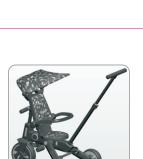

Seat reverse Step-2

Seat reverse finished

(37)

Tricycle with backrest and putter

After remove the canopy,

backrest and putter.

09

it becomes the tricycle with

status.



Brake function Step on the brake pedal to lock, lift it up to release.

(38)

Tricycle with backrest

After remove the putter, it

becomes the tricycle with



After folding the tricycle, use the handhold belt to carry it.



39 Safe guard remove Press the both sides safe guard button as arrow A, simultaneously pull upward

the safe guard as arrow B,

then remove it.

photo, Pull out the safety

belt buckle under the seat

and remove the safety belt.



**ASSEMBLY PROCESS** 

Press the both arrow A buttons and pull out the canopy holder as arrow



40 Backrest remove

Turn the button with 90 degrees as

push button as arrow B, then the

backrest can be removed.

arrow A, after that, pull the backrest




41 Backrest assemble Step-1 Insert the backrest right side holder into the hole at the right side as the arrow.



45 46 Simplified tricycle Remove the seat cushion Simultaneously press the After remove the putter, it becomes the simplified under seat buckles, then can remove the cushion. tricycle.



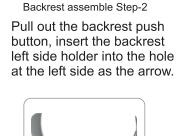





of backrest turn button to lock.



Remove the backrest cushion

screwdriver or other tools to

press the back buckle and

withdraw the buckle, then can remove the cushion.

Simultaneously use the



Simplified tricycle with putter

After remove the backrest,

it becomes the simplified

48 Safety belt usage Step-1 When the kids are young, please do use the safety belt for safety. Press button to open the safety belt.

12





Safety belt usage Step-2 The safety belt can be adjusted the length on

the upper sides.



backrest and remove the

buckle, then can remove

the safety belt.

50 51 Safety belt remove Step 1 Safety belt remove Step 2 Pull out the safety belt from Reverse the seat as the



After shorten the putter, it

can be stored into the buckle

as the arrow when tricycle

is folded.

work or unsafety.

16kgf · cm.

**WARNINGS** 

1. Do not leave children unattended while using the product. 2. The child should be instructed how to use the tricycle propertly under the supervision of the adult. 3. The product apply to children age 18-60 months. 4. The maximum safe working load is 20kg(44lbs).

5. There are small spare parts inclusive in this products, and all assembling must be done by adults. 6. Safety belt must be fastened well before the child ride on. Shoes, protective-gear and helmet should be worn when using. 7. Do not use in the dangerous areas such as rough roads, public streets, slopes, pools and seaside

surrounding to avoid accident & drowning. 8. Before use, safety inspection for the product include the hardware, joint parts, locking device or sharp edges by adult is required . Never use if any parts are missing or broken. It is compulsory to ensure that all locking devices are engaged before use or after switch mode or configuration.

9. Overloading or incorrect use, as well as to use the wrong components may cause the product can't

10. Do not use if product is unstable or damaged. 11. Before use, please peruse the instruction manual & follow up all the steps to ensure the safety of your child. Keep these instruction manual for future reference. Your child's safty would be affected if don't follow the instructions.

12. Do not hang any article on the tricycle, it will affect the stability and safety. 13. Do not let the product close to the fire. 14. Recommended torque of the fasteners of the product is greater than 8kgf · cm, and less than

- 1. Please check all components(screws and rivets) to ensure they are firm and intack without damaged before use. For the safty of your child, do not use if any irregular. 2. Avoid long-duration exposure to humid, cold, sunlight or extreme temperature environment, it will cause parts rust, aging, color change or fade, and other conditions,
- 3. Don't bleach or use the chemicals to clean the product. Use clean water to wipe the dirt. Avoid water on the metal parts so as not to rust and affect the service life of the product.
- 4. Verify regularly the status of product such as the wheels, locking device, moving parts. Repair it in time if there is any problem.

which will affect the service life of the product or causing risks.

5. Can use a little diluted lubricant on each rotating part such as wheel joints, etc. Don't use sticky lubricant to avoid debris sticking and affecting rotation.

## CARE AND MAINTENANCE