


Резьбонарезной станок

SNR/L

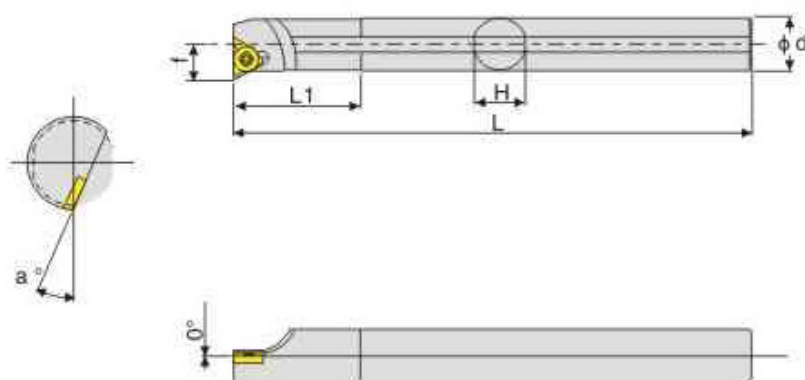

Модель		Лезвие	Применяемые условия							Детали		
			Ø Dmin	Ø D	H	L	L1	f	α°			
										Подклад-ка под резец	Винт	Гаеч-ный ключ
SNR/L	0010K11	11/NR1L□□	13	10	9	125	22	7,2	15		M2.5x6	T8
	0012M11		15	12	11	150	22	8,5	15			
	0013M16		16	16	15	150	32	10,2	17			
	0016M16	19	16	15	150	40	11,7	15	STM1603	M3.5x12	T15	
	0020Q16	24	20	19	180	40	13,7	21				
	0025R16	29	25	24	200	45	16,2	21				
	0032S16	36	32	30	250	50	19,7	15				
	0040T16	44	40	38	300	55	23,7	15				
	0050U16	54	50	48	350	60	28,7	15				