



—
INSTALLATION INSTRUCTION

Fourth pole


OTP_125FP, OTP_125MP and OTP_125FD

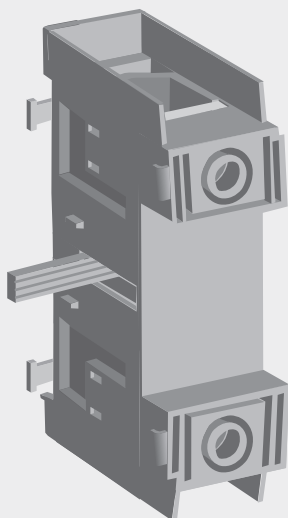


OTP_125FP

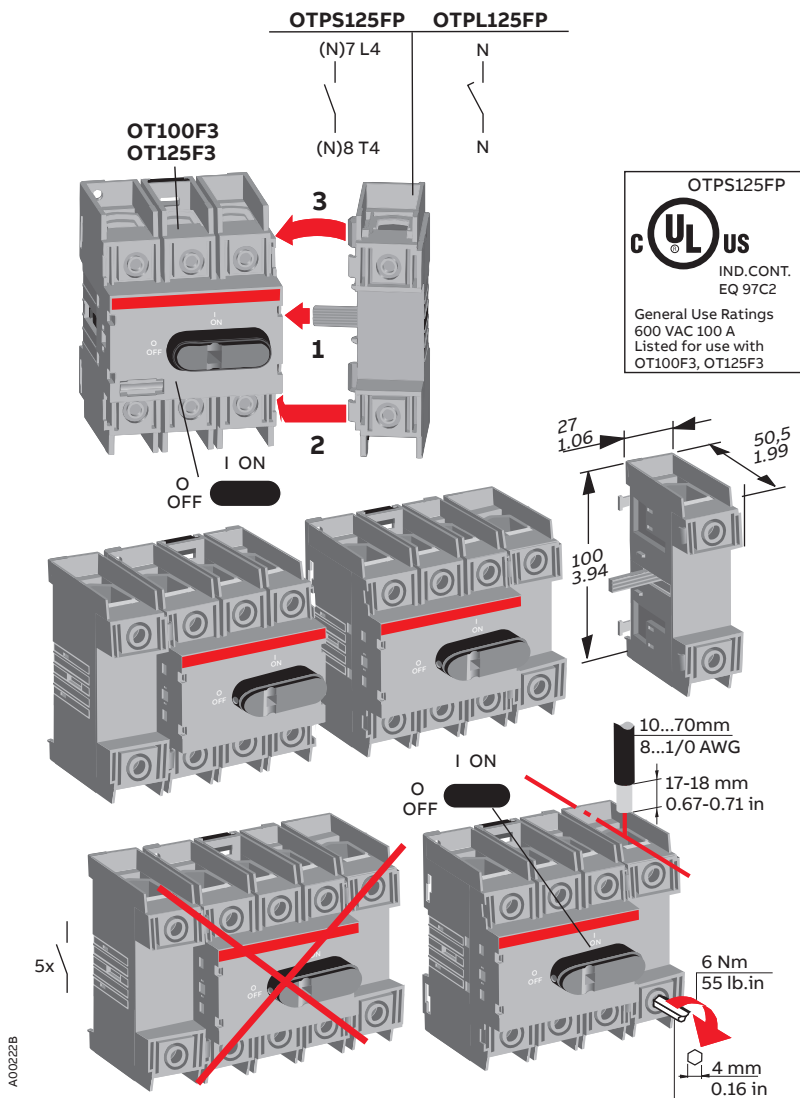

OTP_125MP

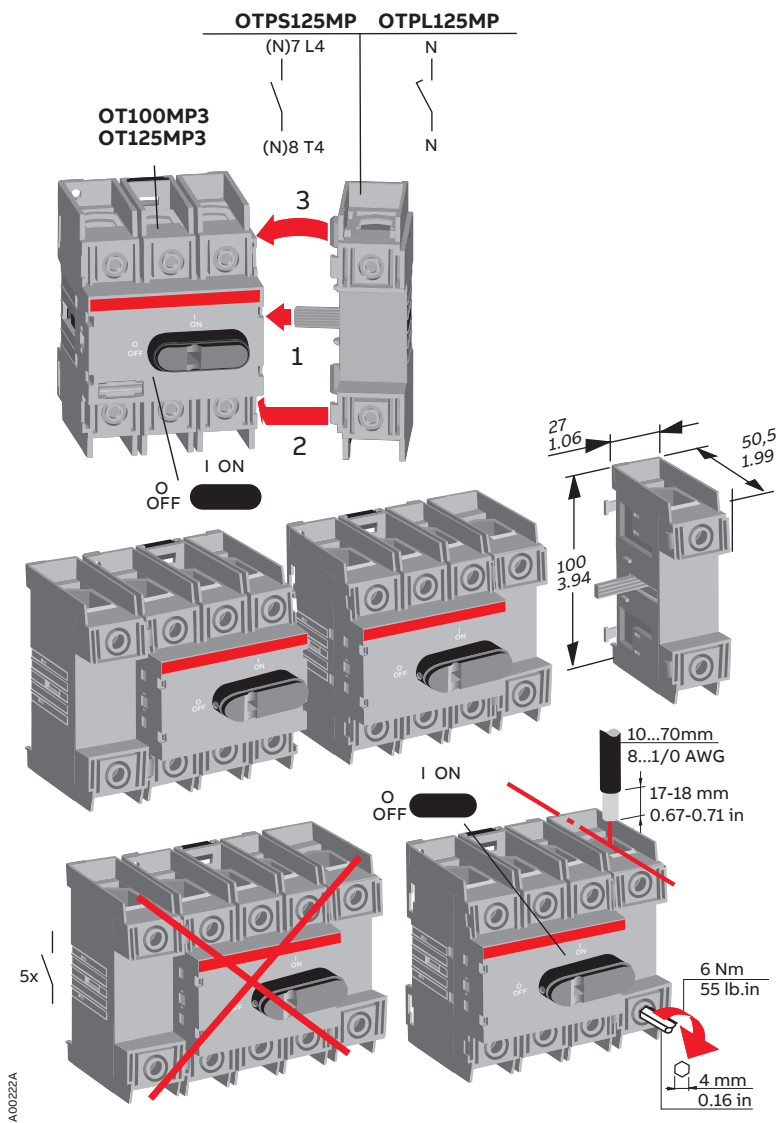

OTP_125FD

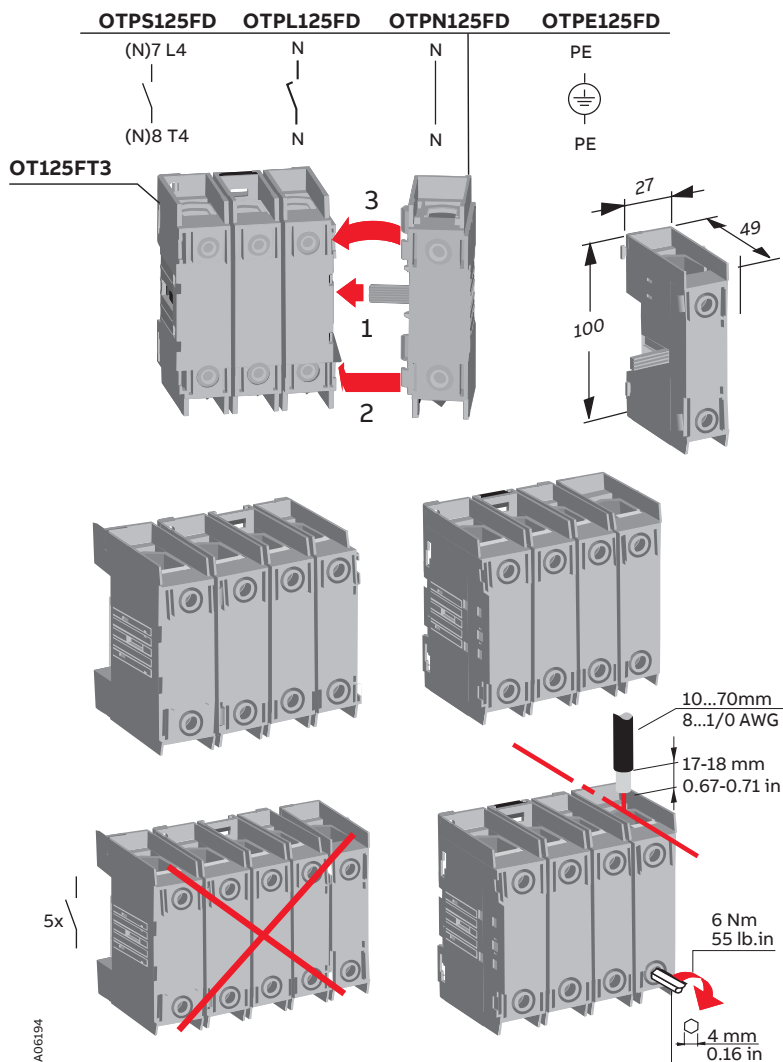



Contact us

ABB Oy

Muottitie 2A 65320

Vaasa, Finland

abb.com/lowvoltage