

Инструкция по эксплуатации

Аккумуляторный фонарь Hitachi UB 18 D

Цены на товар на сайте:

http://hitachi.vseinstrumenti.ru/electrika_i_svet/svetilniki/fonari/akkumulyatorniy_fonar_hitachi_ub_18_d/

Отзывы и обсуждения товара на сайте:

http://hitachi.vseinstrumenti.ru/electrika_i_svet/svetilniki/fonari/akkumulyatorniy_fonar_hitachi_ub_18_d/#tab-Responses



日立コードレスライト

UB 18D 取扱説明書

ご使用前に下記の説明をよく読んで正しくお使いください。

- 点灯中の豆球を直接のぞかないでください。
- 使用直後は、豆球が高温になっていますので、フロントカバーをはずさないでください。
- 豆球を交換する場合は、必ずスイッチをOFF(切)にしてください。
- 雨中では使用しないでください。
- 本体に衝撃を加えたり、分解しないでください。
- 本体にガソリン、シンナー類を付着させないでください。
- 本体を炎天下の車内のような高温(60℃以上)となりやすい場所に放置しないでください。故障の原因になります。

● 使用しないときは、スイッチを入れたままにしないでください。蓄電池の寿命(充電回数)を短くする原因になります。

使用方法

1. 蓄電池の着脱方法

装着時には、蓄電池の向きに注意して、差し込んでください。(図1)
はずすときは、ラッチを押しながら抜き取ってください。(図2)

2. ヘッド部の角度調整

ハンドル部とヘッド部を持って調節してください。(図3)
角度は、0°、30°、60°、90°、110°に調節できます。

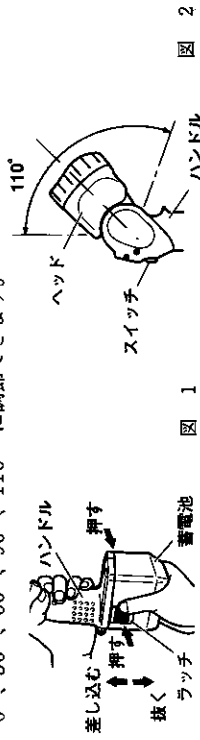


図 1

図 2

3. 豆球の交換

フロントカバーを左に回して、はずしてください。(図3)
豆球を交換してください。(図4)

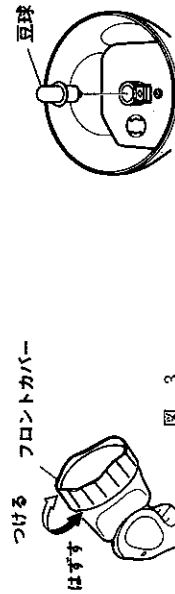


図 3

図 4

本体仕様

蓄電池	EB14、EB18シリーズ(別売)
豆球	18V、0.6A
連続使用時間	約3時間(EB18B/EB1820 満充電時)
寸法	外径85mm×252mm(蓄電池含まず)
質量	0.3kg(蓄電池含まず)

日立工機株式会社

部品コード C99512012

302

HITACHI

TORCHLIGHT UB18D

Please read the following instructions thoroughly before using this torchlight, and use it correctly.


CAUTION

- Do not look at the light directly.
- Do not open the front cover immediately after using the torchlight because the bulb is very hot.
- Be sure to turn the switch OFF before replacing the bulb or when not using.
- Do not expose the torchlight to rain.
- Do not shock or disassemble the torchlight.
- Do not allow the torchlight to contact gasoline, thinner etc.
- Do not leave the torchlight in a car or the like that tends to be exposed to be searching heat of the sun (above 60°C). Otherwise, troubles can result.

SPECIFICATIONS

Battery	EB14, EB18 series (sold separately)
Bulb	18 V, 0.6 A
Operating time	Approx. 3 hours (Using full charged EB18B/EB1820 battery) Approx. 4.5 hours (Using full charged EB1830H battery)
Dimensions (without battery)	85 mm (diameter) × 252 mm (length)
Weight (without battery)	0.3 kg

HOW TO USE

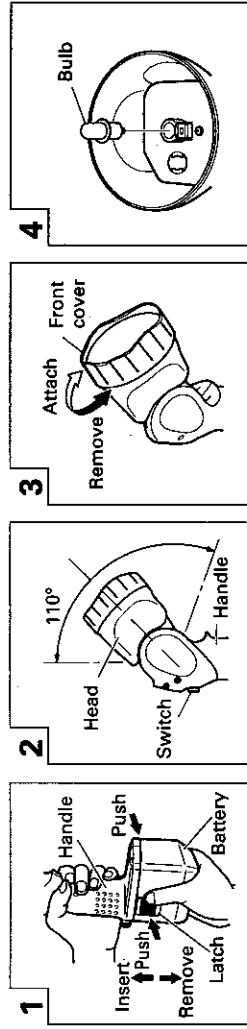

1. BATTERY INSERT/REMOVAL

Correctly insert the battery into the torchlight (Fig. 1)
Pressing on the latch, remove the battery from the torchlight. (Fig. 1)

2. HEAD ANGLE ADJUSTMENT

Adjusting the lighting angle, hold the handle then adjust the head angle.
It can be adjusted at 0°, 30°, 60°, 90° and 110°. (Fig. 2)

3. BULB REPLACEMENT

- (1) Remove the front cover. (Fig. 3)
- (2) Replace the bulb. (Fig. 4)

Hitachi Koki Co., Ltd.

Code No. C99512012