


YATO



PL STOJAK LAKIERNICZY ROZSTAWNY
GB WORK BENCH

YT-5555

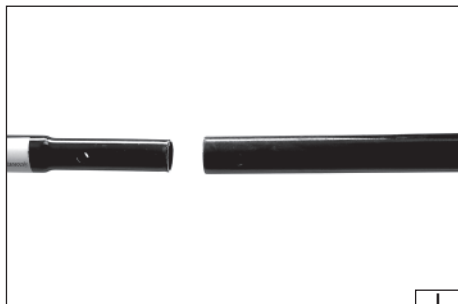

PARAMETRY

Najniższe położenie:

- obciążenie maksymalne: 10 kg
- szerokość: 85 cm
- wysokość: 50 cm

Najwyższe położenie:

- obciążenie maksymalne: 150 kg
- szerokość: 45 cm
- wysokość: 100 cm

Stojak zawsze ustawiać na płaskiej, twardej i równej powierzchni. Nie przekraczać maksymalnego obciążenia stojaka. Zawsze zaczeplać oba łańcuszki zabezpieczające. Łańcuszki zaczeplać wykorzystując tę samą liczbę ogniw w każdym. Nie kłaść na stojak gorących przedmiotów.

Przed położeniem jakiegokolwiek przedmiotu na stojak, sprawdzić czy będzie zapewniony swobodny dostęp do położonego przedmiotu. Nie przestawiać obciążonego stojaka.

Po zakończonej pracy wyczyścić stojak za pomocą miękkiej szmatki. Przechowywać w suchym pomieszczeniu, zabezpieczonym przed dostępem osób postronnych, zwłaszcza dzieci.

GB**PARAMETERS**

Lowest position:

- maximum load: 10 kg
- width: 85 cm
- height: 50 cm

Highest position:

- maximum load: 150 kg
- width: 45 cm
- height: 100 cm

Set up the work bench on flat, hard and even surface. Do not overload the work bench. Always use both chains to secure the work bench. Do not put hot items on the work bench.

Before put any item on the work bench, be sure you have the free access to the item.

Do not move under loaded work bench.

After work clean the work bench with soft cloth. Store the work bench in dry place with secured access of bystanders. Keep reach out of children.