



## Thule XT Kit 3155

# > Instructions

**CITROËN** Dispatch, 4-dr Van, 16-

**CITROËN** Jumpy, 4-dr Van, 16-

**CITROËN** SpaceTourer, 5-dr Bus, 16-




**PEUGEOT** Expert, 4-dr Van, 16-

**PEUGEOT** Traveller, 5-dr Bus, 16-

**TOYOTA** ProAce, 4-dr Van, 16-

**TOYOTA** ProAce Verso, 5-dr Bus, 16-

**This kit is only for vehicles with fixpoint mounting.**

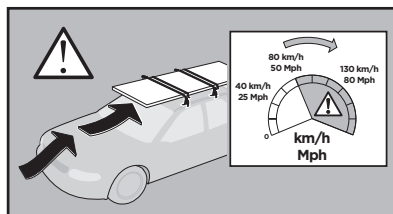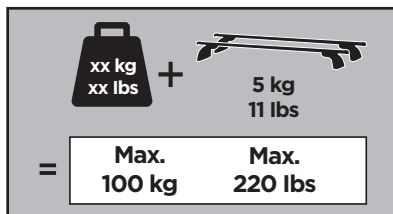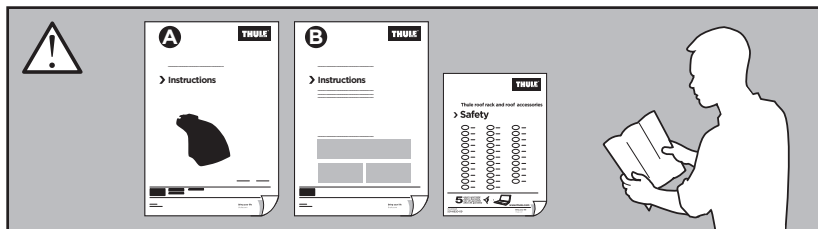


ISO 11154-E

183155

C.20190319  
509-3155-02

Bring your life  
thule.com

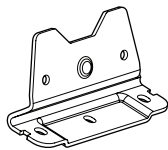

◀ 07 x4




x4


31310



x4



x1

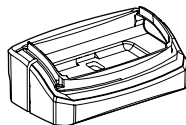

◀ 16 x4

52821



x4




x1

**A**




x8



x1

**1**

**07**




**16**



**16**



**07**



**07**




**16**








**16**




**07**




2


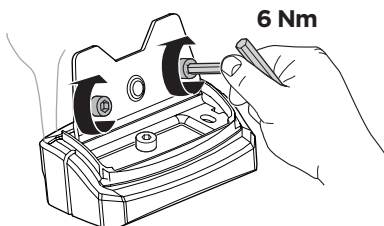
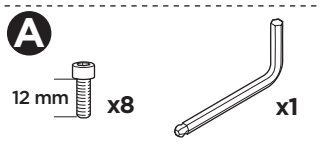
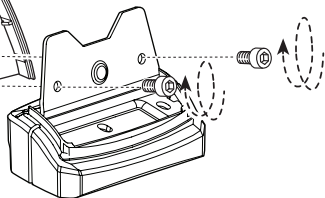
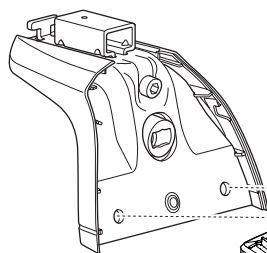
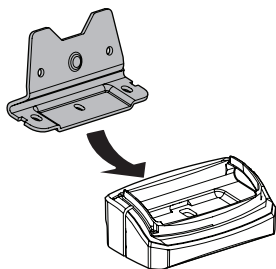


3



x1

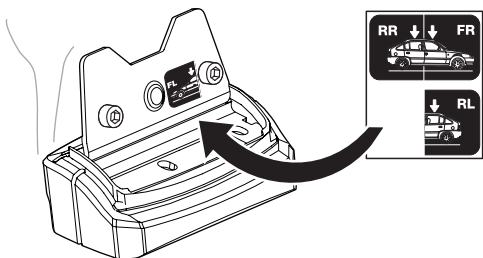

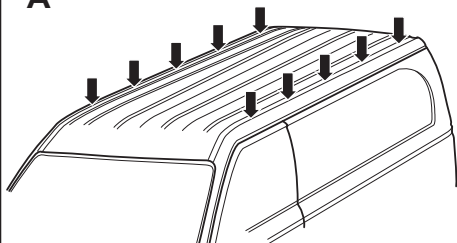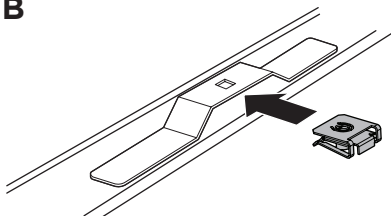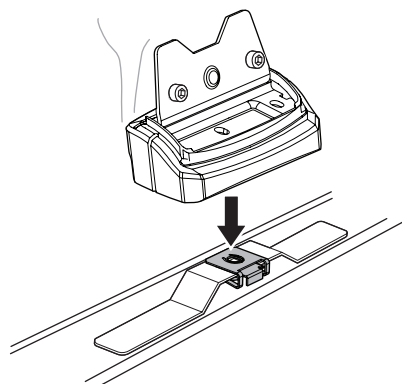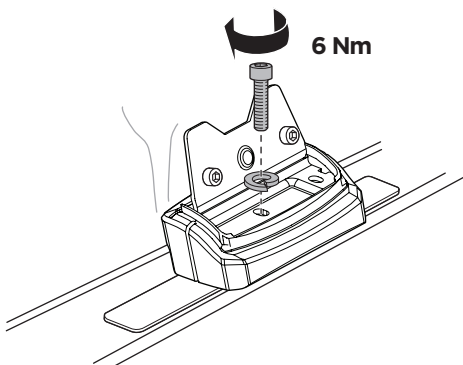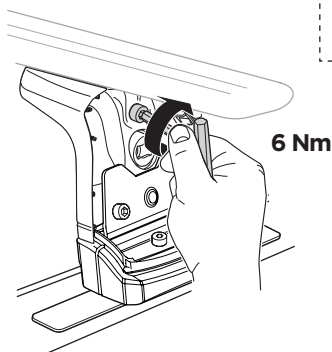**4****x4****A****A****B****C****D****5****A**