



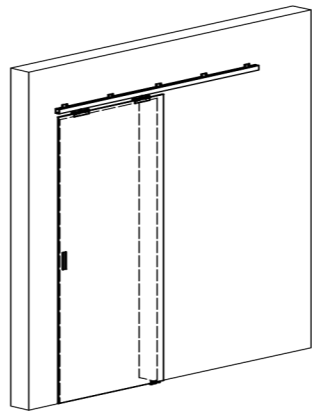


www.valcomp.pl

ГЕРКУЛЕС ГЛАСС


1 створка

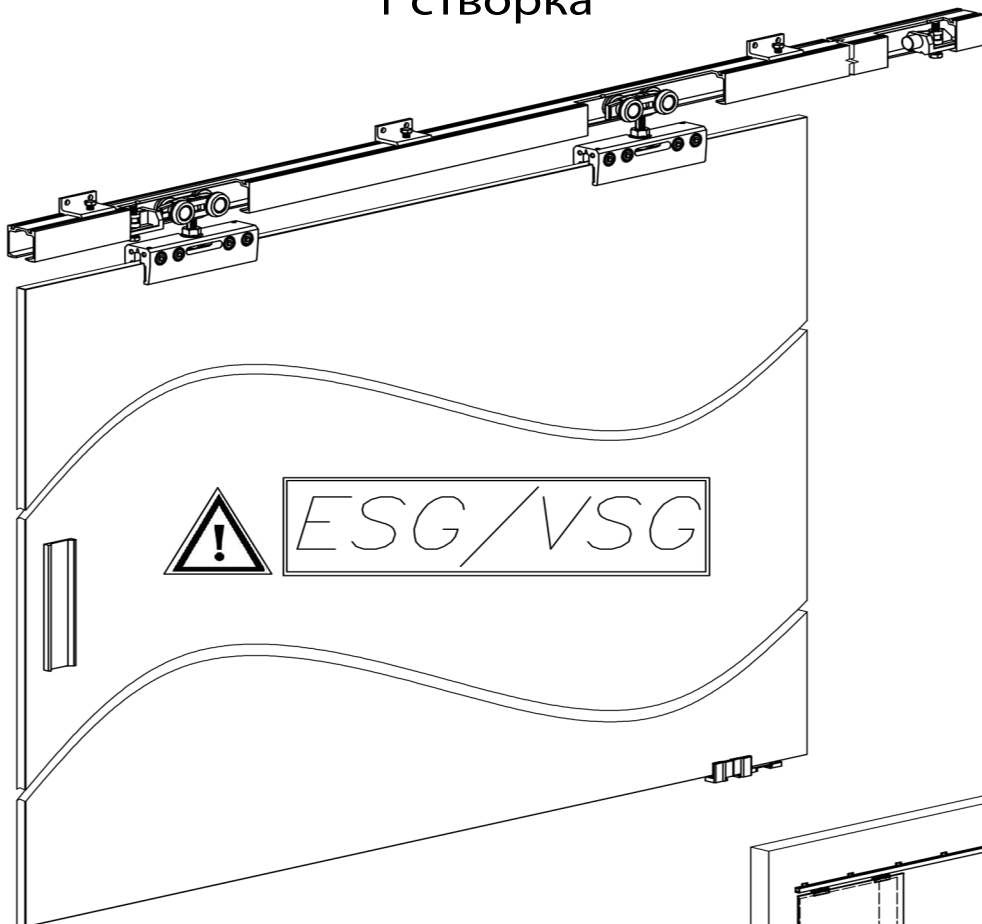

3D

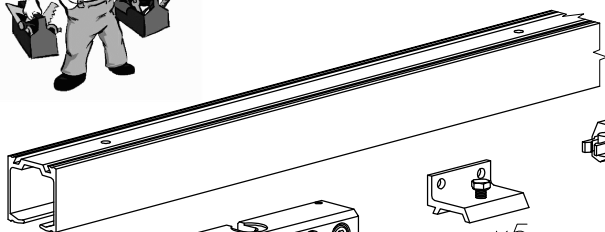


x1

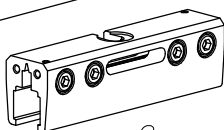

x2



x5




x1




x1




x2

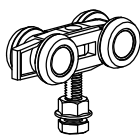

x2




x1

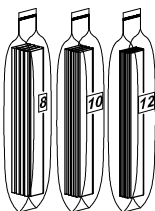

x1

x1

x1



x1



x1



Ø4x30
x10





Ø8x32
x10



Ø4x16
x7



$$L = 2 \times L_0 + 40 \text{ mm}$$

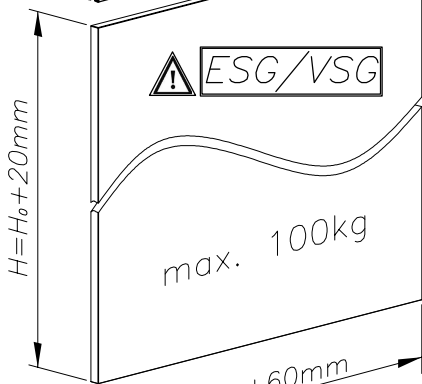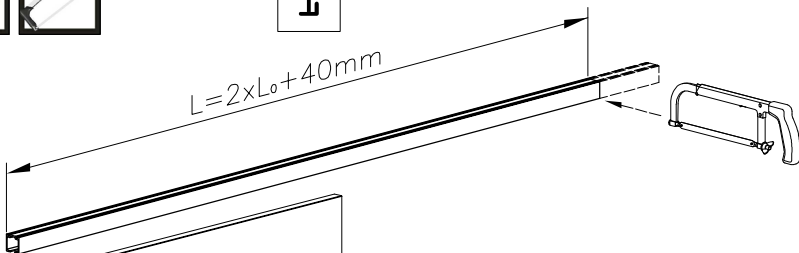


$$H = H_0 + 20 \text{ mm}$$

! ESG/VSG

max. 100kg




$$D = L_0 + 60 \text{ mm}$$

$$8 \div 12 \text{ mm}$$

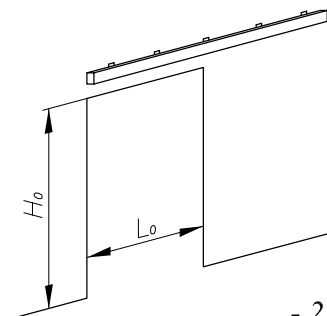





$$H_0$$





$$L_0$$

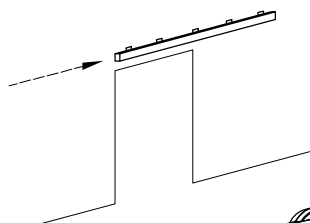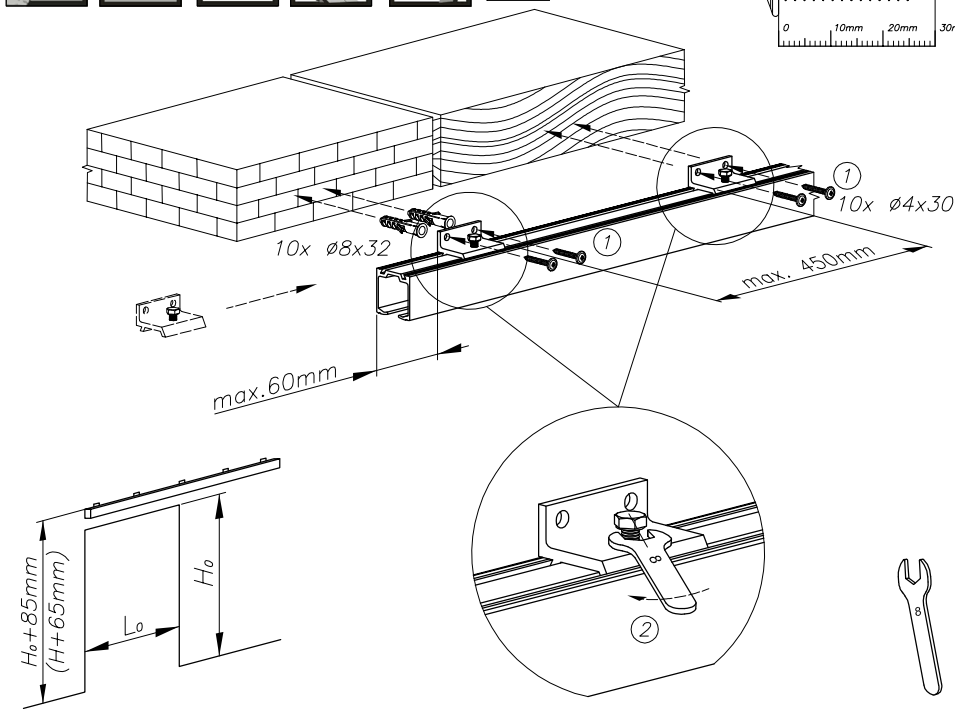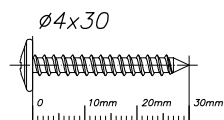

3

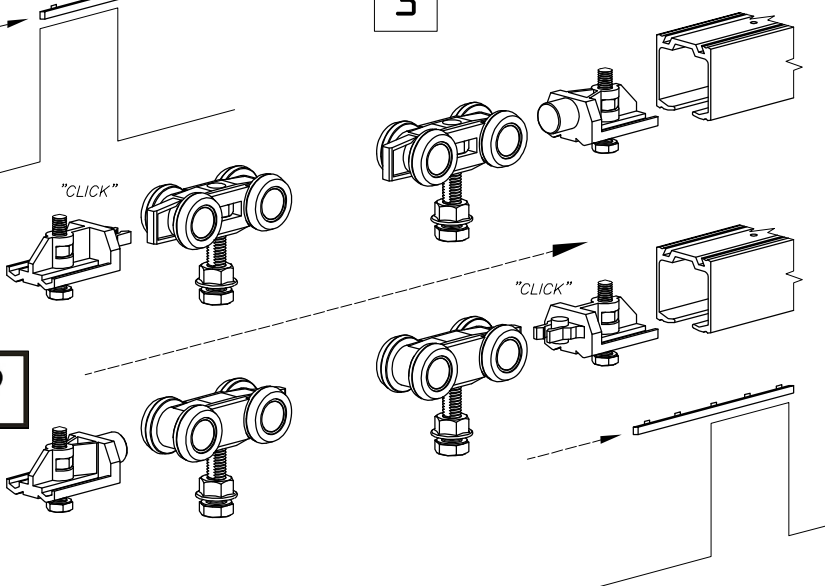

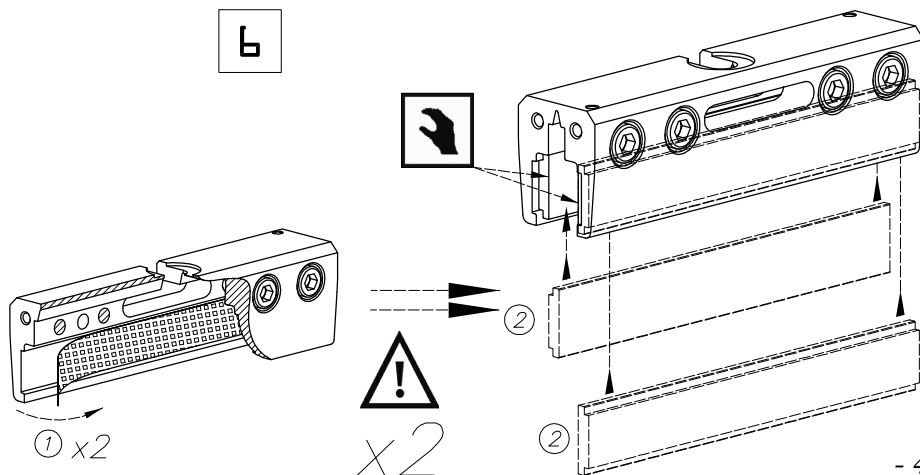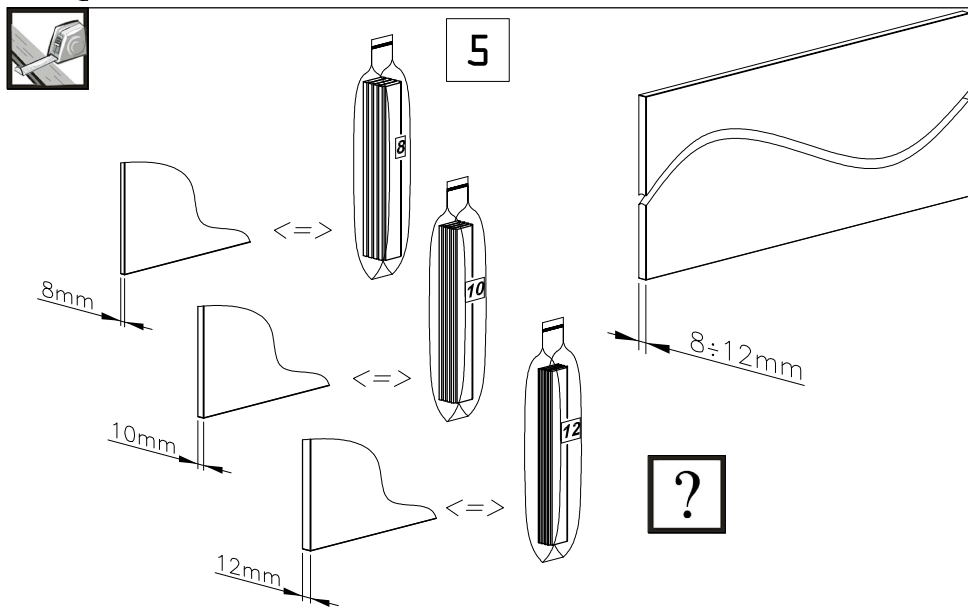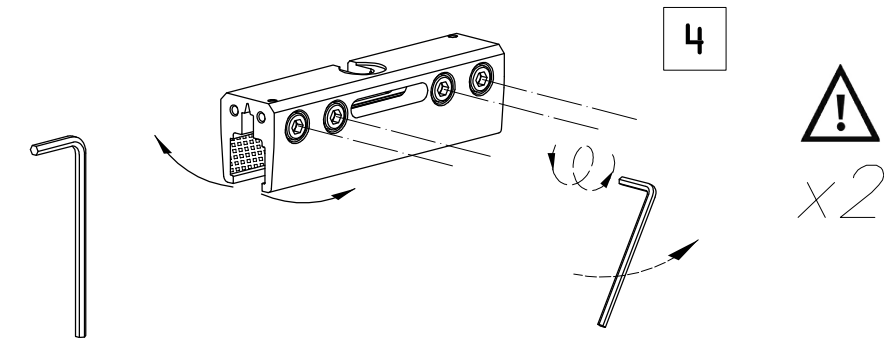

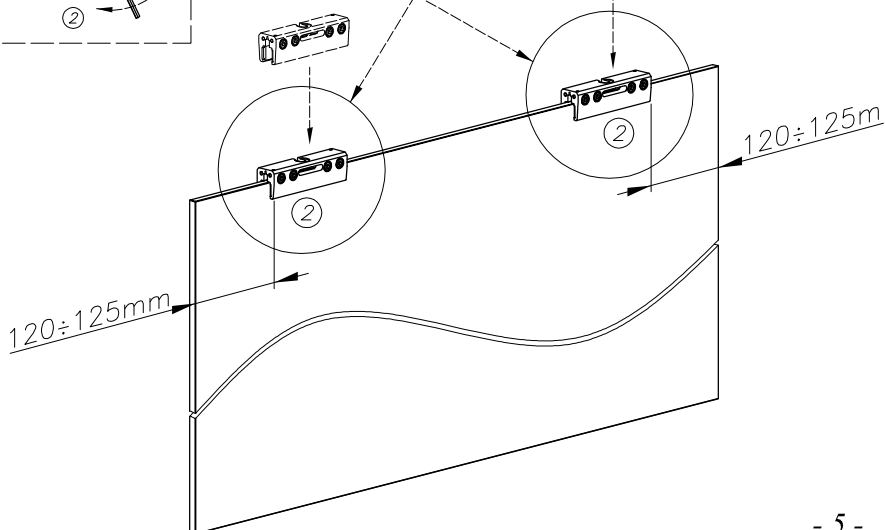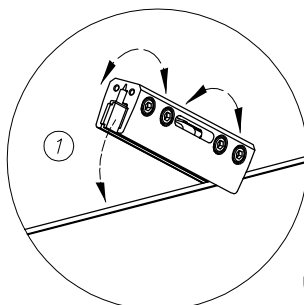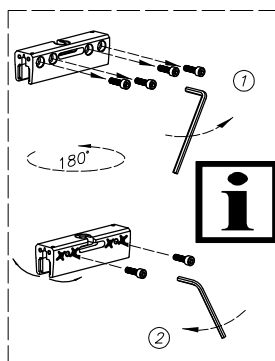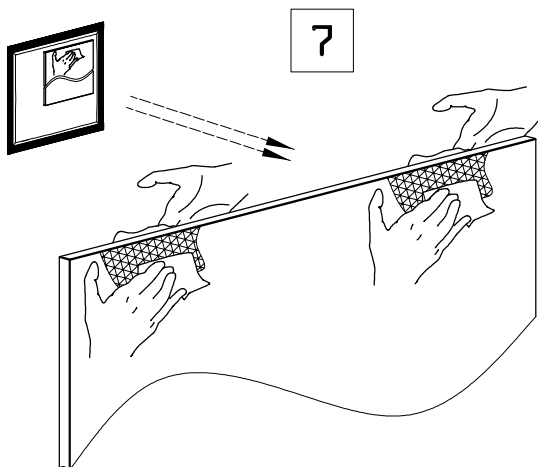





9



~1kg

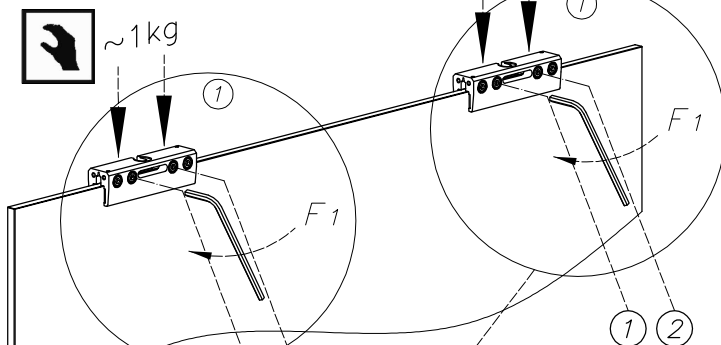


~1kg

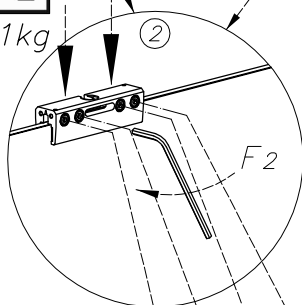

$$F_2 > F_1$$



3 1 2 4

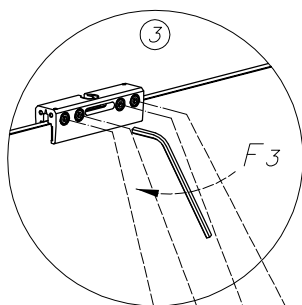

$$F_3 = 26 \text{ Nm}$$







3 1 2 4







12

OK OK

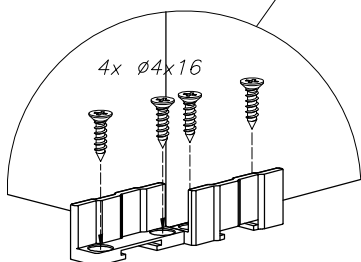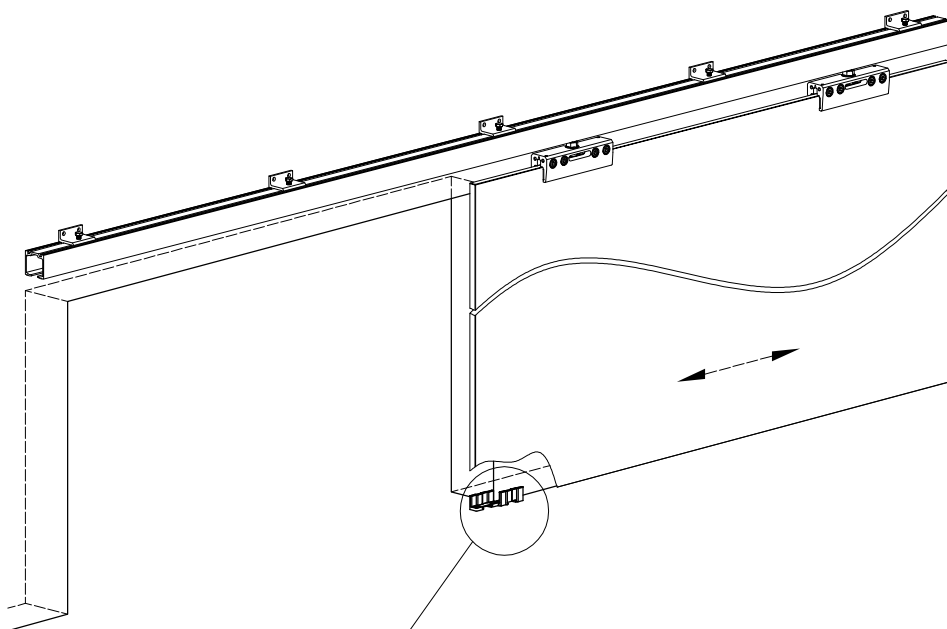

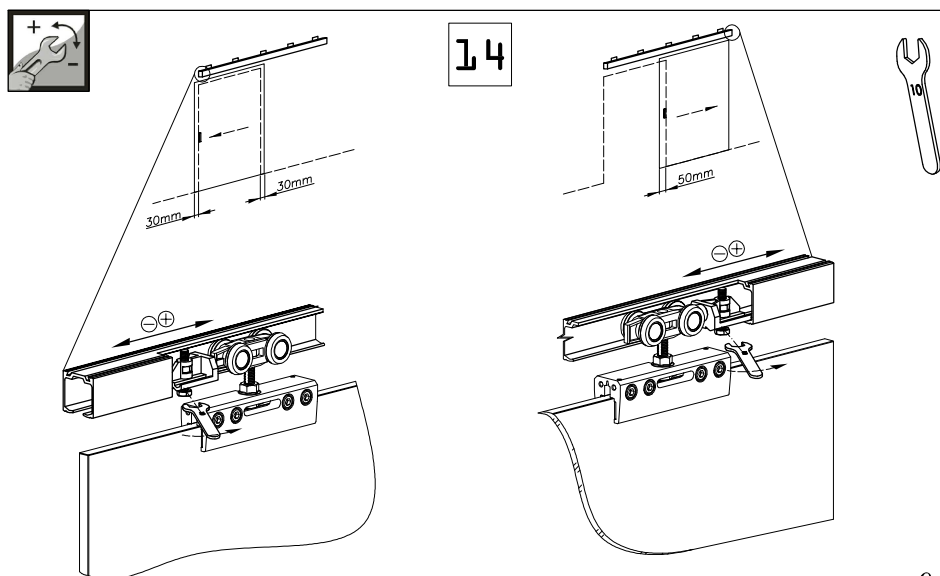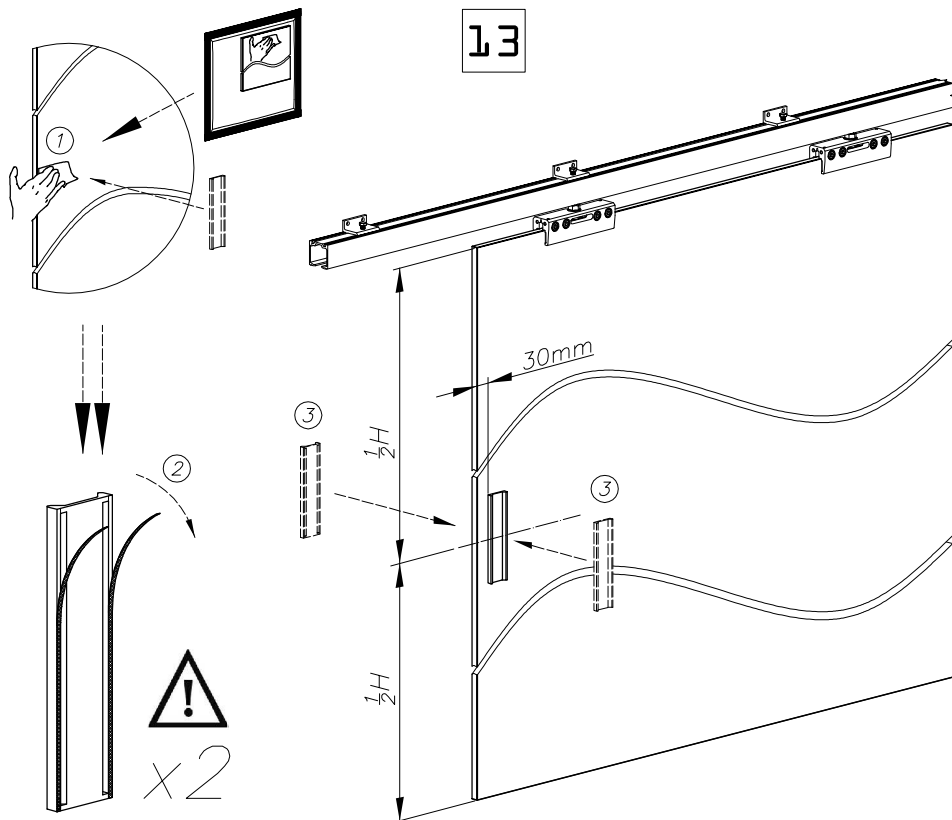




4,8x10mm
x1




4,8x13mm
x1




6,9x4mm
x1

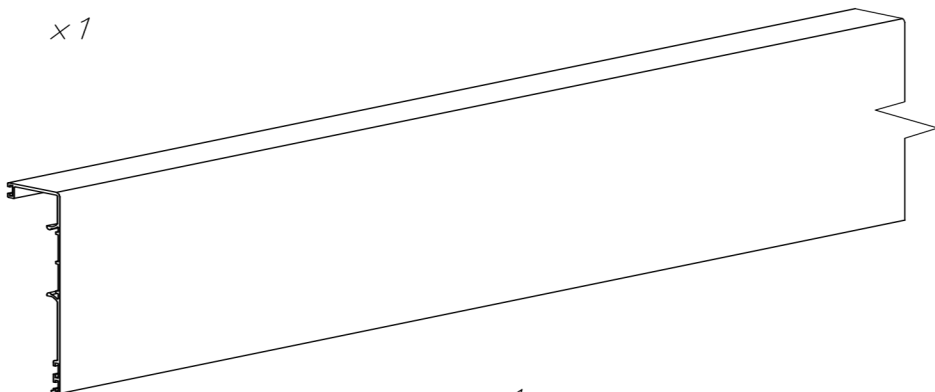


x1





x1



x1

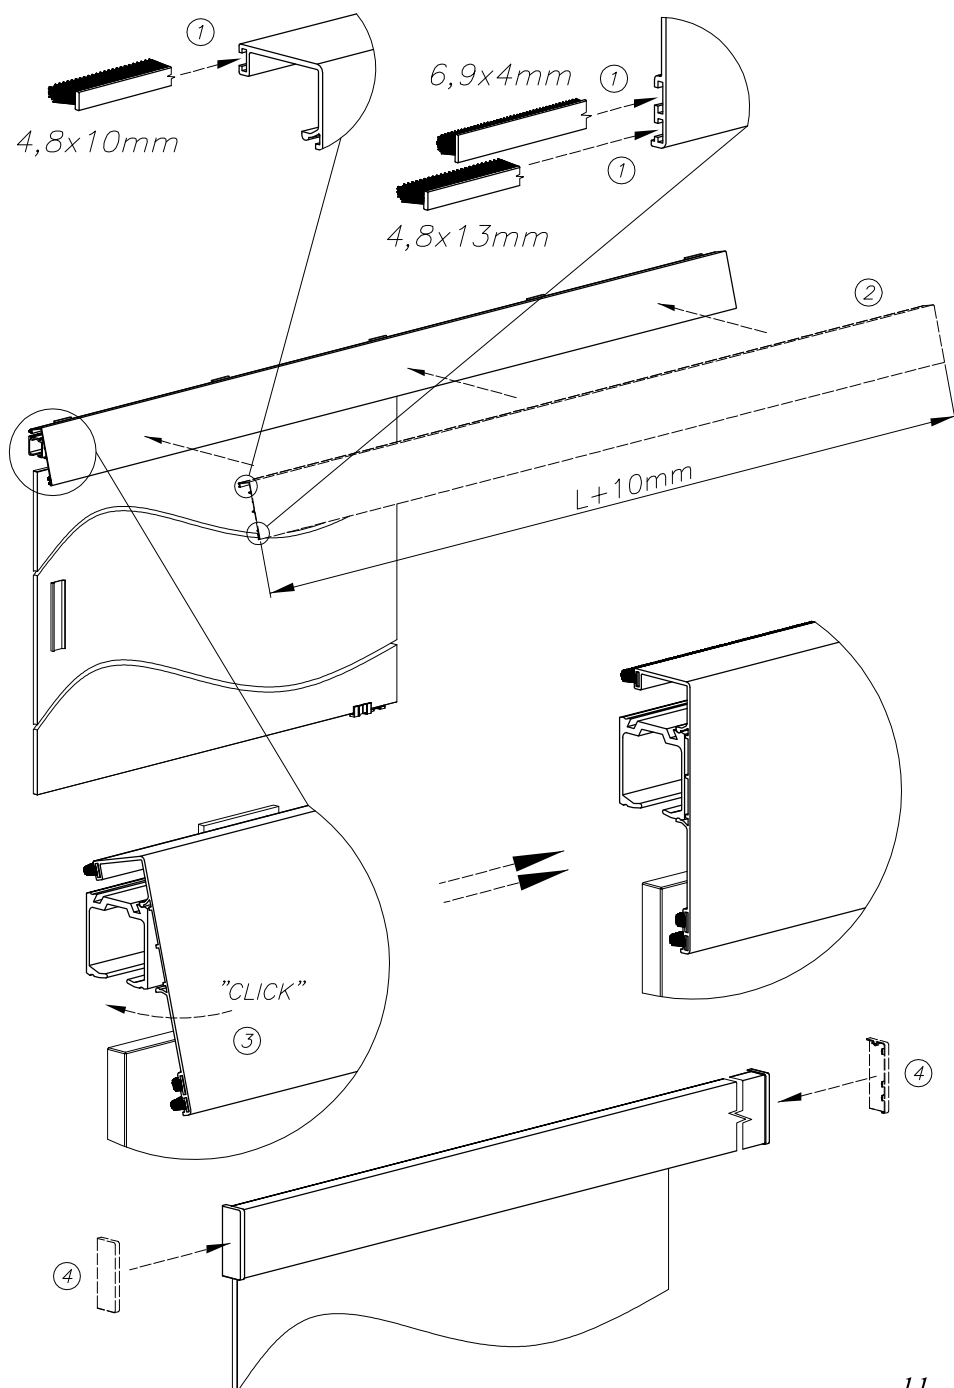

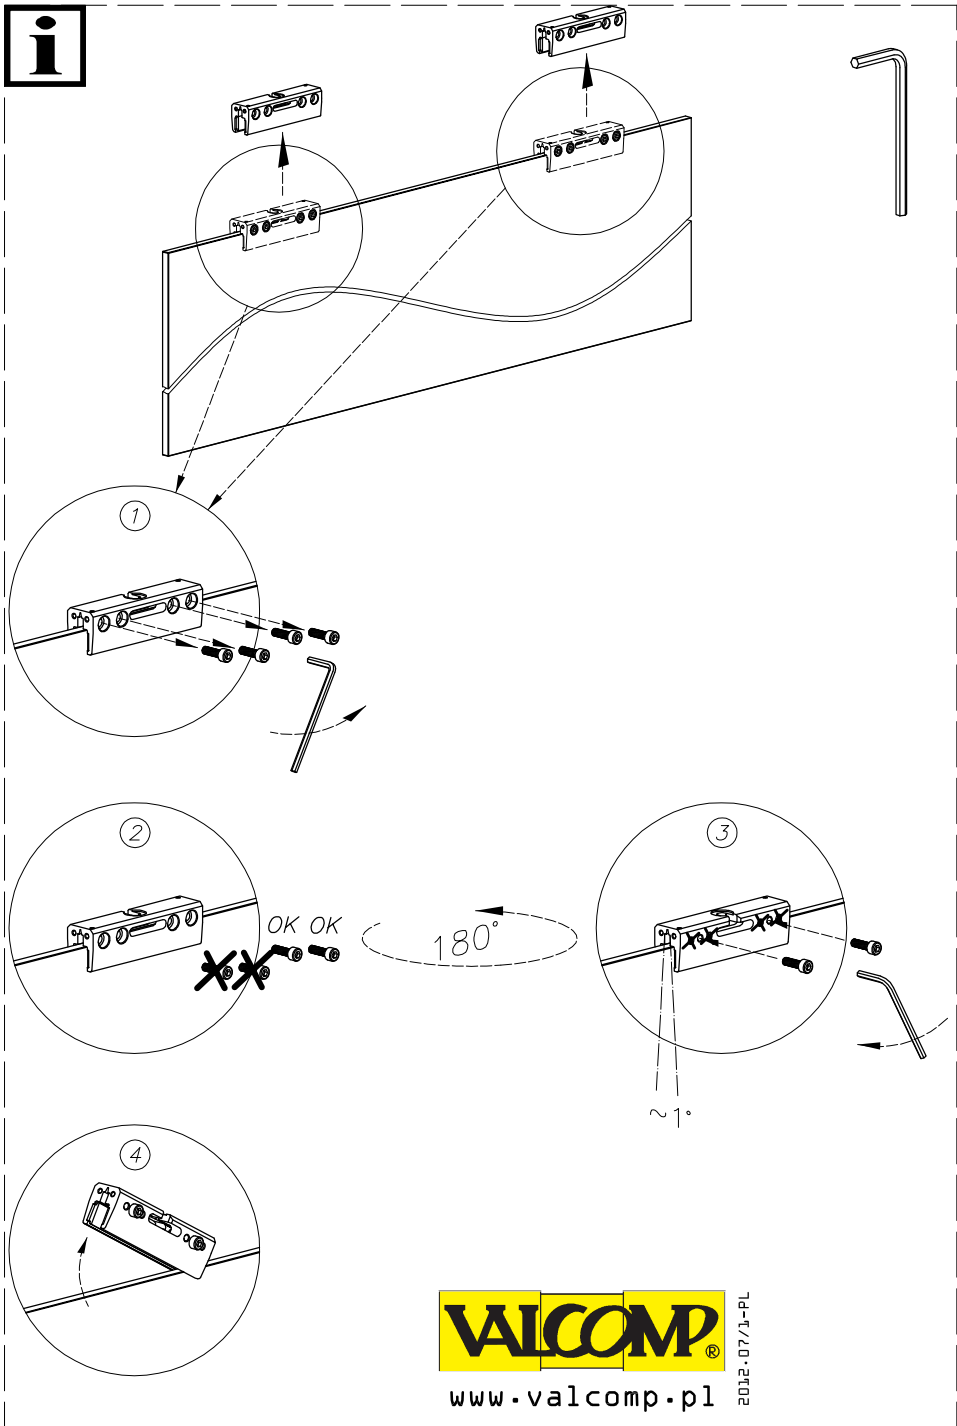


2012.07/1-PL



www.valcomp.pl

ГЕРКУЛЕС ГЛАСС

2 створки

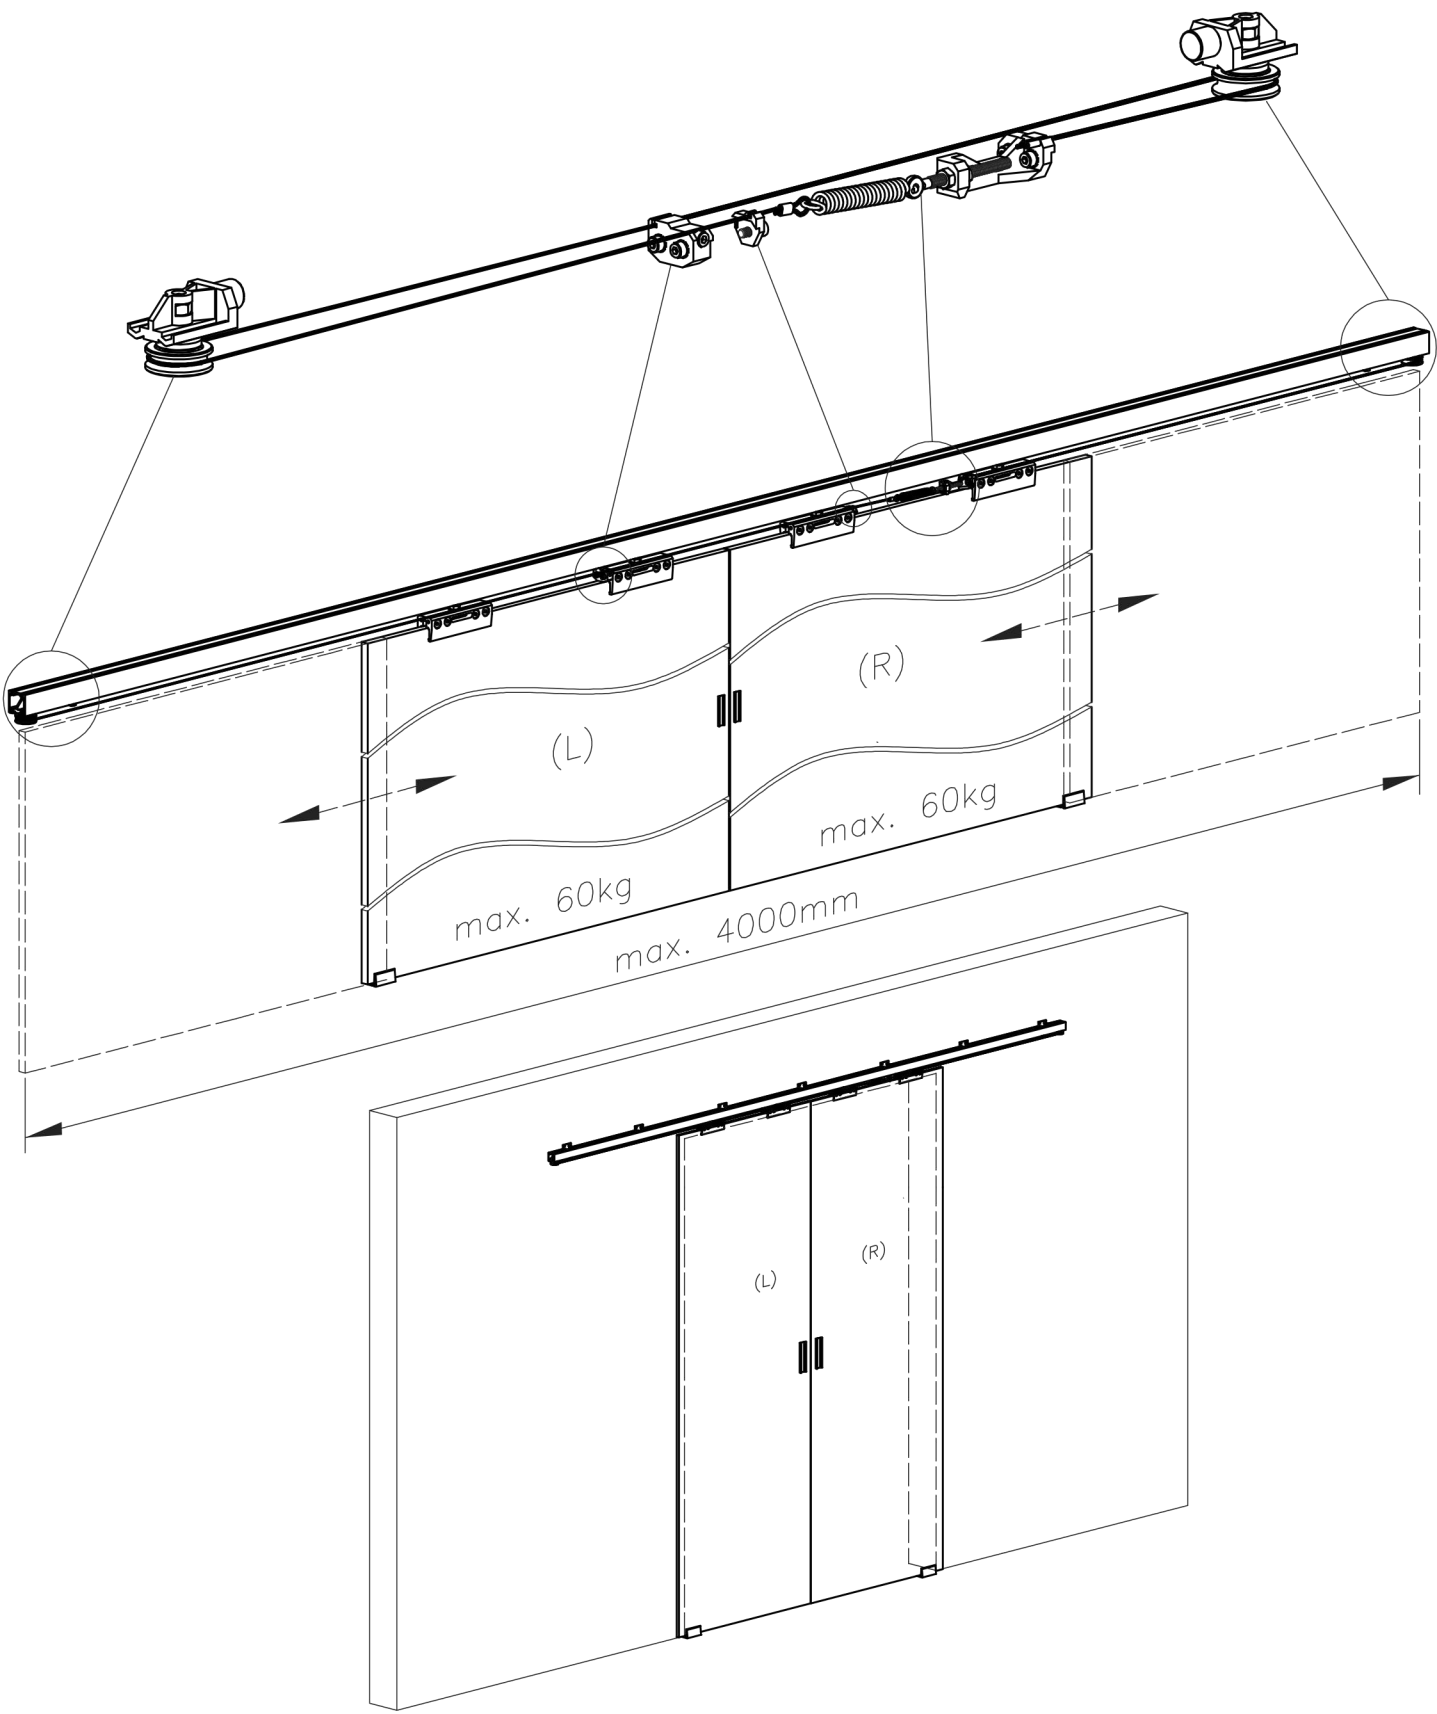





x1




x1



x1

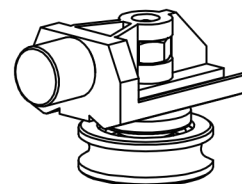

x2

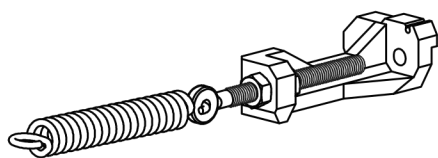

x1




M4x10
x2





M4x10
x3





ø4,3
x5

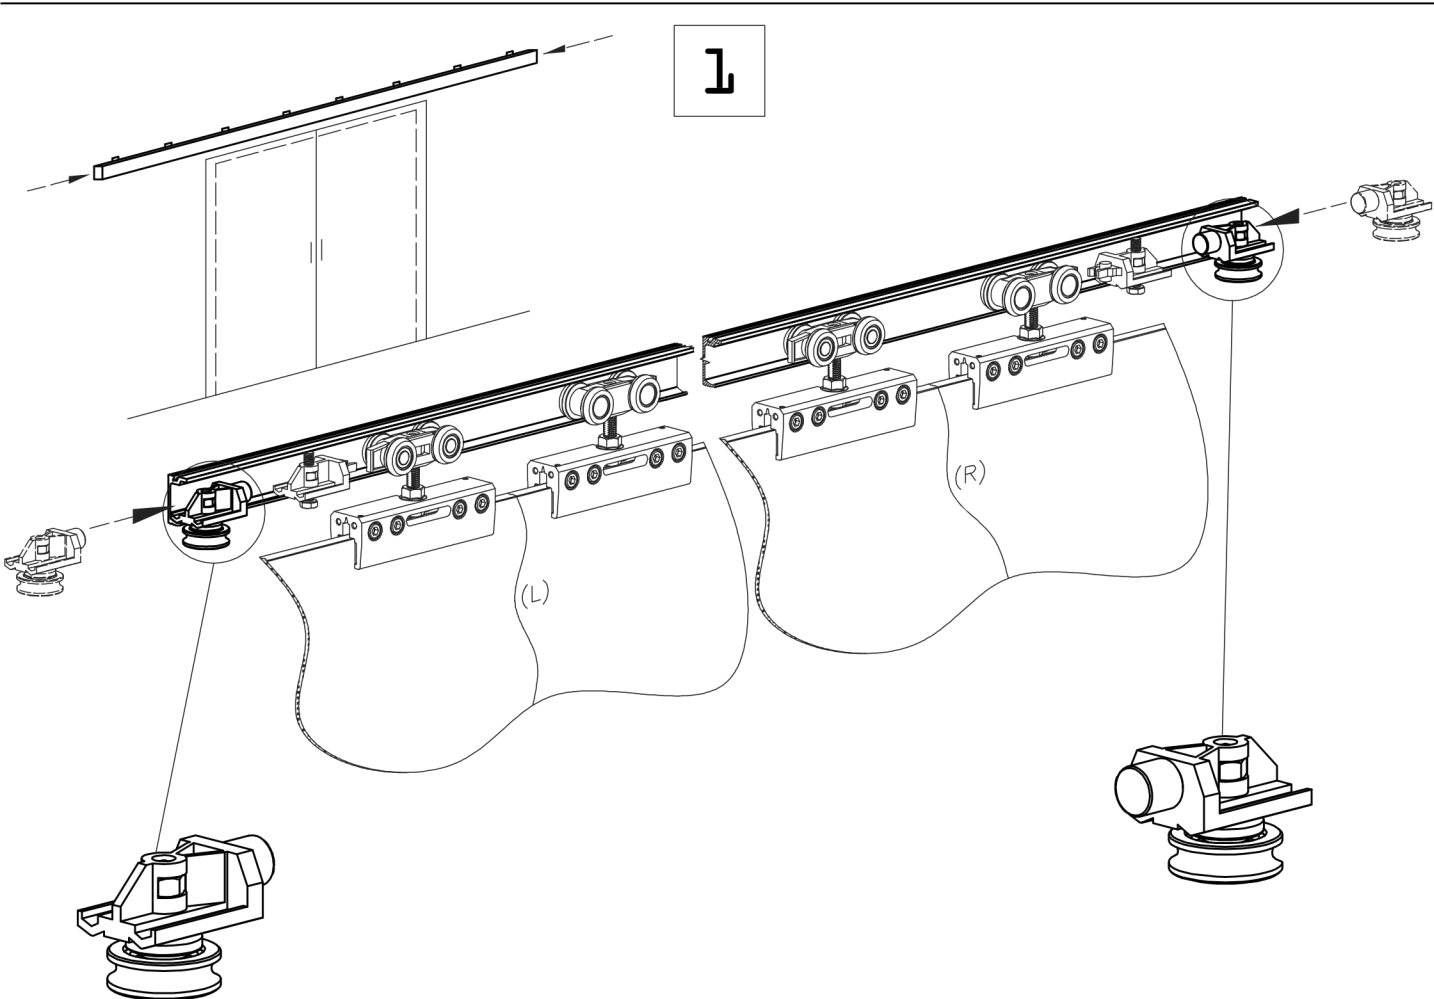

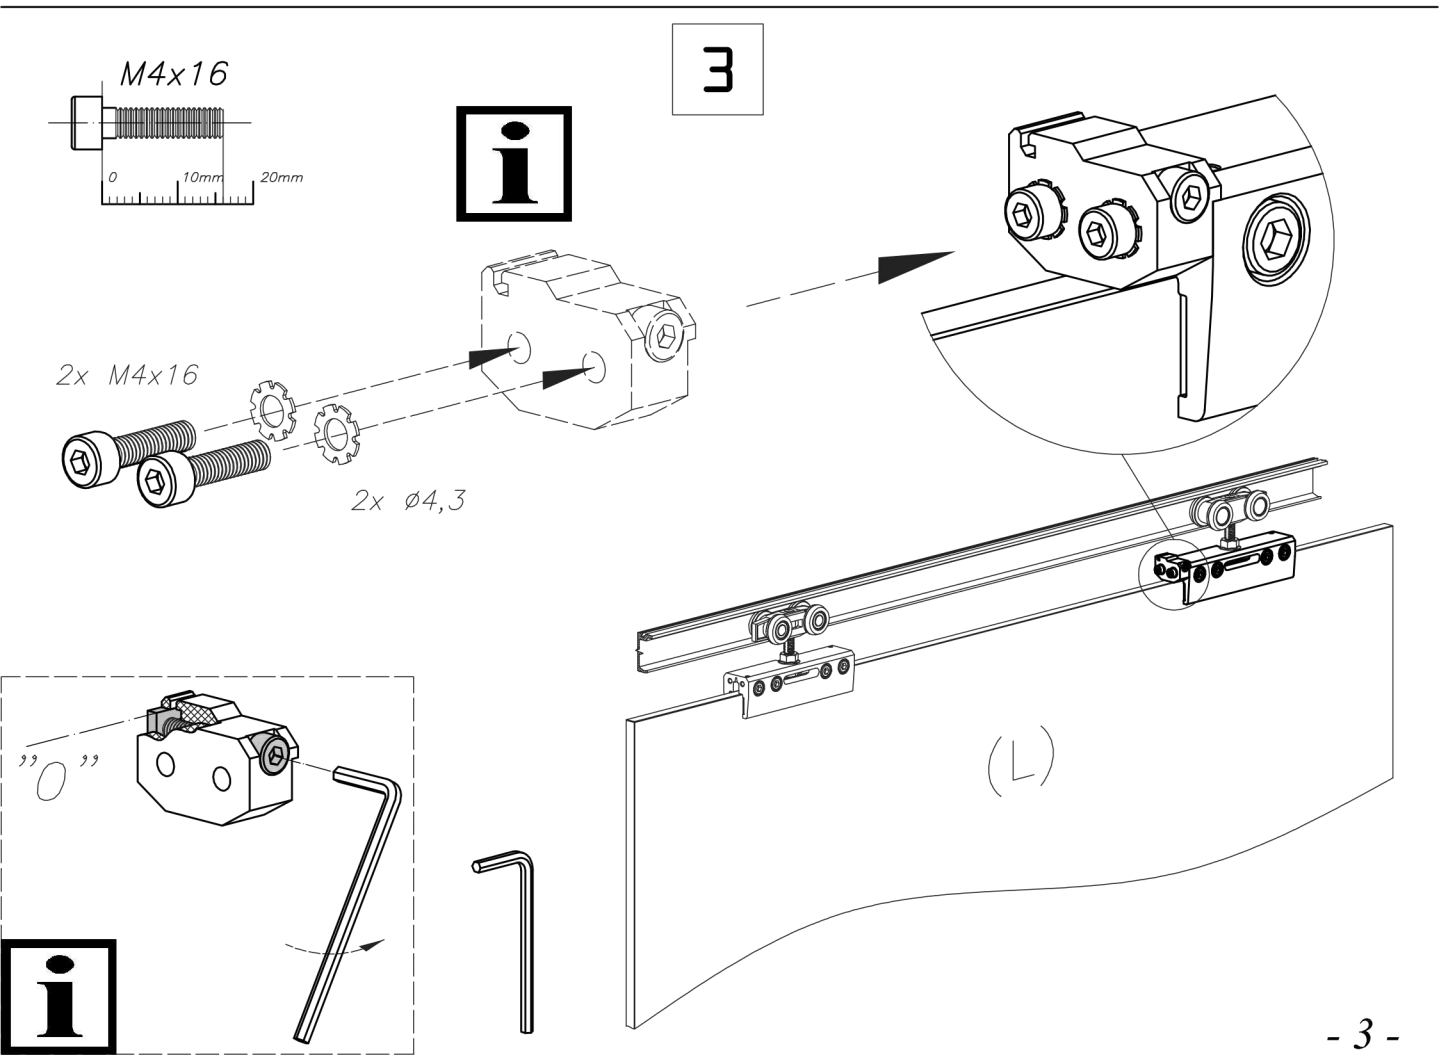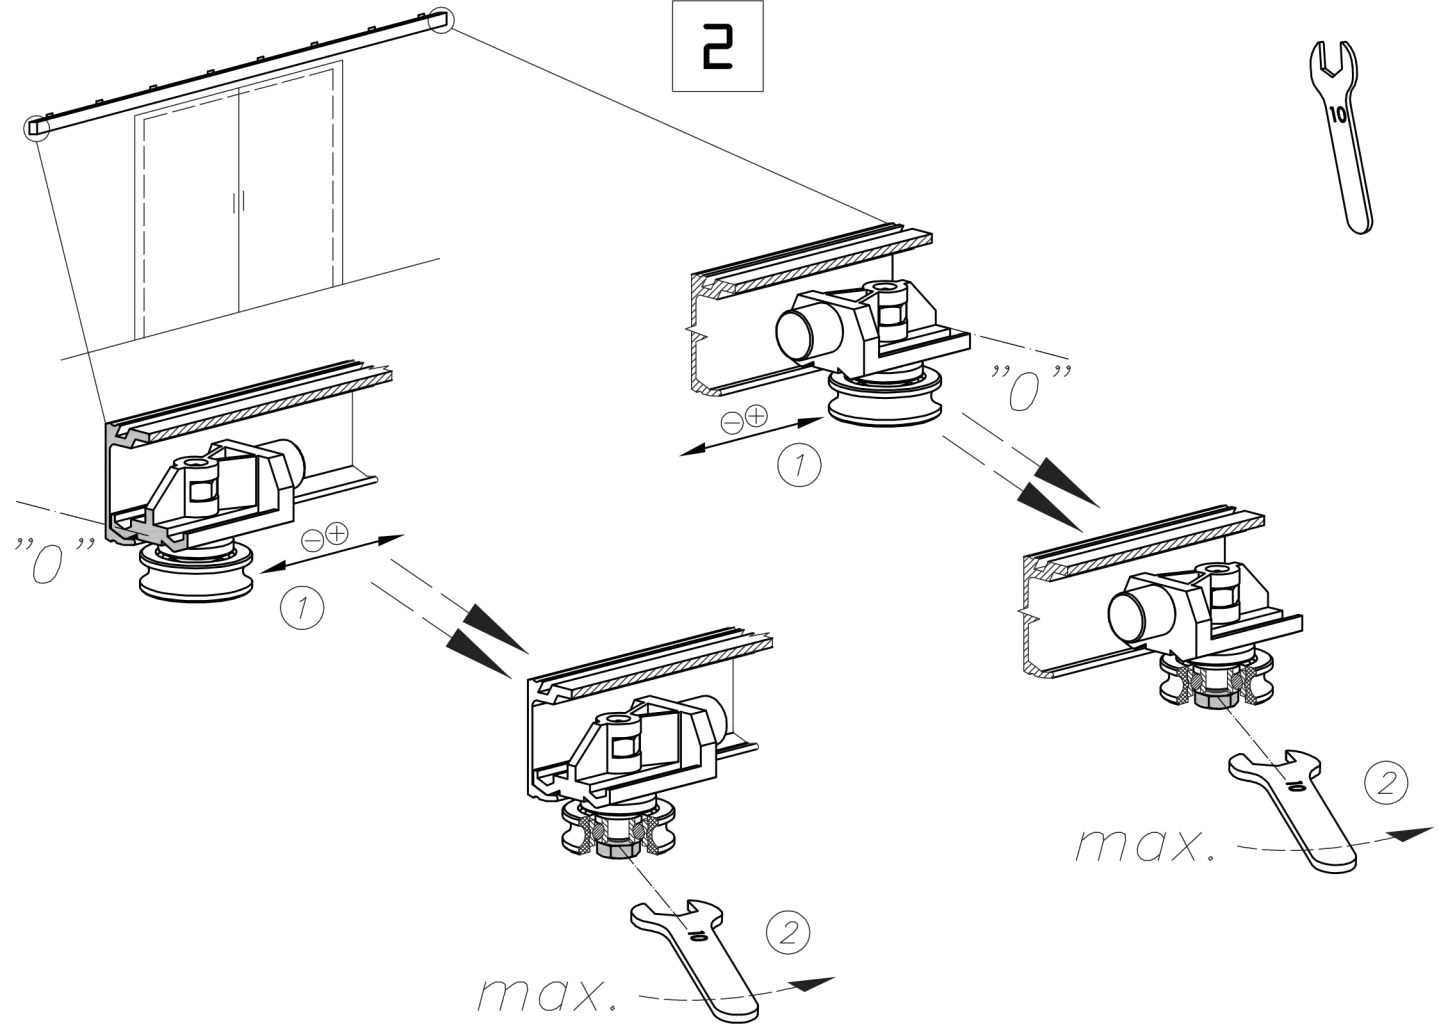



i

4

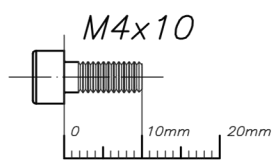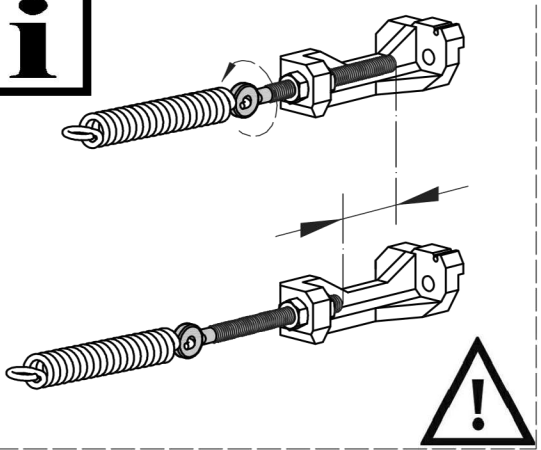


i


2x $\phi 4,3$
2x M4x10

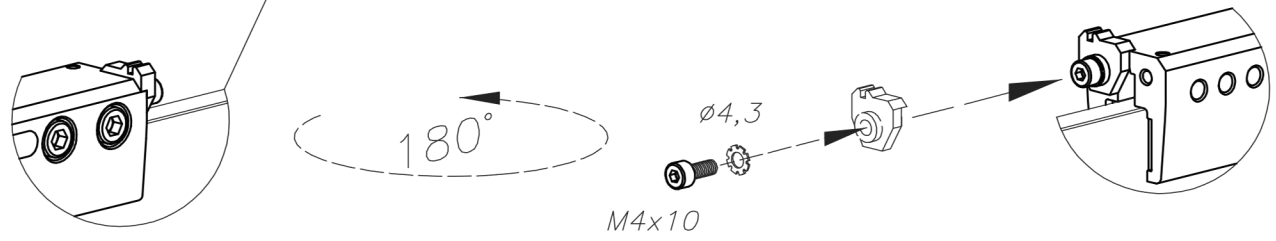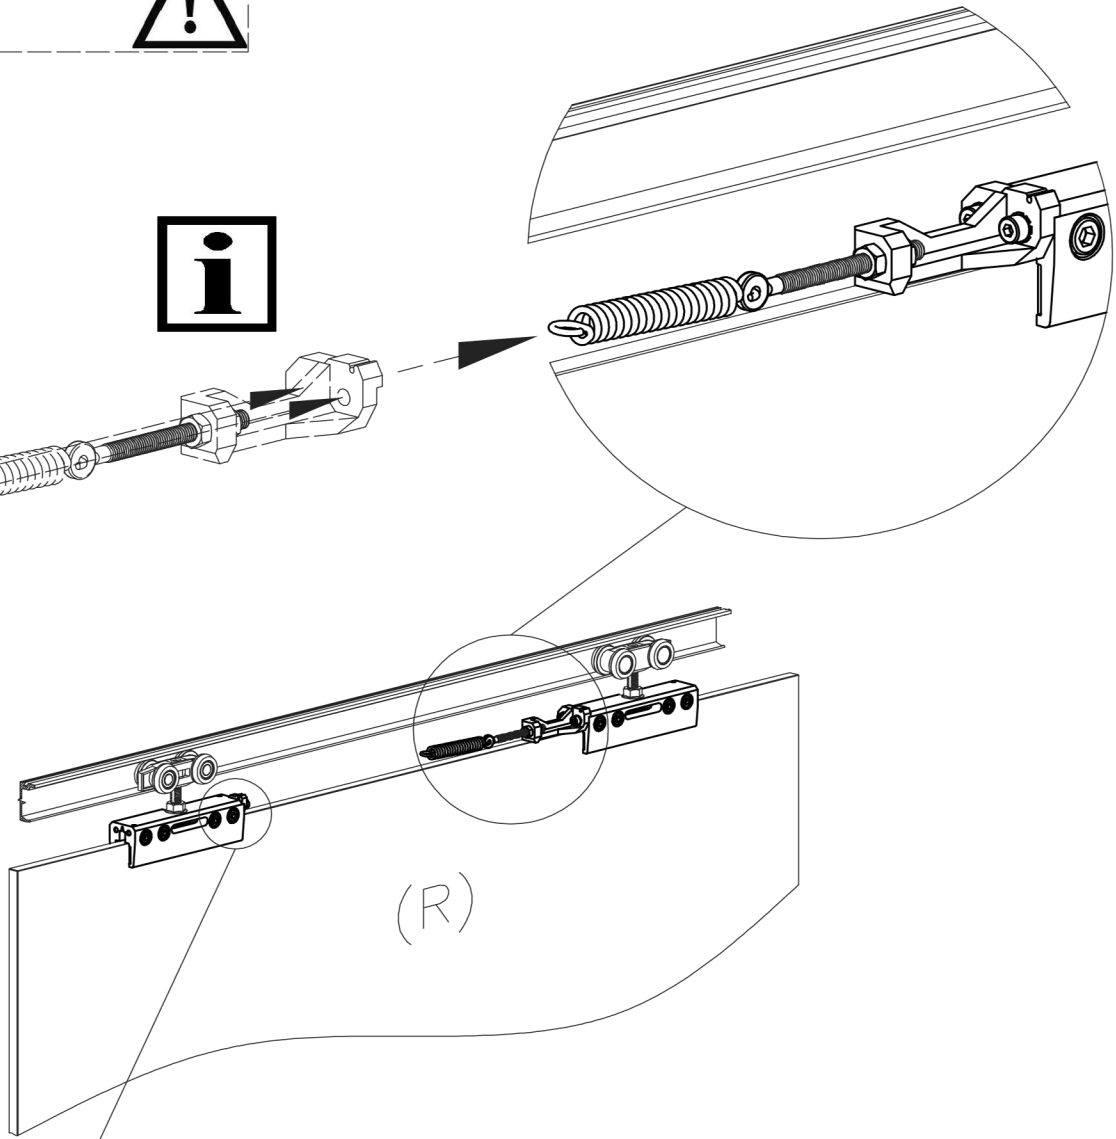

$\phi 4,3$
M4x10



5

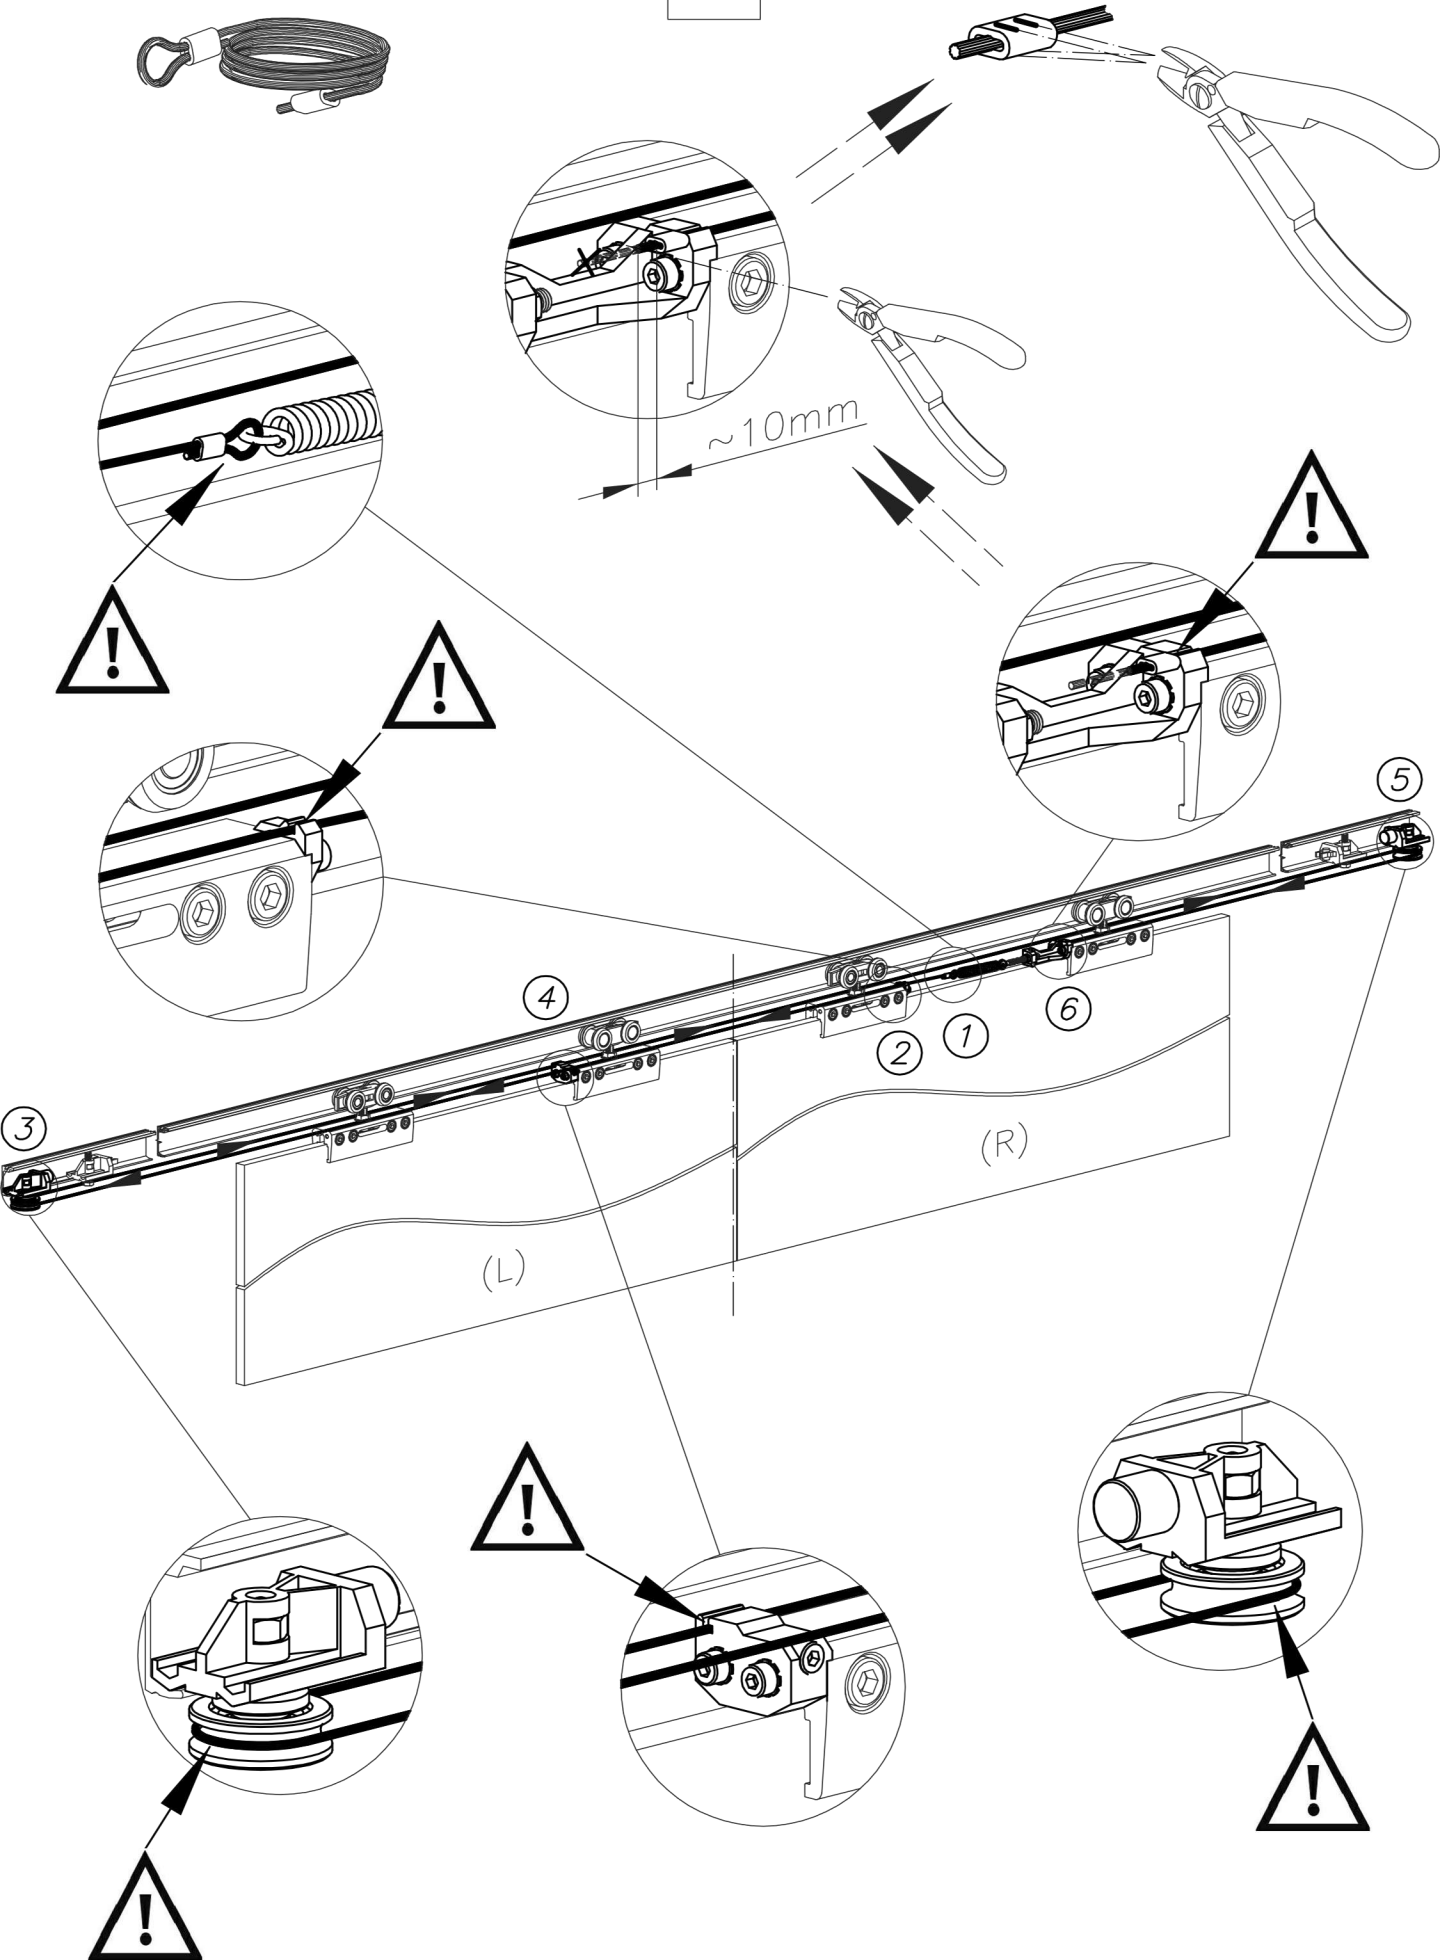

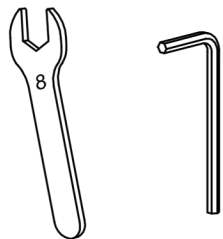


6






i

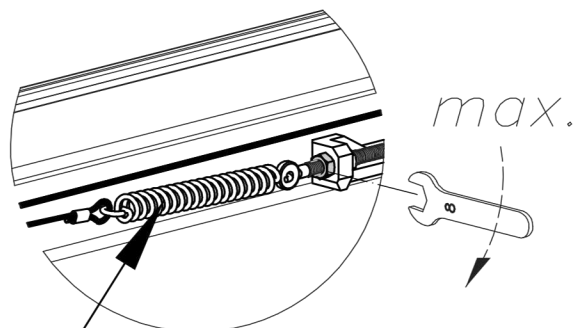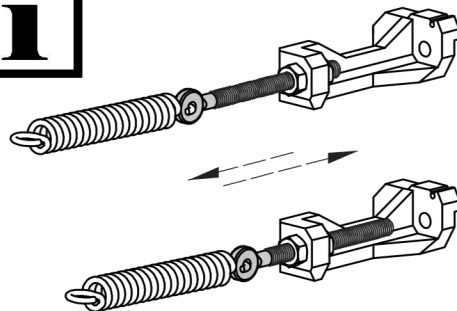

max.



i

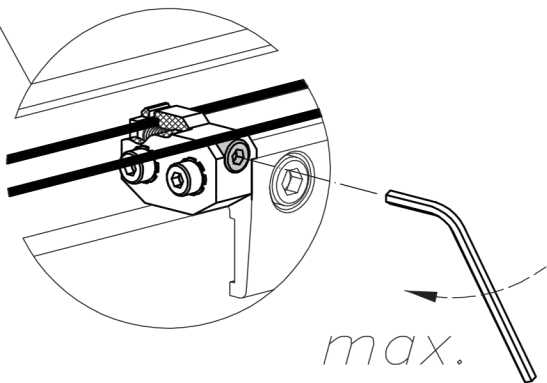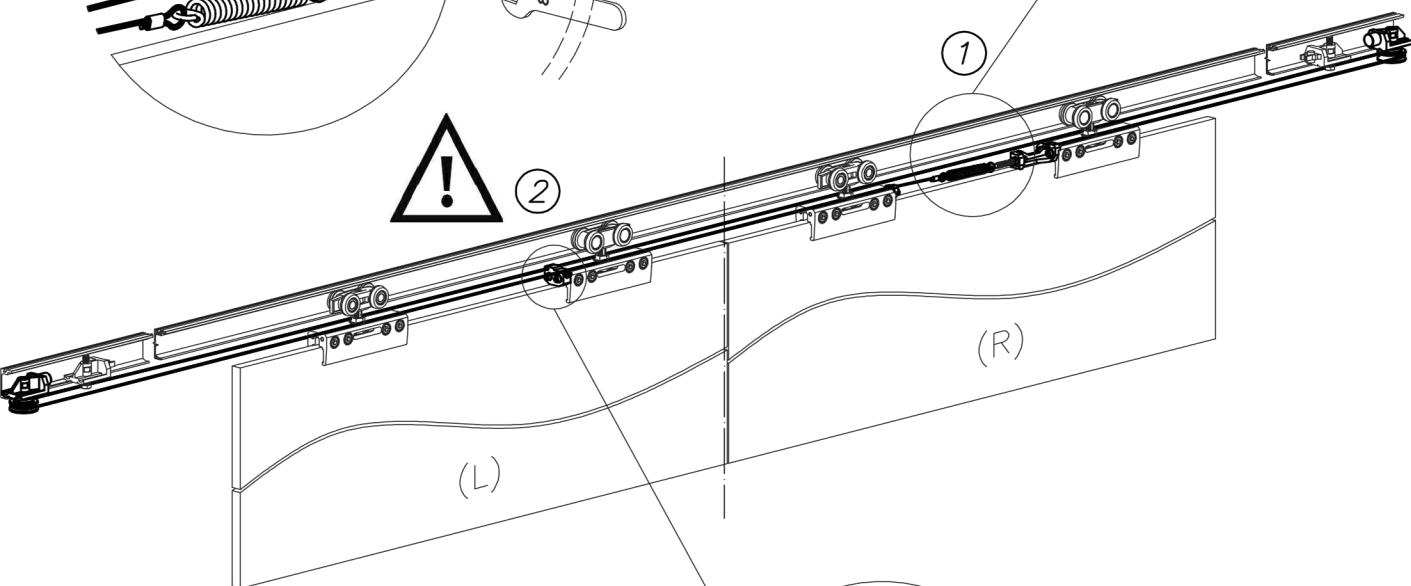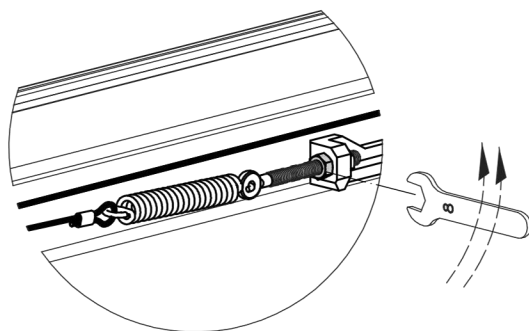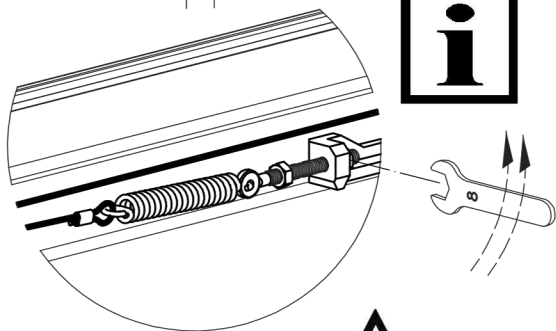




max.

ОПЦИИ



ГЕРКУЛЕС ГЛАСС

Инструкция
по установке доводчиков

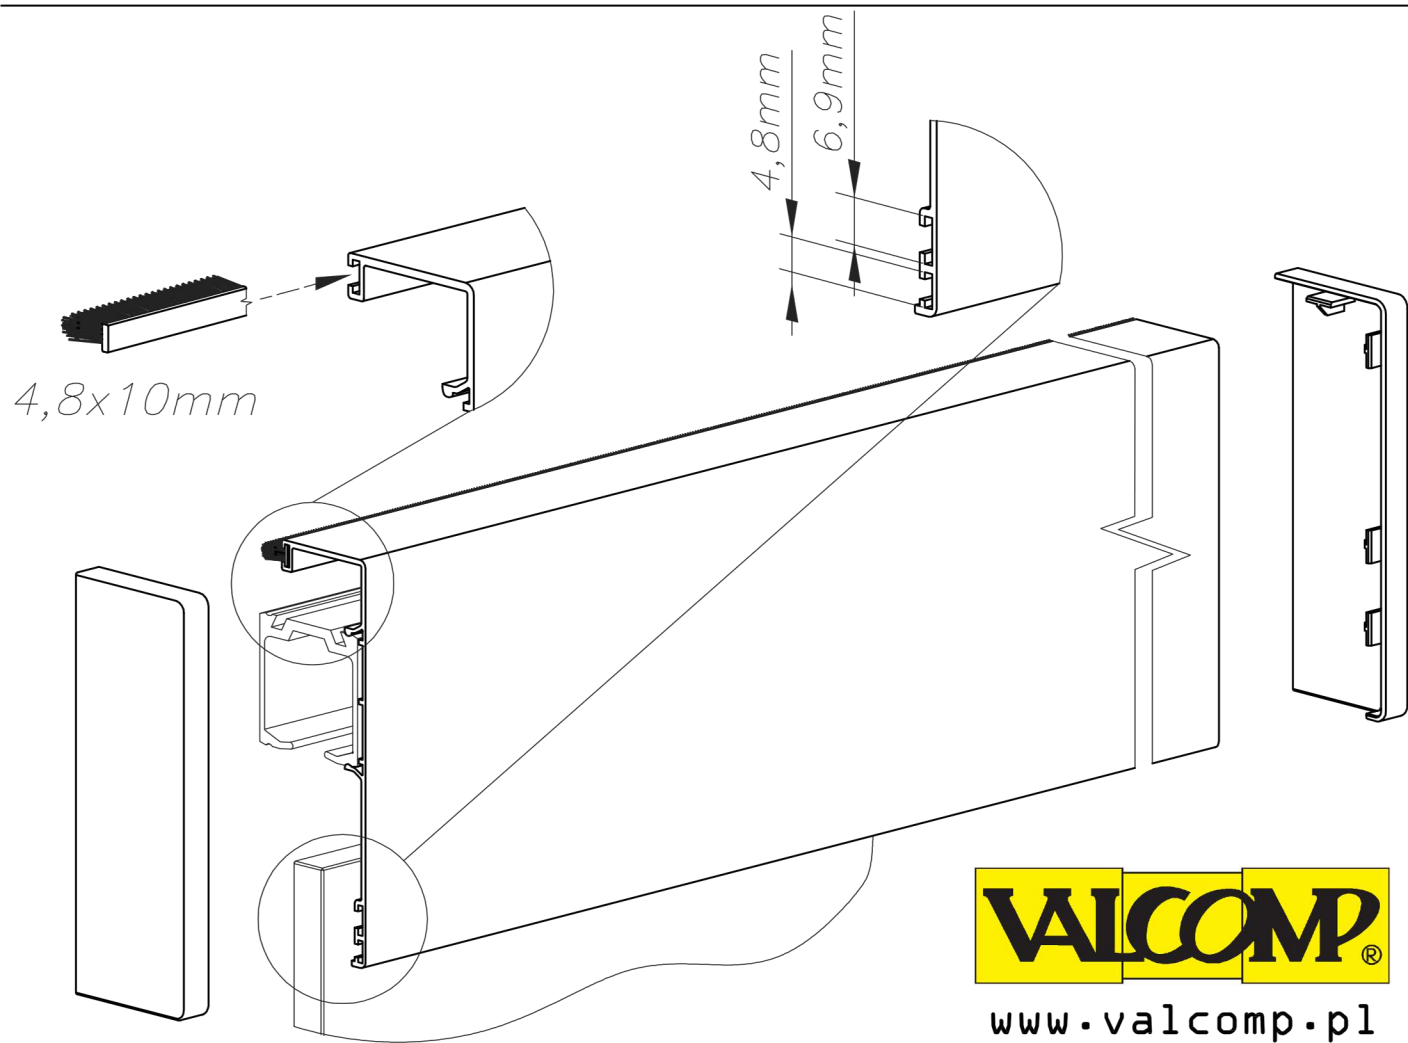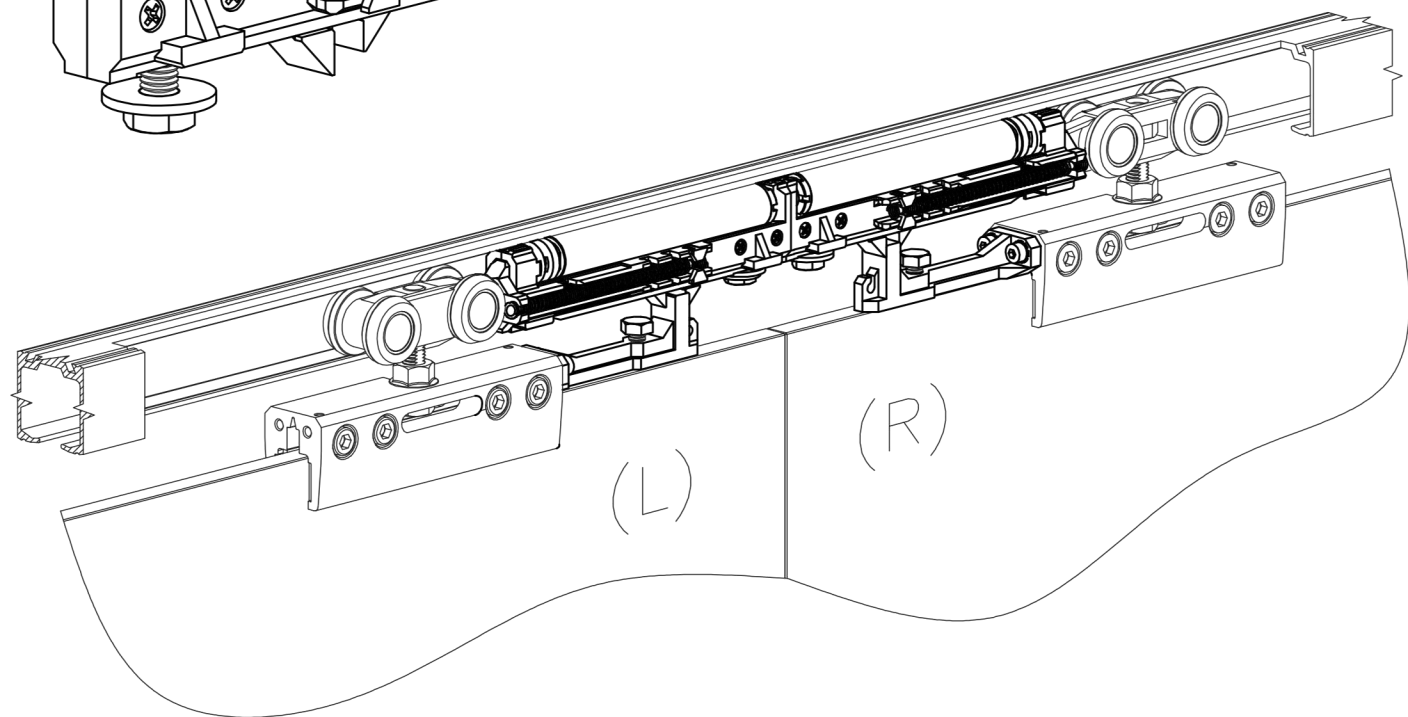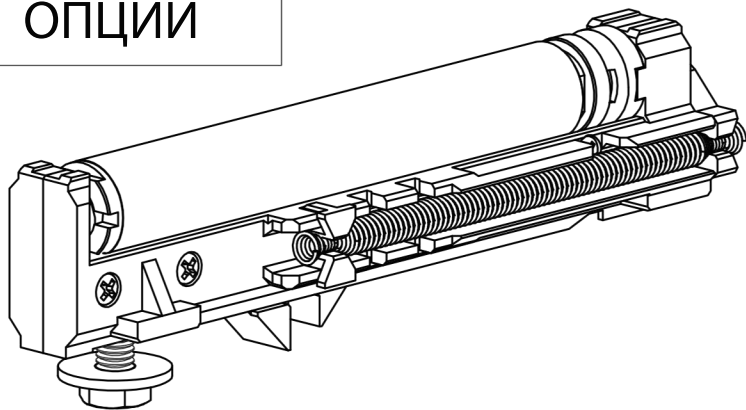

VALCOMP®

www.valcomp.pl

2013.12/5-PL