
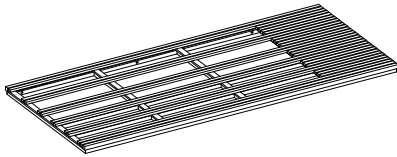
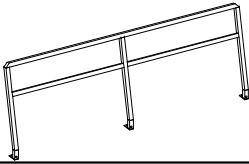
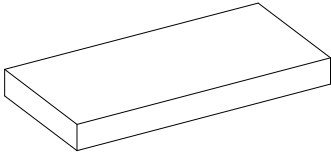
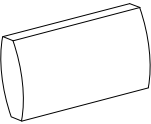


ASSEMBLY INSTRUCTION

ALTO SOFA RIGHT - 35108


CODE	PART	Q.TY
A		2
B		1
C		1
D		1
E		2

HARDWARES


CODE	PICTURE	Q.TY
1	 Bolt M6x20	11
2	 Bolt M6x35	3
3	 Washer Ø6.5xØ16	14
4	 Spanner	1

Step 1

①		8
③		8
④		1

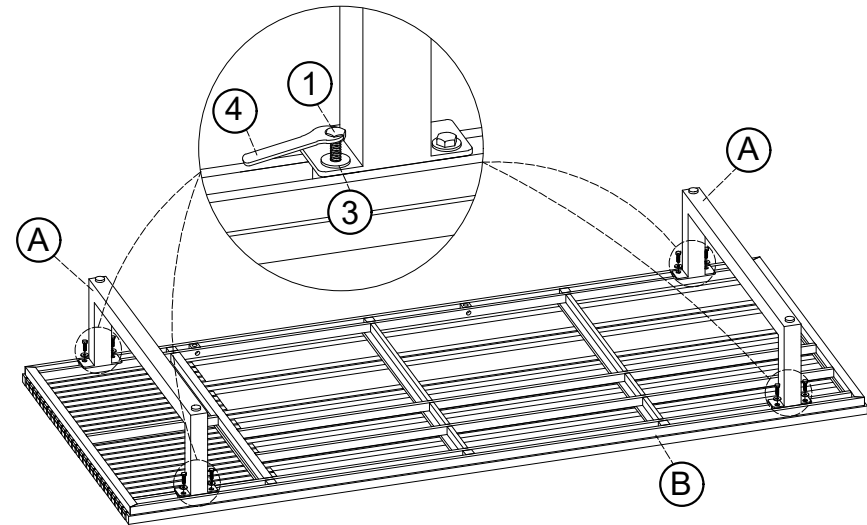

Step 2

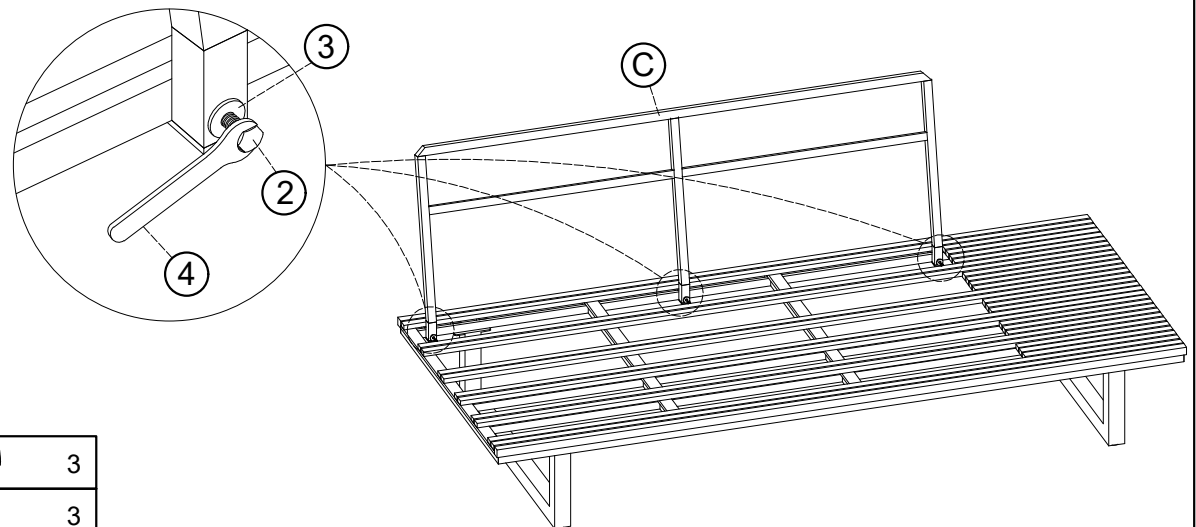


ASSEMBLY INSTRUCTION

ALTO SOFA RIGHT - 35108



Step 3

①		3
③		3
④		1

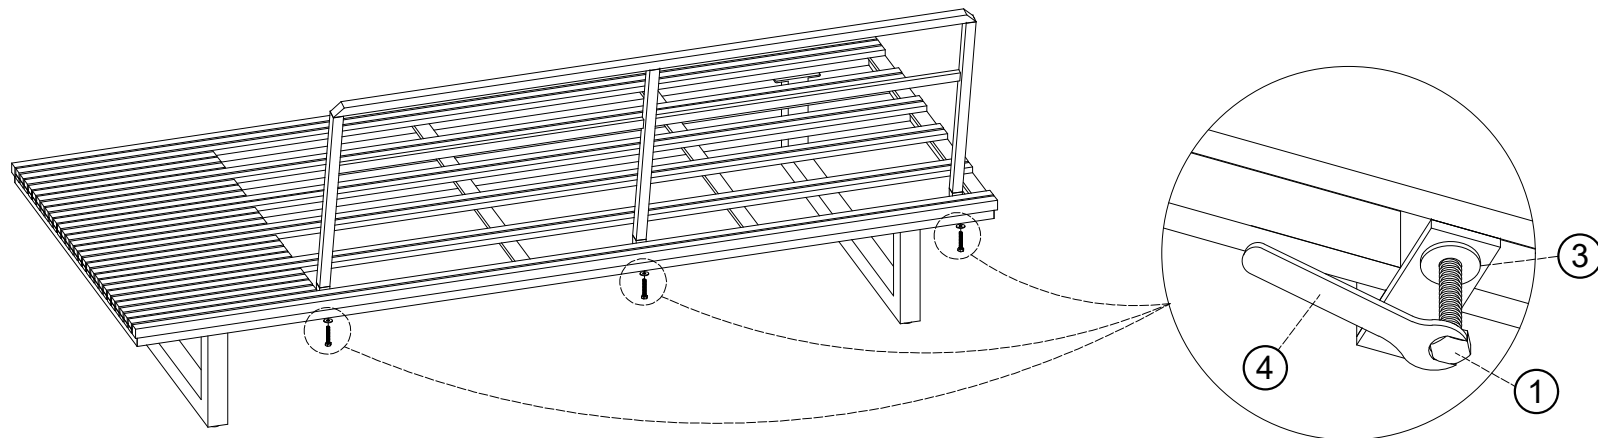





Step 4

FINISHED

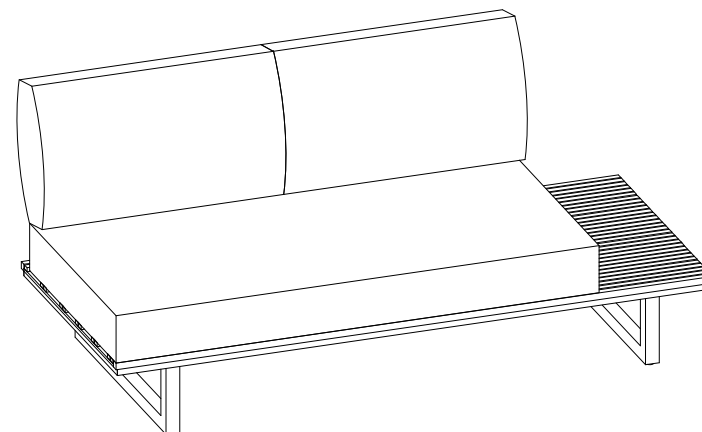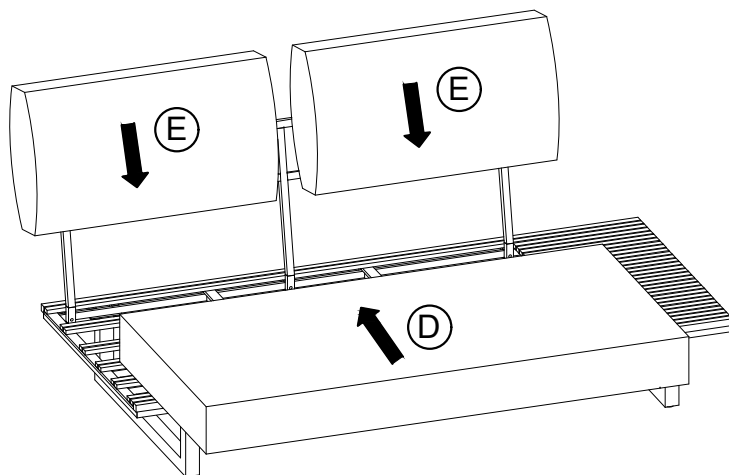


ASSEMBLY INSTRUCTION

ALTO SOFA CORNER - 35109

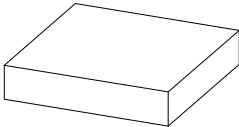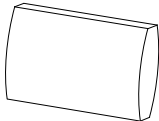CODE	PART	Q.TY
A		2
B		1
C		2
D		1
E		2


Step 1


①		8
③		8
④		1

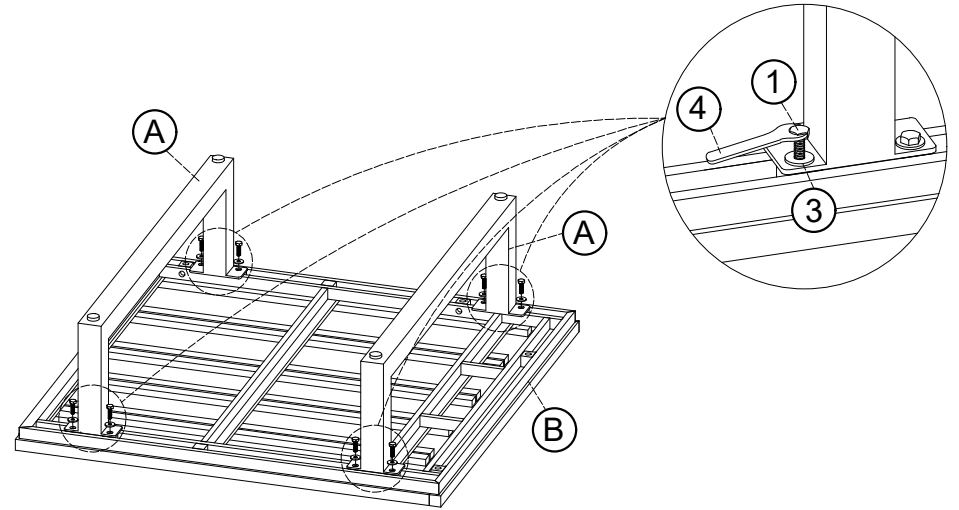

Step 2

②		4
③		4
④		1

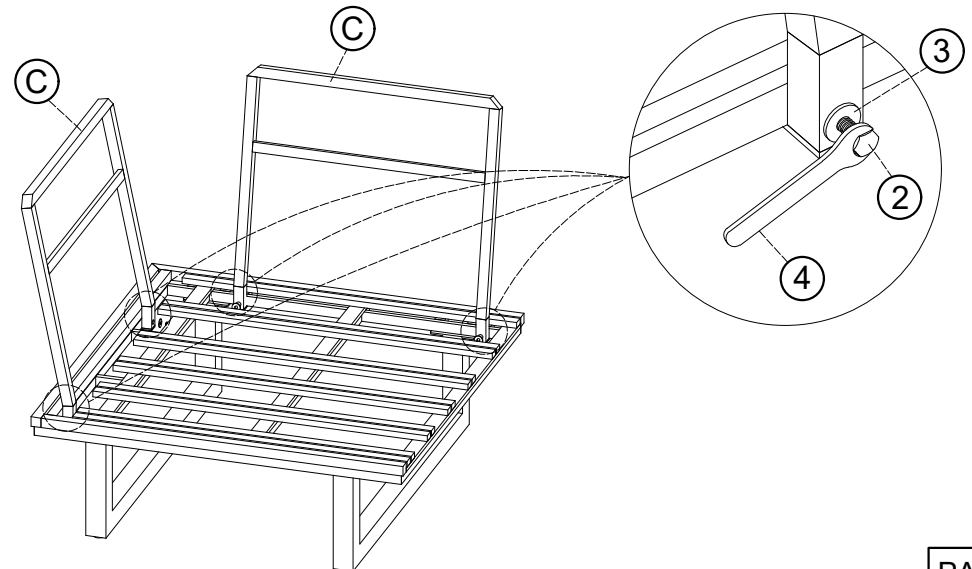


HARDWARES		
CODE	PICTURE	Q.TY
1	 Bolt M6x20	12
2	 Bolt M6x35	4
3	 Washer Ø6.5xØ16	16
4	 Spanner	1

ASSEMBLY INSTRUCTION

ALTO SOFA CORNER - 35109



Step 3

①		4
③		4
④		1

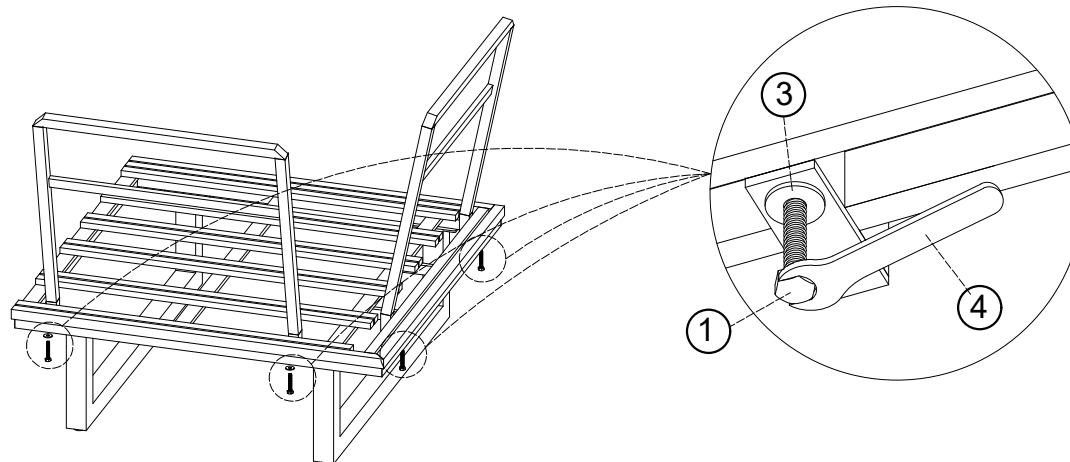



Step 4

FINISHED

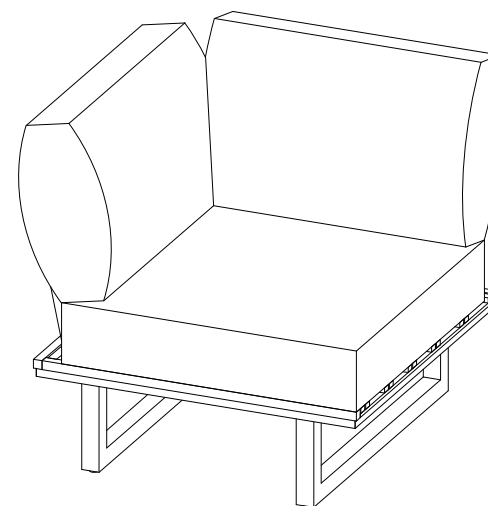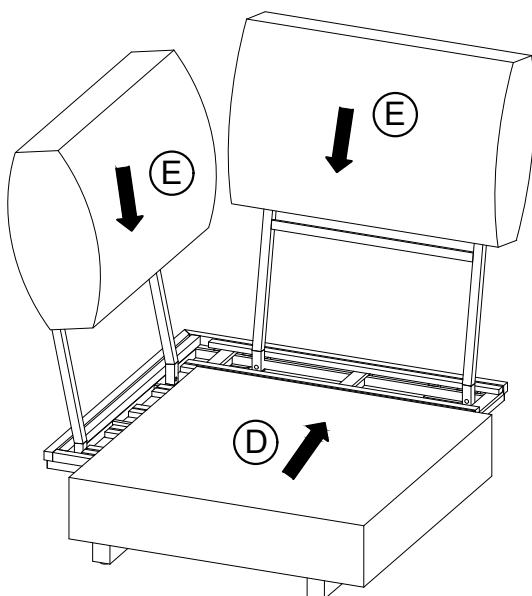

ASSEMBLY INSTRUCTION

ALTO SOFA RIGHT - 35110


CODE	PART	Q.TY
A		2
B		1

HARDWARES


CODE	PICTURE	Q.TY
1	 Bolt M6x20	8
3	 Washer Ø6.5xØ16	8
4	 Spanner	1

Step 1

①		8
③		8
④		1





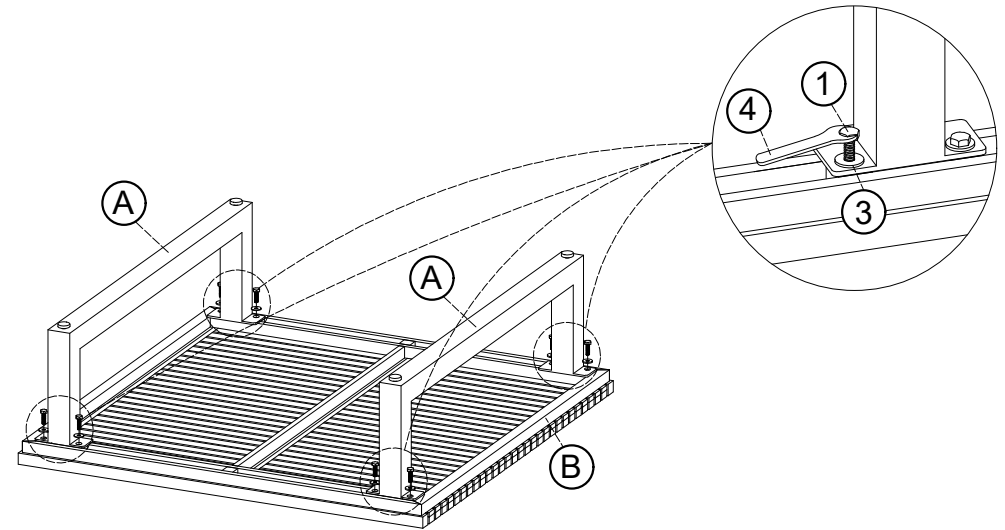


FINISHED

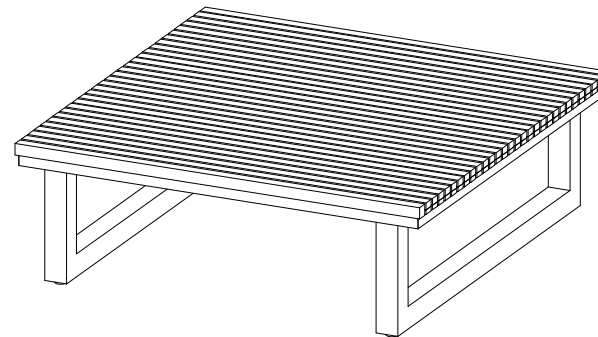

ASSEMBLY INSTRUCTION

ALTO SOFA LEFT - 35107

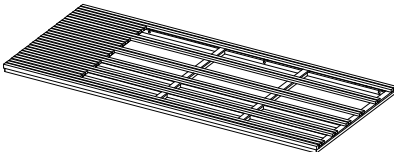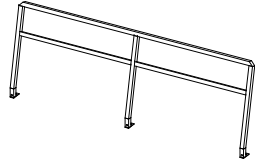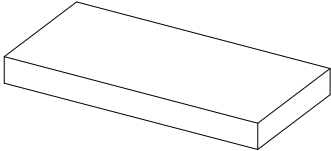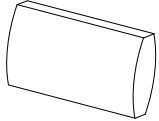
CODE	PART	Q.TY
A		2
B		1
C		1
D		1
E		2

HARDWARES


CODE	PICTURE	Q.TY
1	 Bolt M6x20	11
2	 Bolt M6x35	3
3	 Washer Ø6.5xØ16	14
4	 Spanner	1

Step 1

①		8
③		8
④		1

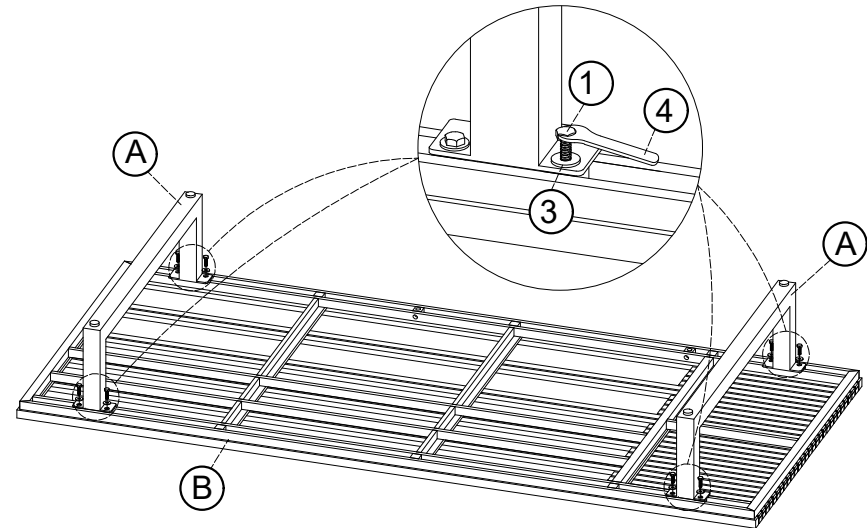

Step 2

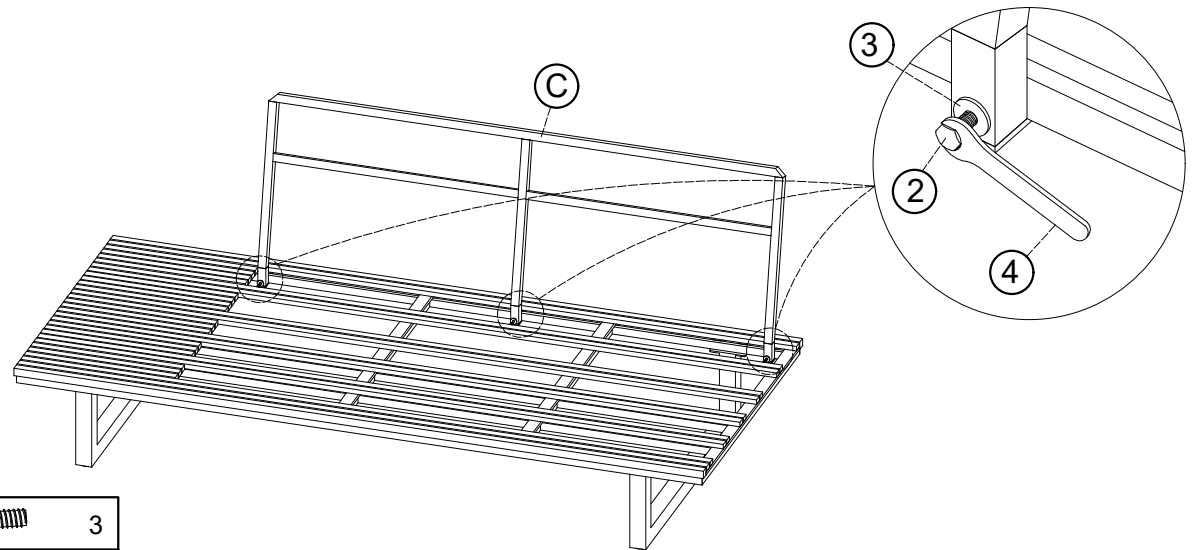


②		3
③		3
④		1

ASSEMBLY INSTRUCTION

ALTO SOFA LEFT - 35107

Step 3

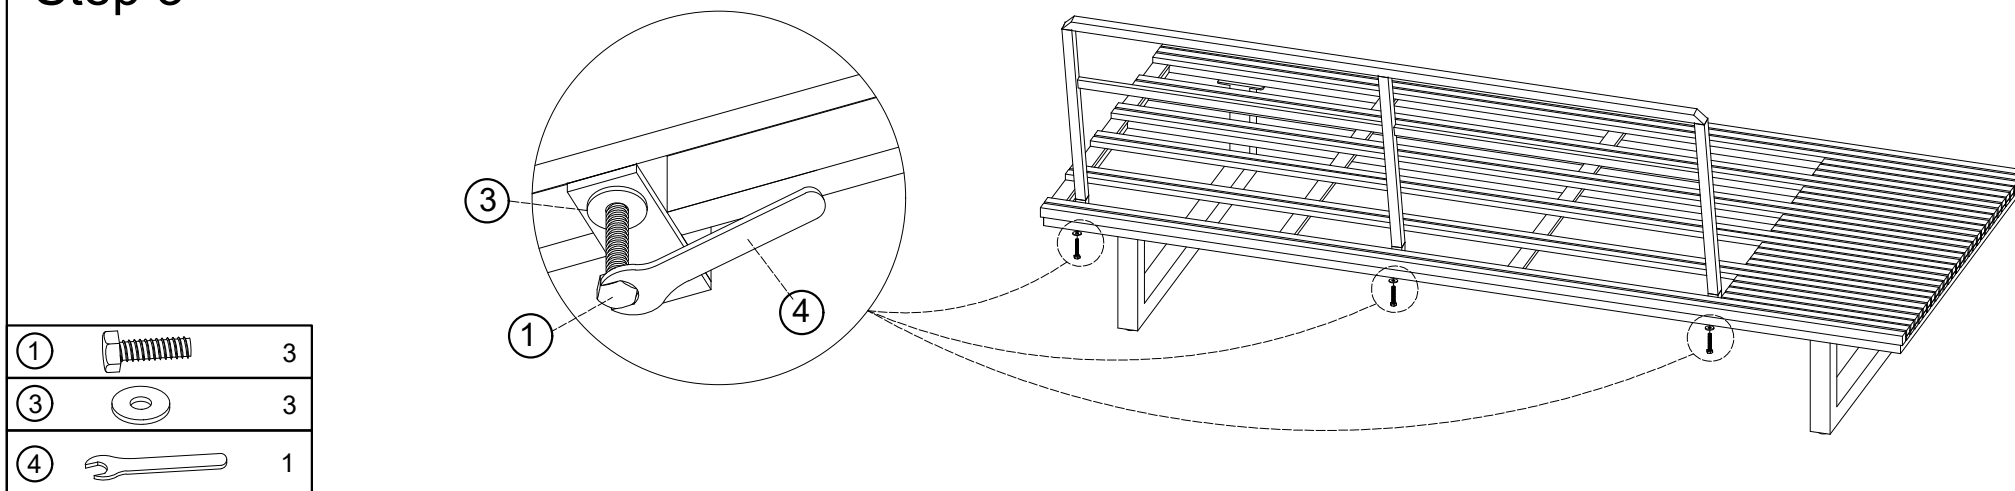

Step 4

FINISHED

