



ASSEMBLY INSTRUCTION

HUC25403

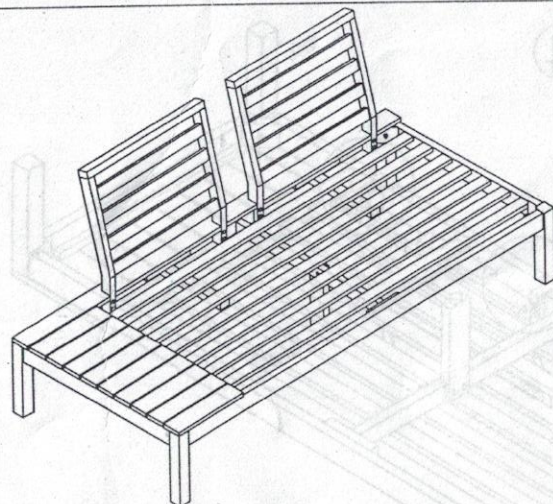

These instructions must be used to ease the assembly of your furniture. Please ensure that you have all the components before assembly. Remember to place the part on a carpeted floor or blanket in order to protect them from damage while you assemble.


Components

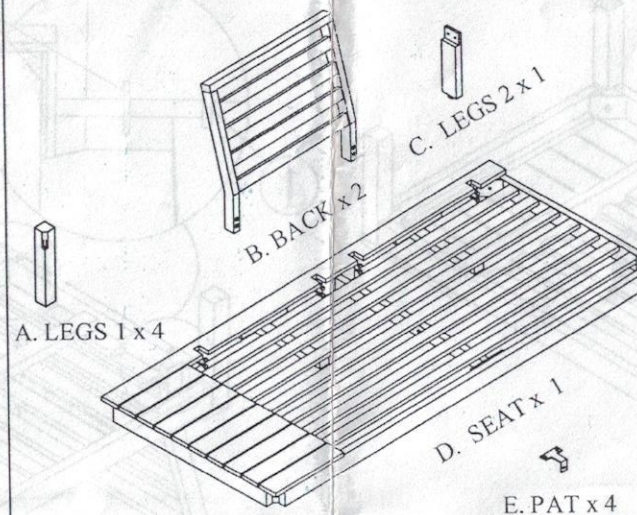


	① BOLT M6 X 60 = 4PCS
	② BOLT M6 X 55 = 4PCS
	③ BOLT M6 X 35 (mm) = 2PCS
	④ WASHERS = 12PCS
	⑤ LOCK NUTS = 4PCS
	⑥ SCREW M4X 20 = 8PCS
	⑦ KEY x1
	⑧ ALLEN KEY x2

STEP 1

CAPS

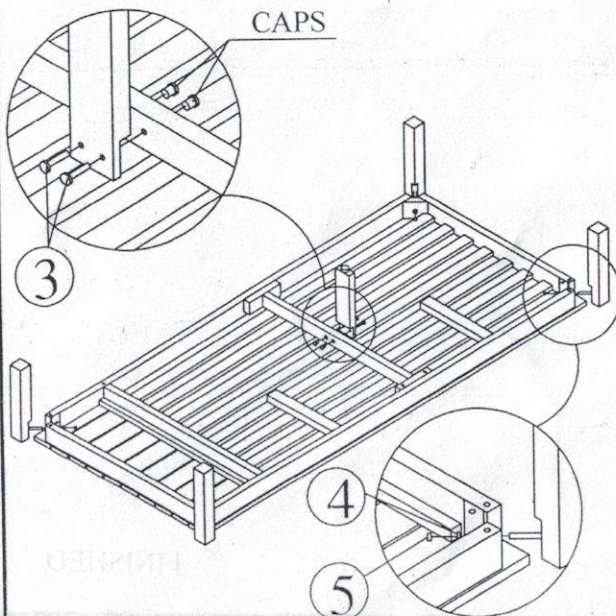


STEP 2

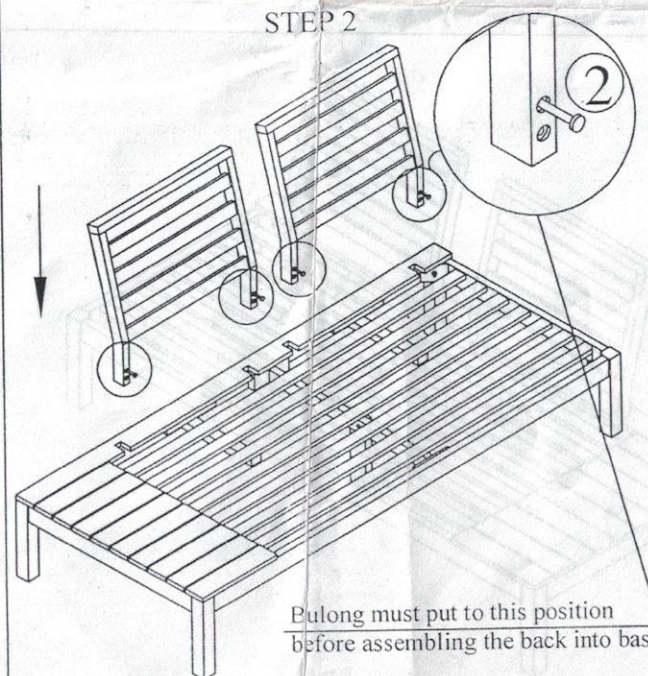

Bulong must put to this position before assembling the back into base


STEP 3

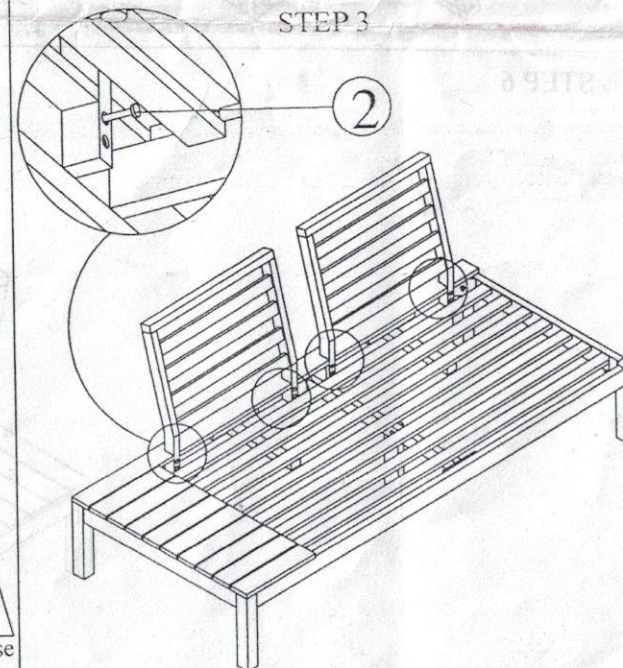


ASSEMBLY INSTRUCTION

HUC25403


STEP 4

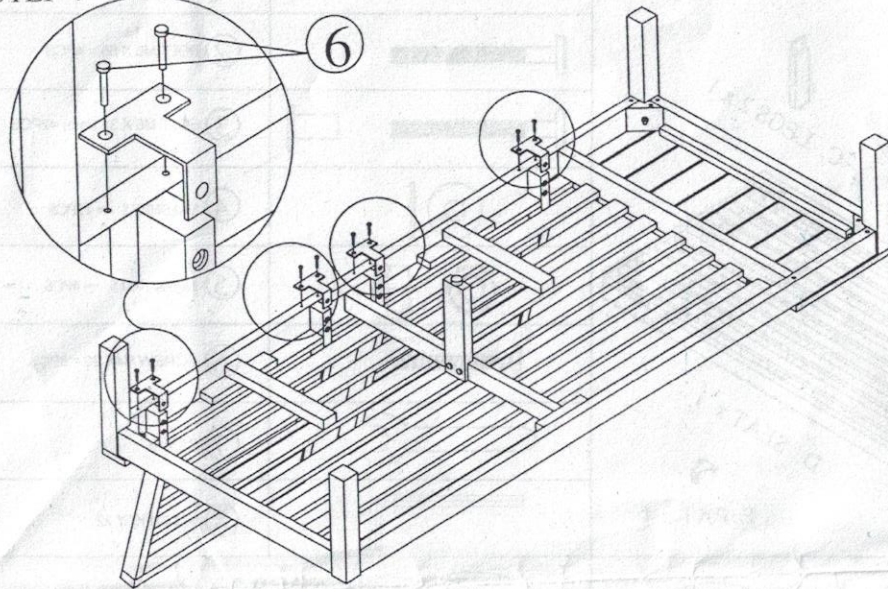

STEP 5

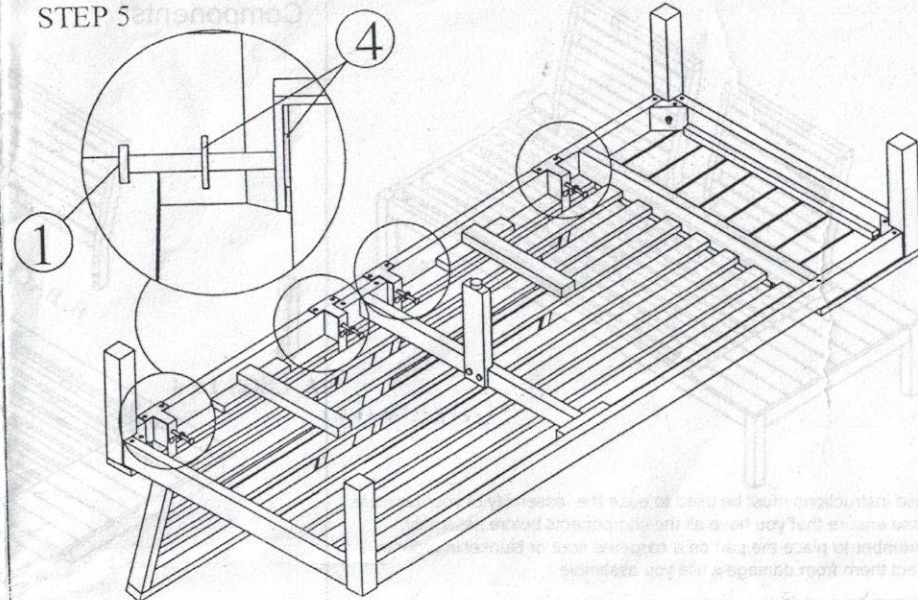

STEP 6

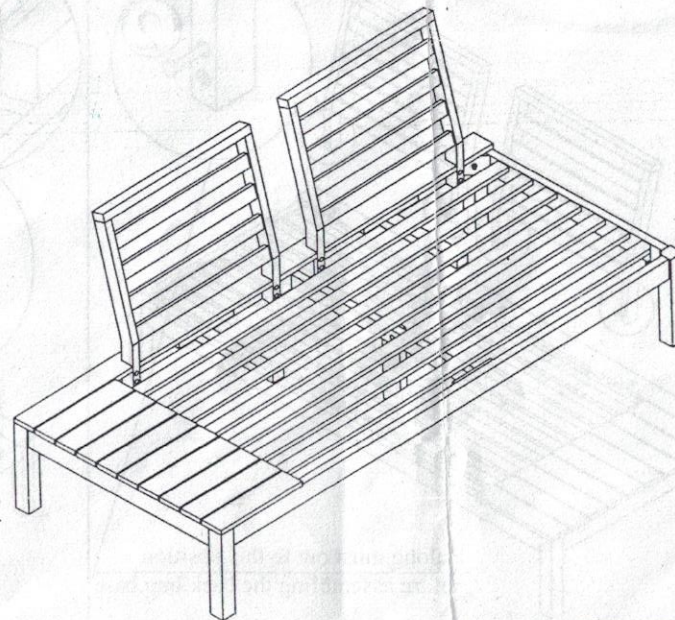

FINISHED