




ASSEMBLY INSTRUCTIONS

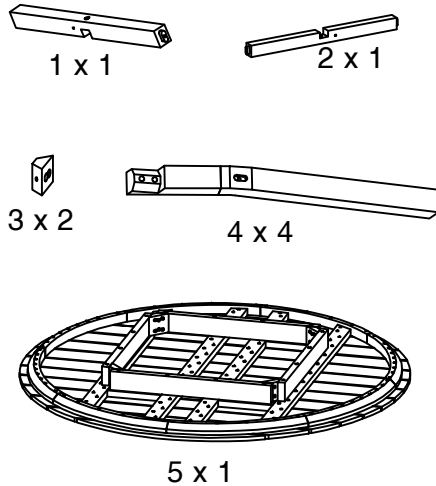


*STEP 1:

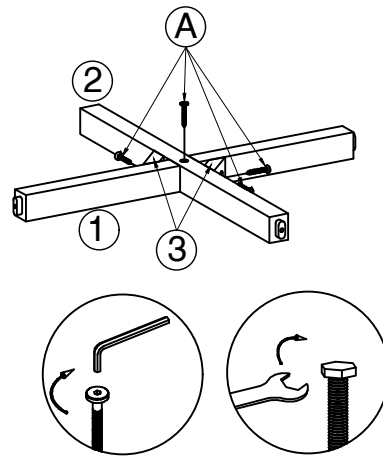


*STEP 2:

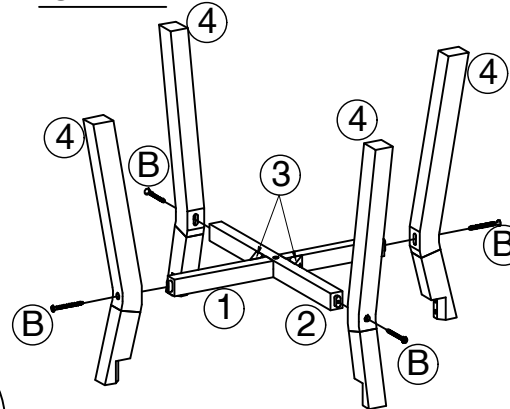

*STEP 3:

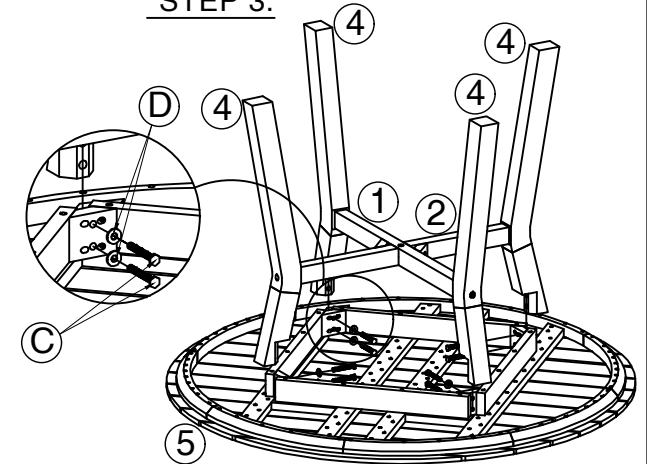

*STEP 4:

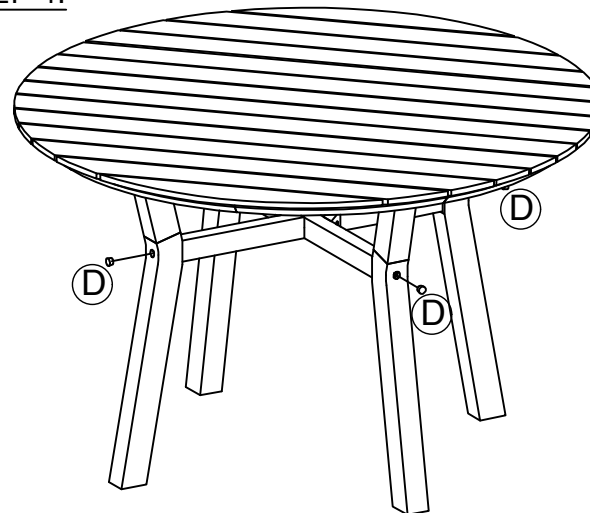

FINISH



- (A) M6x40X13 mm x5
- (B) M7x90X15 mm x4
- (C) M8x60 mm x8
- (D) Londen 8.5x20x2 mm x8
- (E) Nut x4
- (F) Allenkey x1
- (G) Wrench x1