
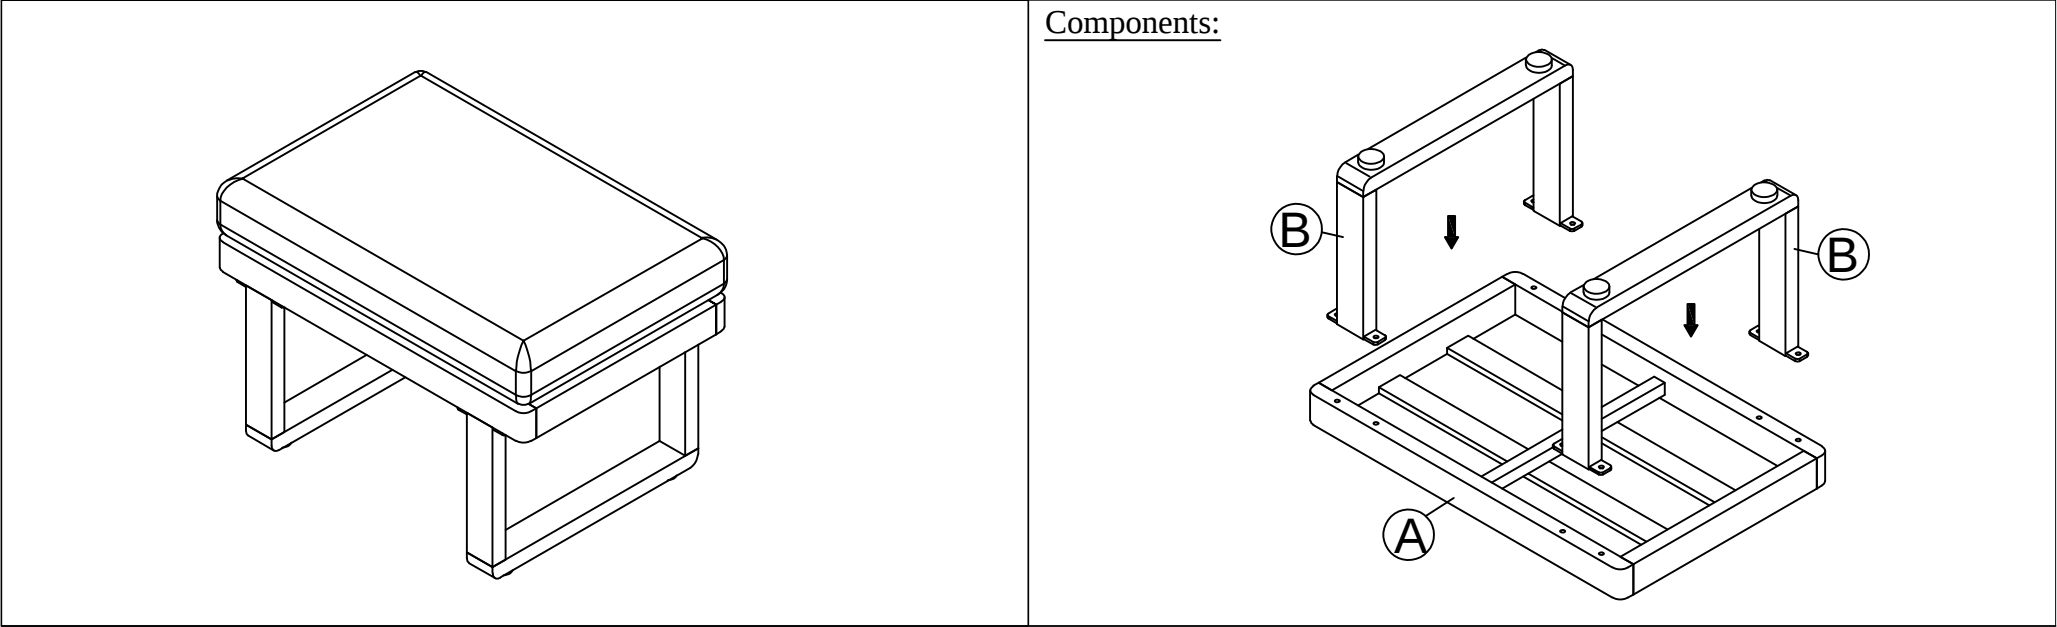


ASSEMBLY INSTRUCTIONS

TOPA SMALL OTTOMN WITH CUSHION




HARDWARES

①		x8	②		x8	③		x1
	Bolt M6x20mm			Rondelle Ø6.5x16x1mm			Allen Key M4mm	


PARST

A

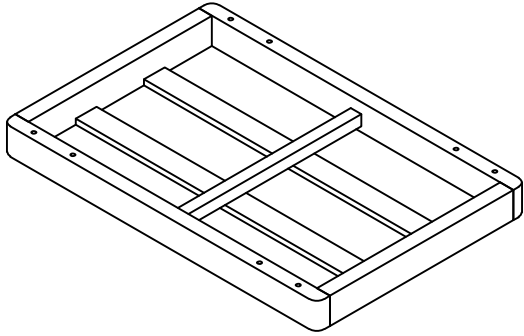


X1

B

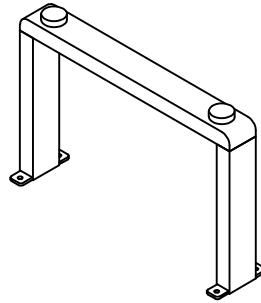



X2



C

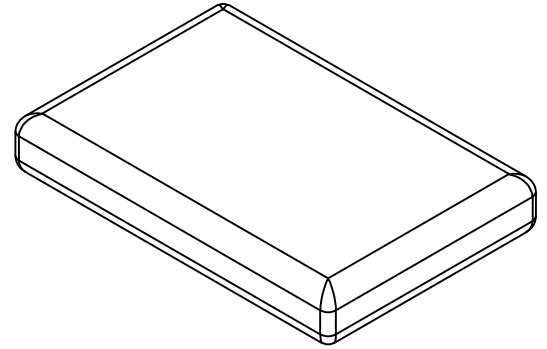


X1

Step 1

 x8	 Bolt M6x20mm	 x8	 Rondelle Ø6.5x16x1mm
 x1	 Allen Key M4mm		
 100%			

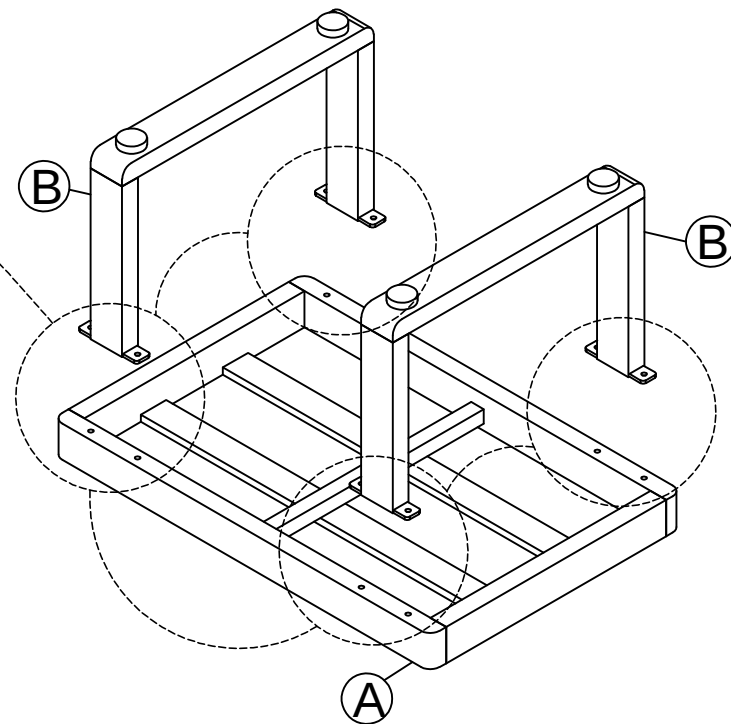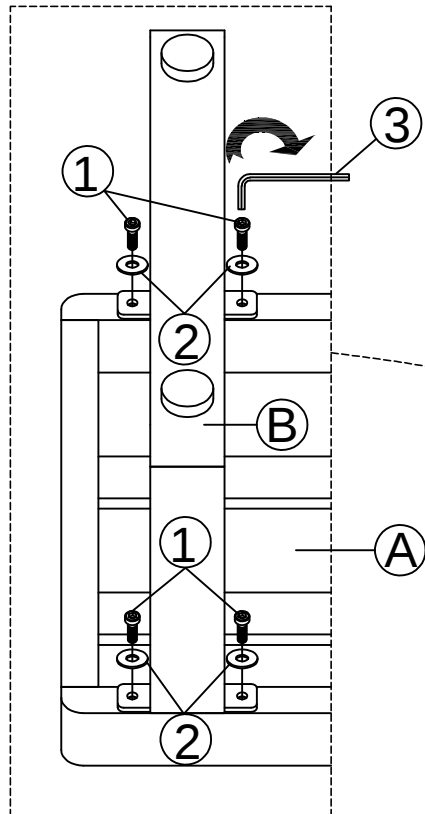

Step 2

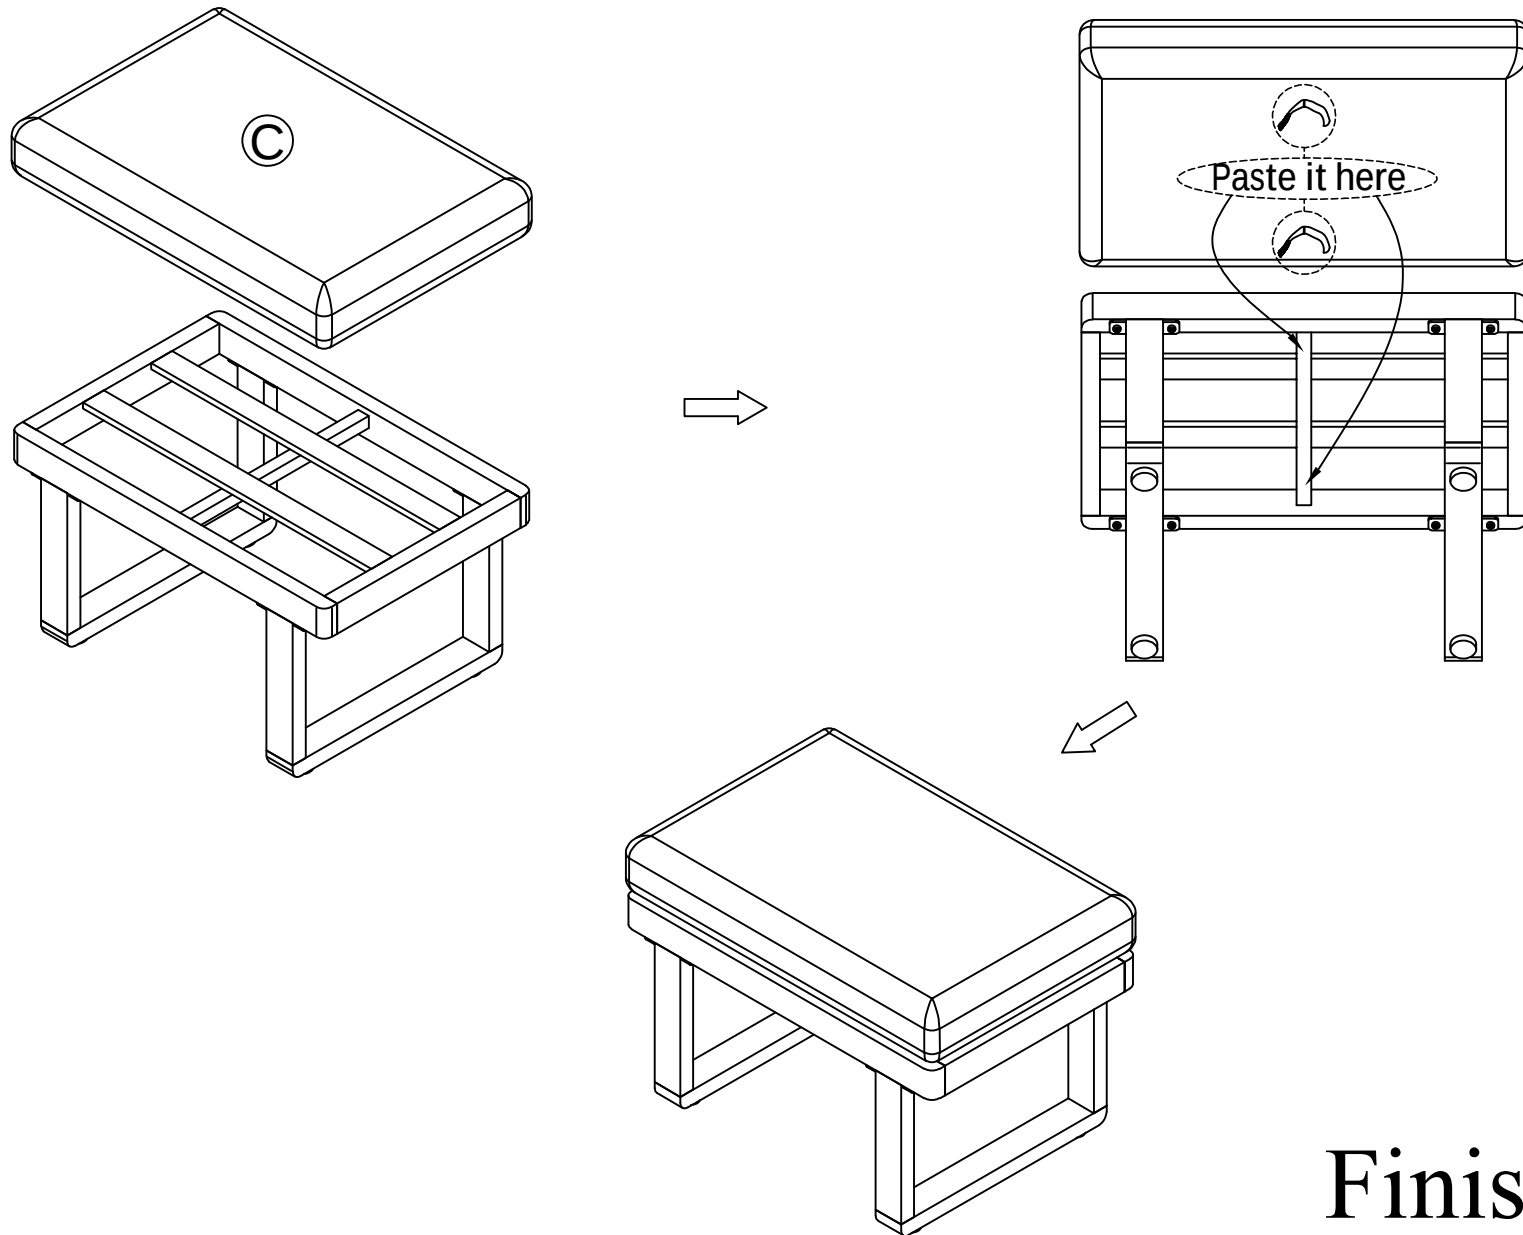

Finished