
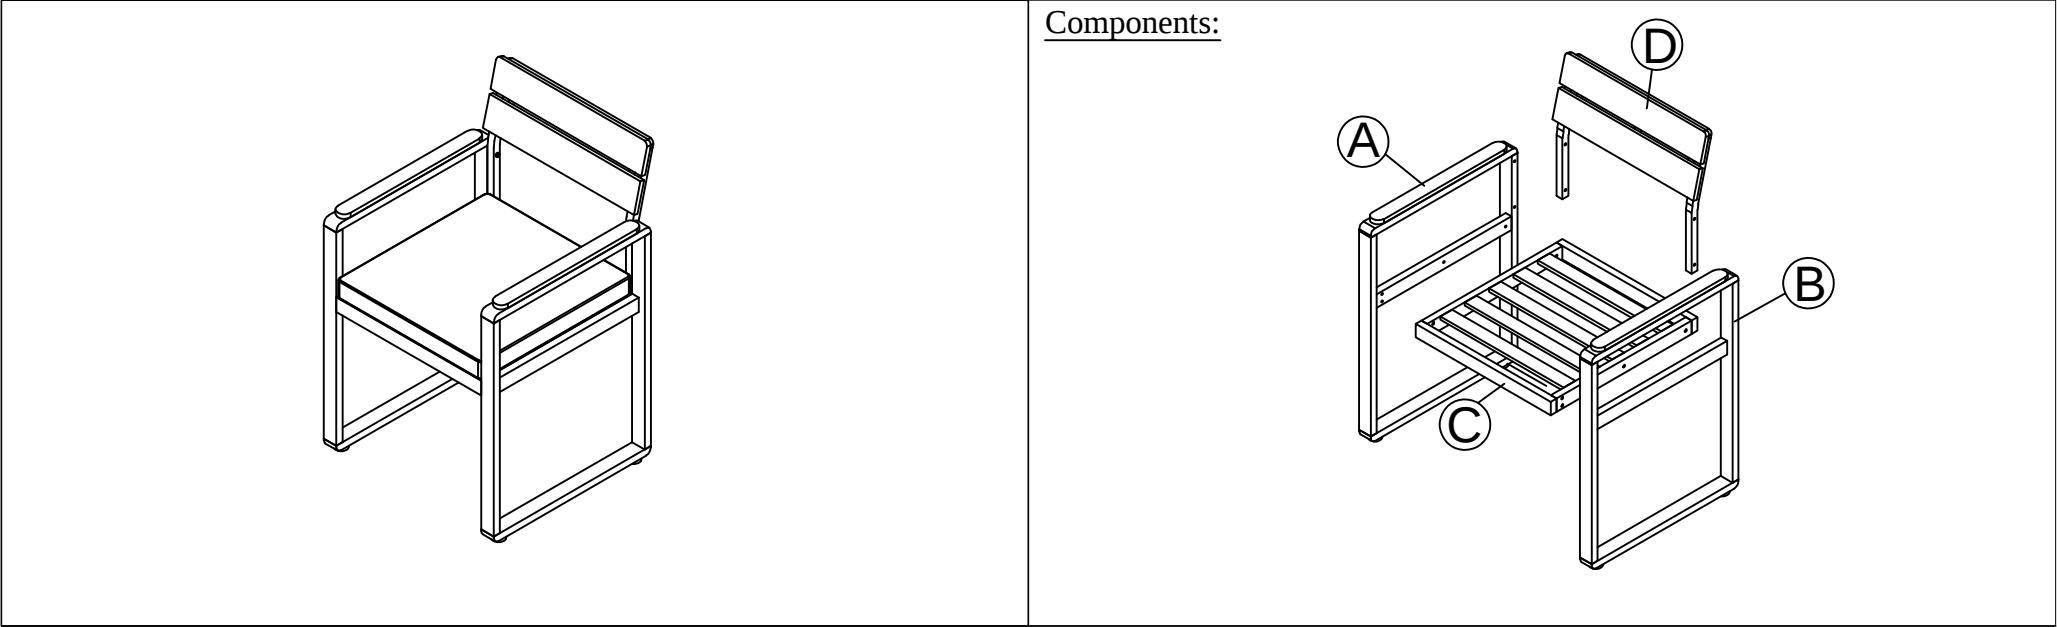


ASSEMBLY INSTRUCTIONS

TOPA DINING CHAIR WITH CUSHION




HARDWARES

①		x12	②		x12	③		x1
	Bolt M6x35mm			Rondelle Ø6.5x16x1mm			Allen Key M4mm	


PARST

A

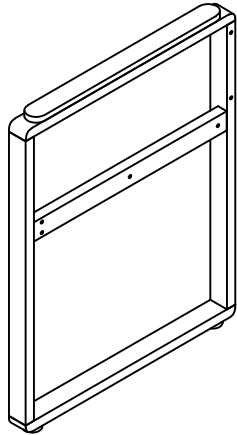


X1

B

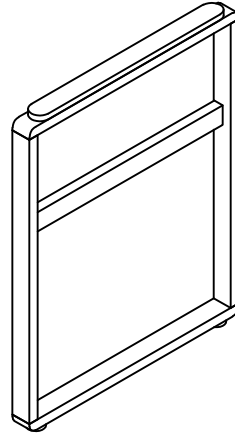


X1

C

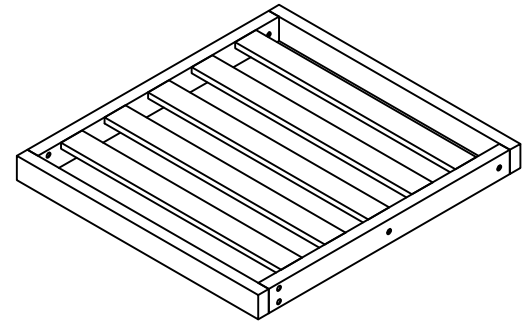


X1

D

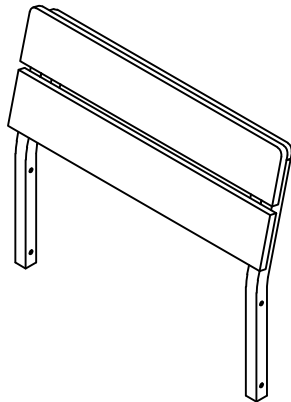


X1


E

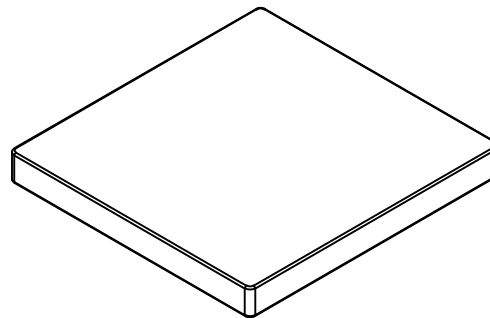

X1

Step 1


①x8	 Bolt M6x35mm	②x8	 Rondelle Ø6.5x16x1mm
③x1	 Allen Key M4mm		

 80%








 80% ✓

 80% ✗

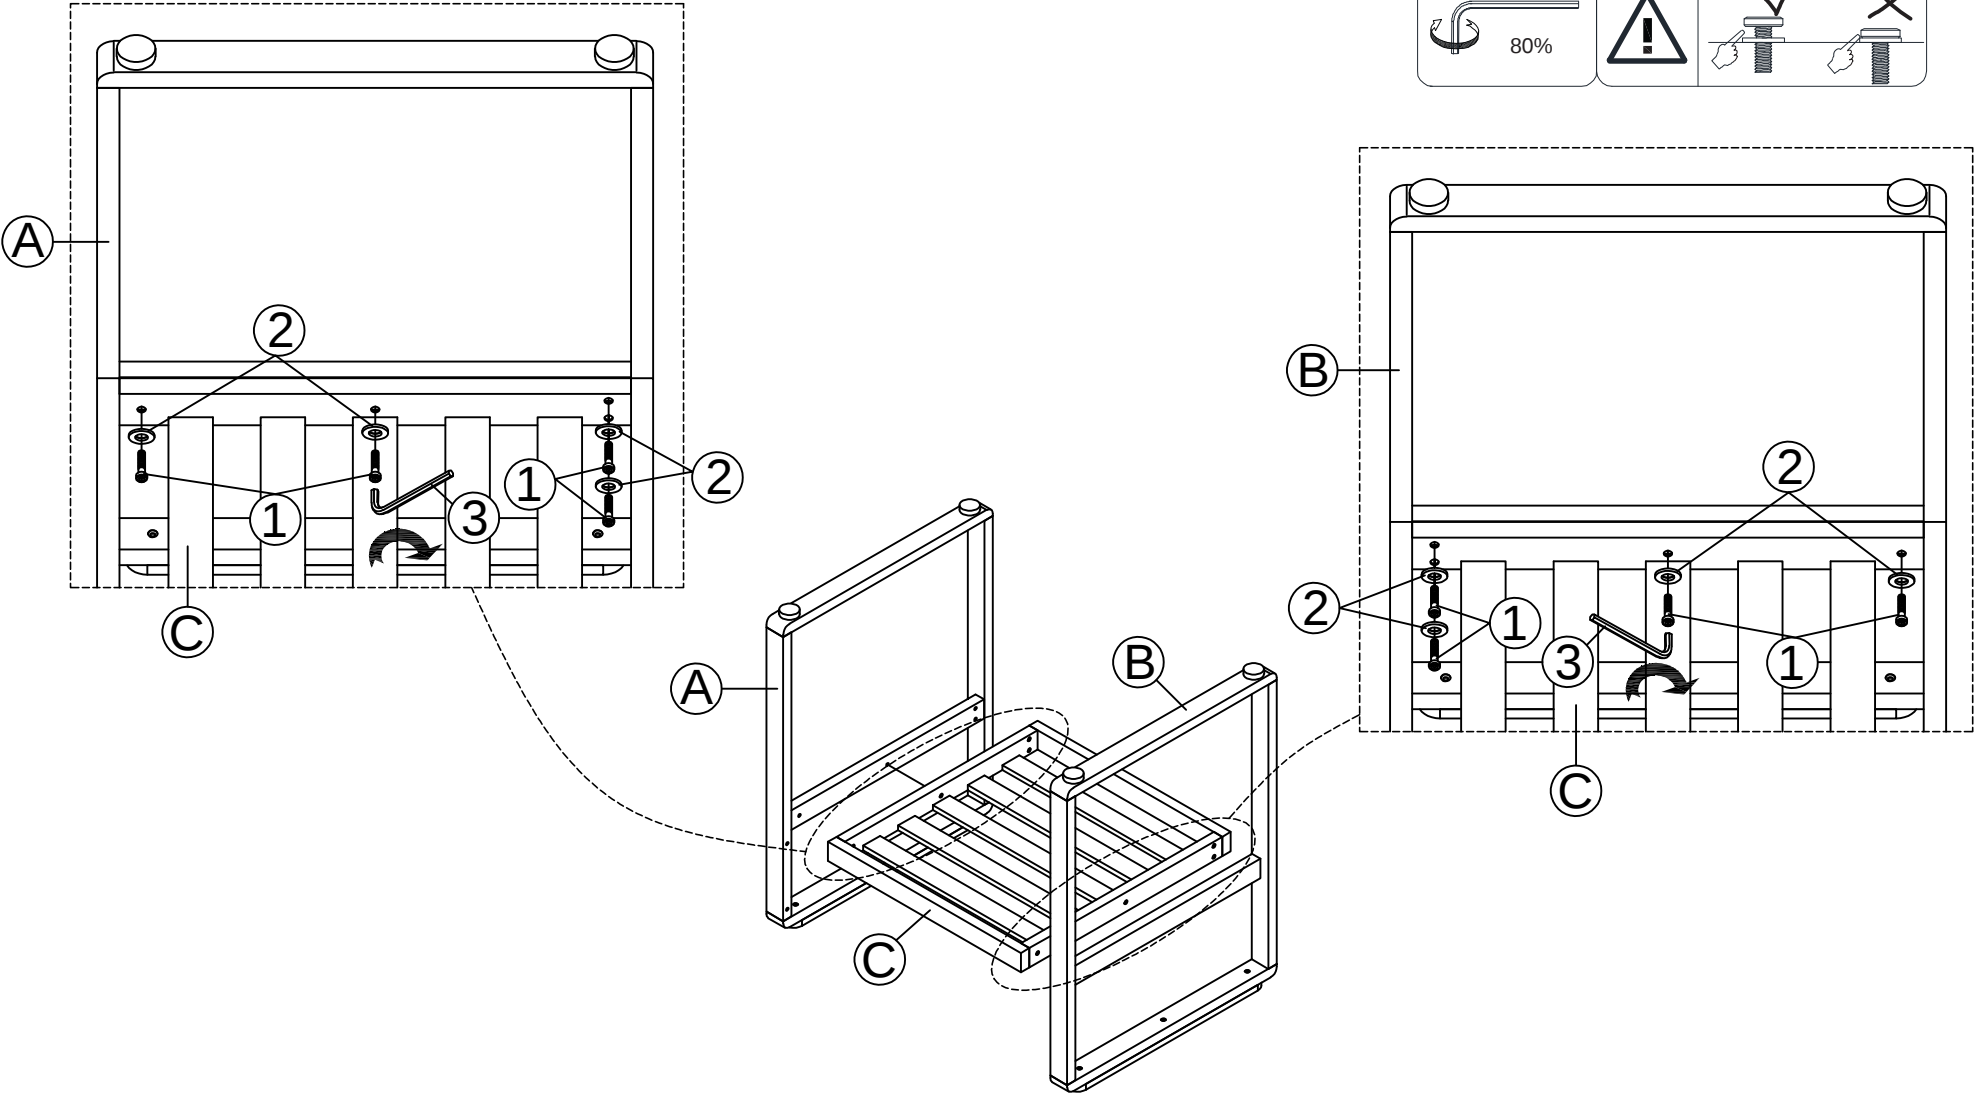


Step 2

①x4	 Bolt M6x35mm	②x4	 Rondelle Ø6.5x16x1mm
③x1	 Allen Key M4mm		
 100%		  100%  100%	

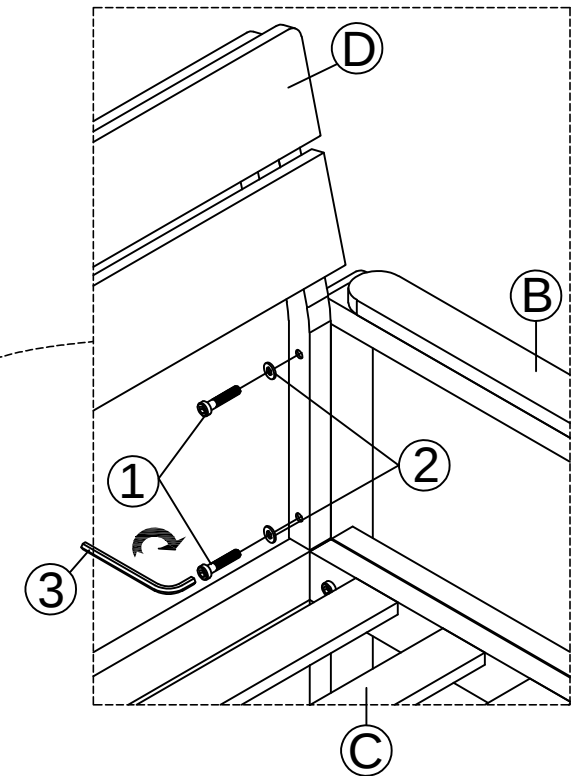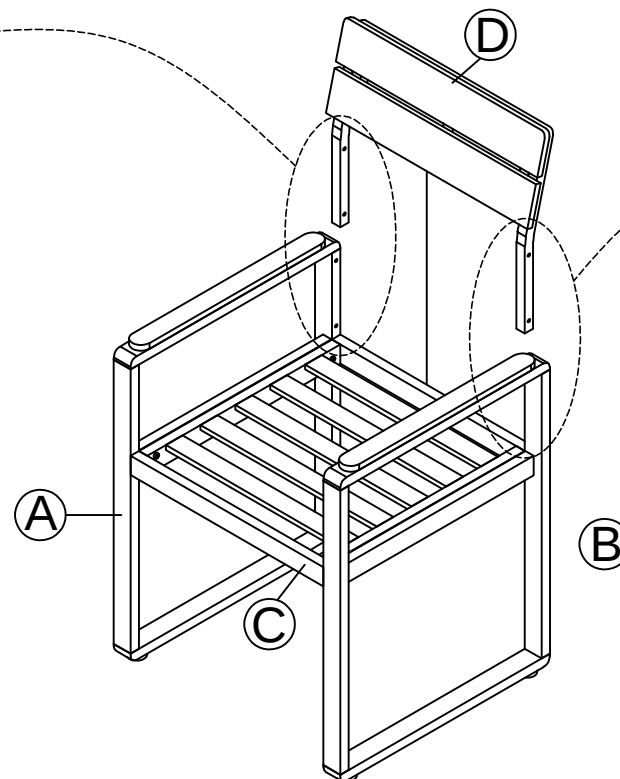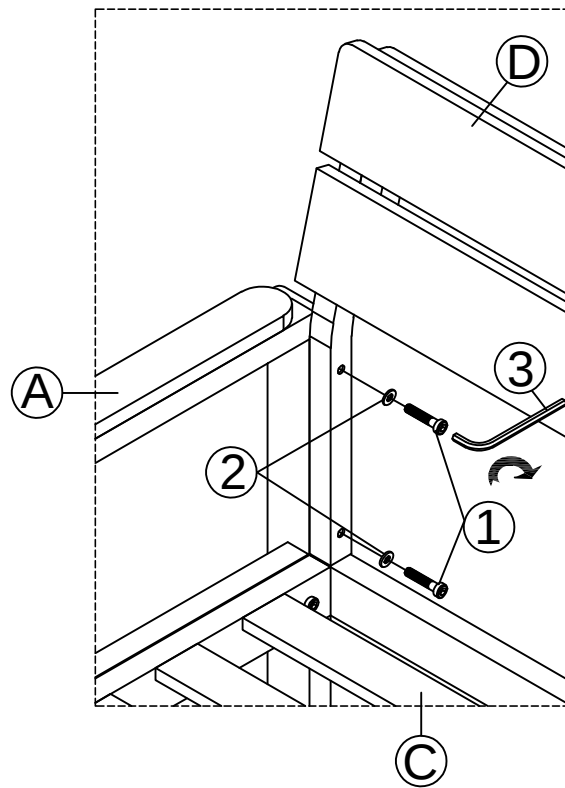

Step 3

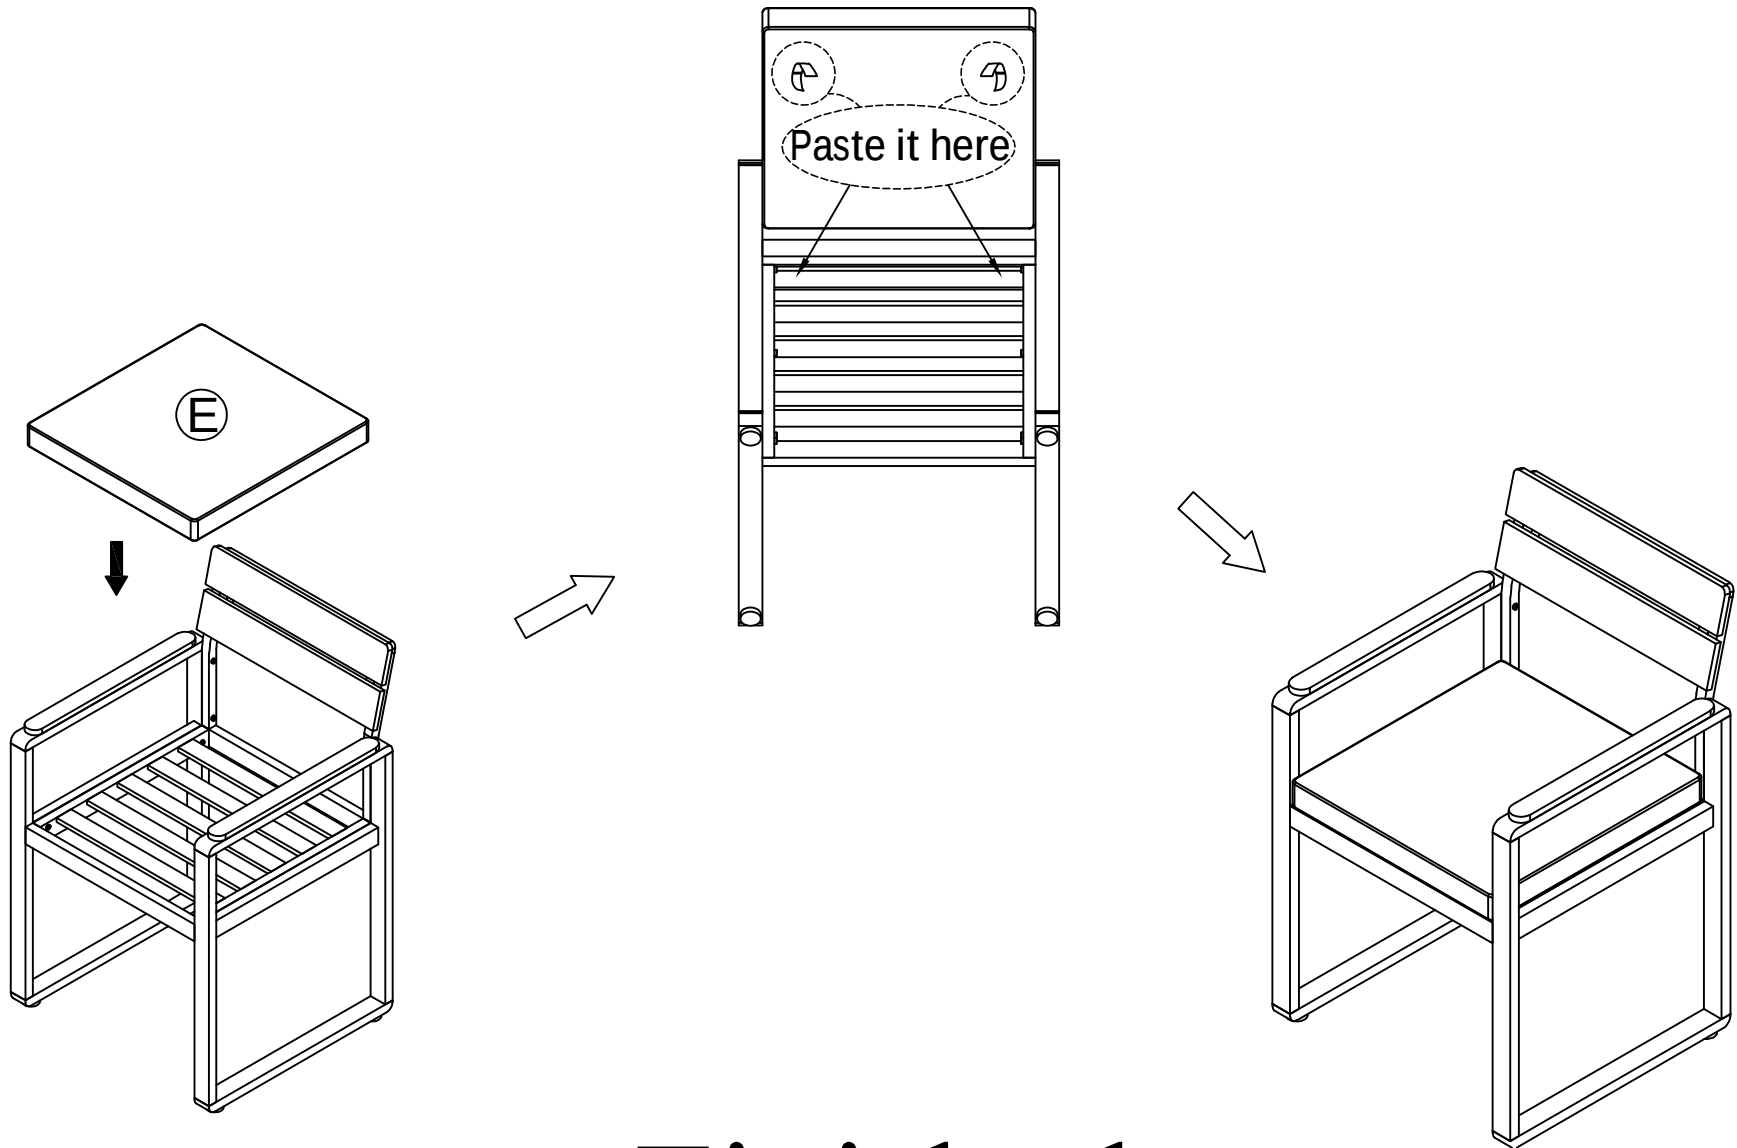

Finished