
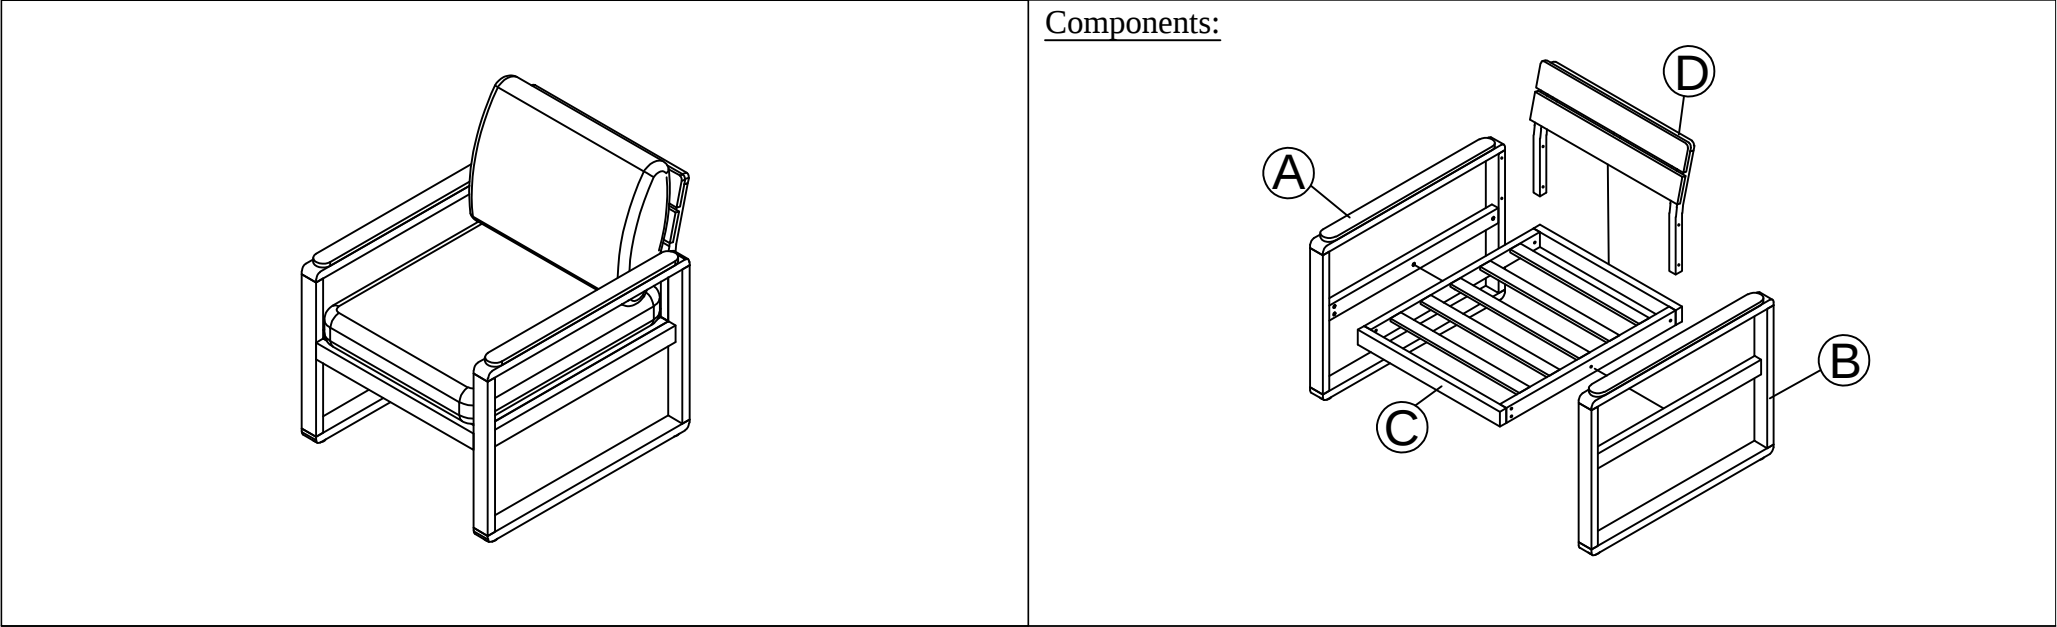


ASSEMBLY INSTRUCTIONS

TOPA LOUNGE CHAIR




HARDWARES

①		x12	②		x12	③		x1
	Bolt M6x40mm			Rondelle Ø6.5x16x1mm			Allen Key M4mm	


PARST

A

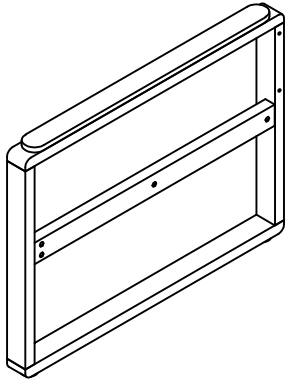


X1

B

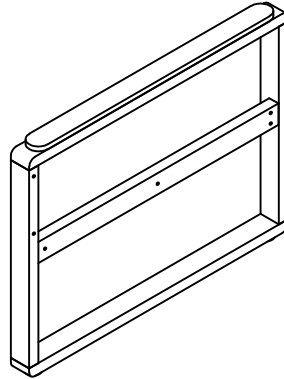


X1

C

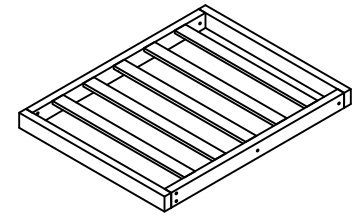


X1

D

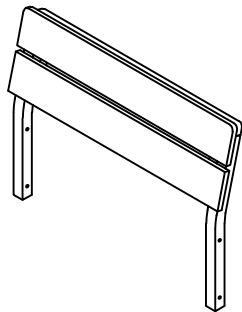


X1

E

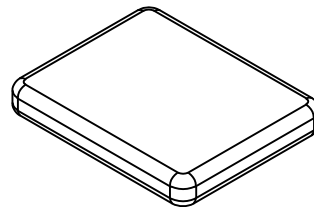


X1



F


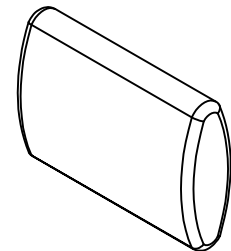


X1



Step 1



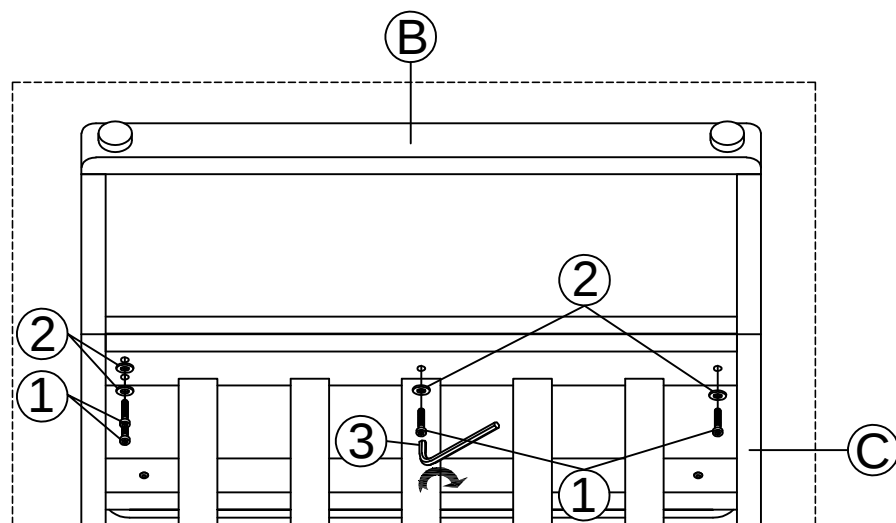


①x8	 Bolt M6x40mm	②x8	 Rondelle Ø6.5x16x1mm
③x1	 Allen Key M4mm		
 80%		 80% ✓ 80% ✗	

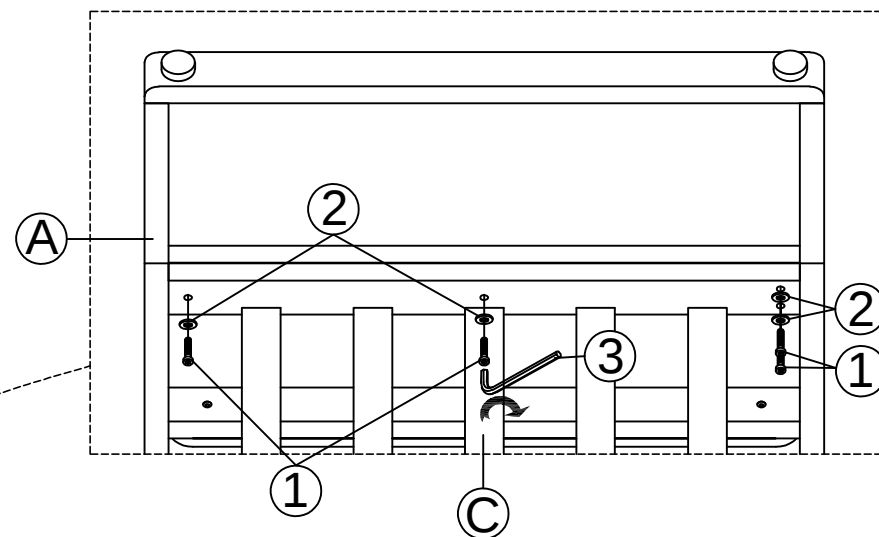
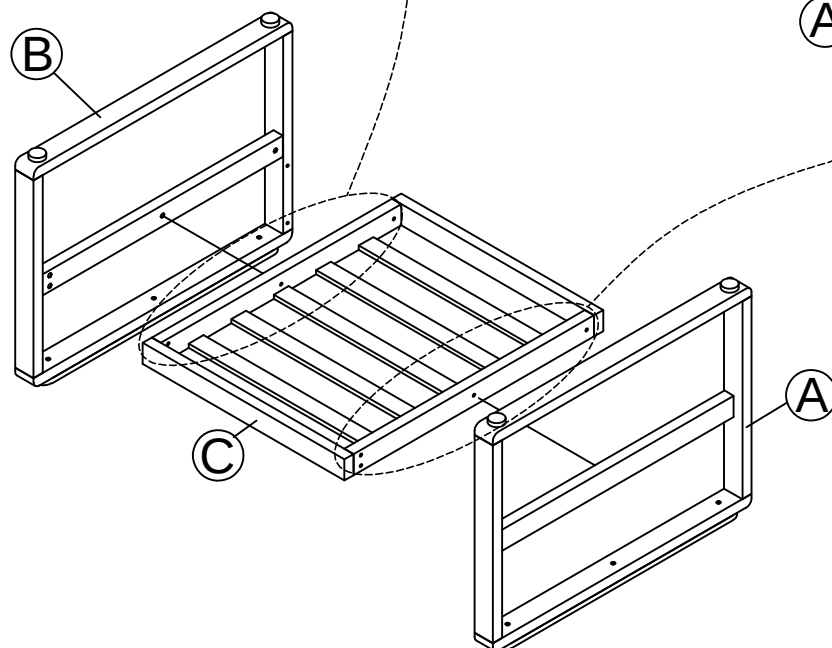


Step 2

①x4	 Bolt M6x40mm	②x4	 Rondelle Ø6.5x16x1mm
③x1	 Allen Key M4mm		
 100%		 100%  100%	

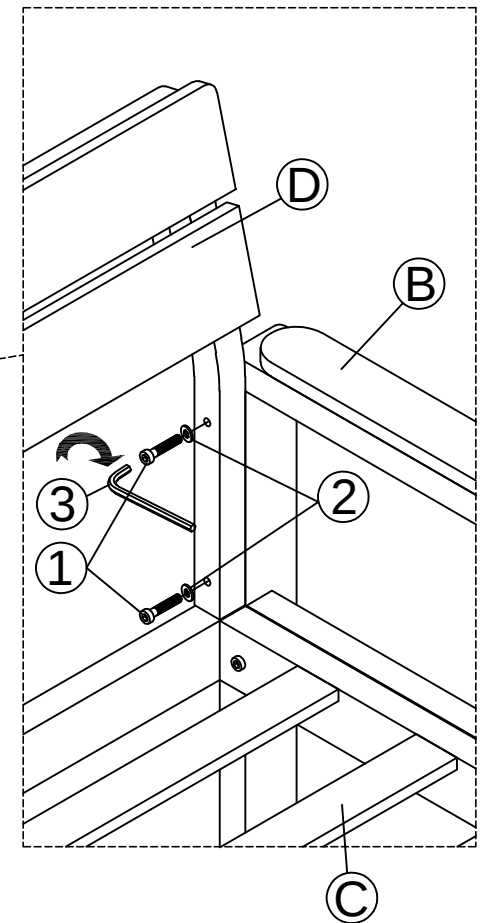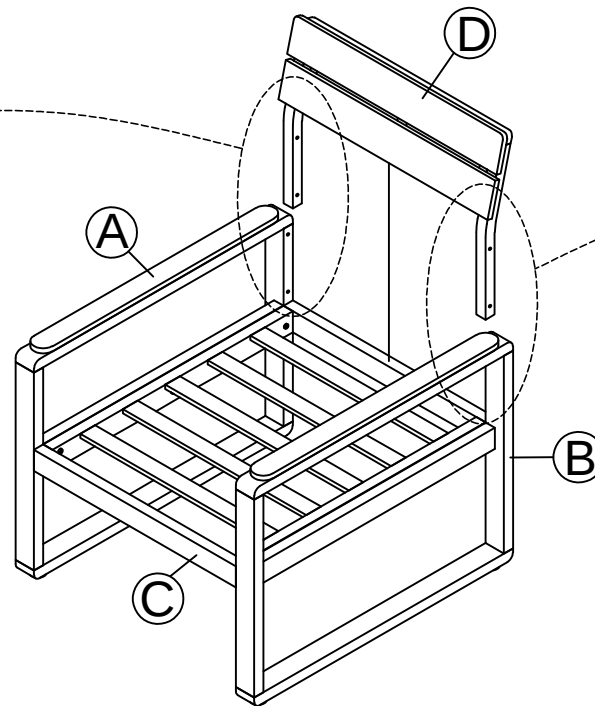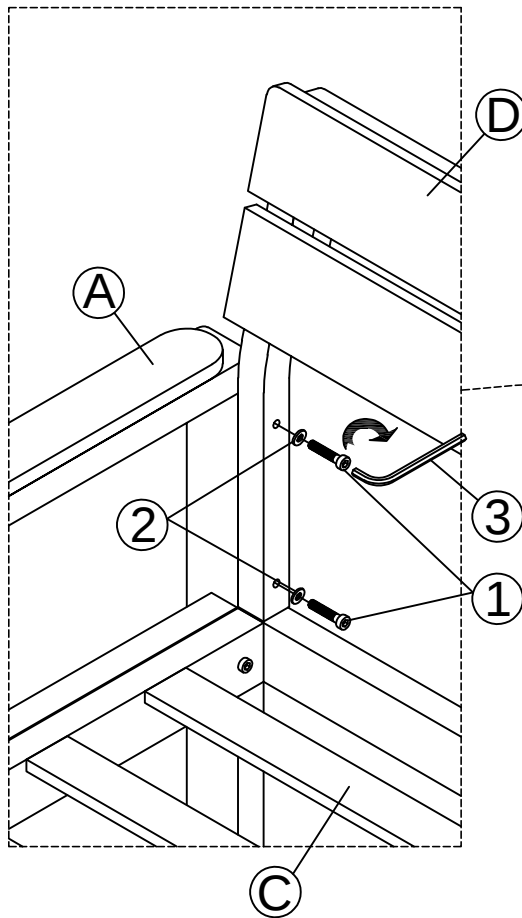

Step 3

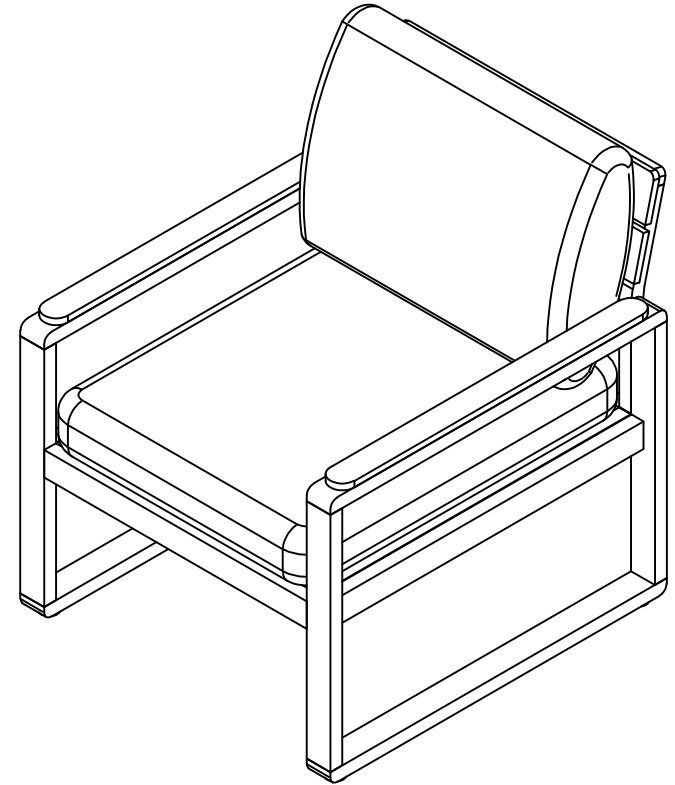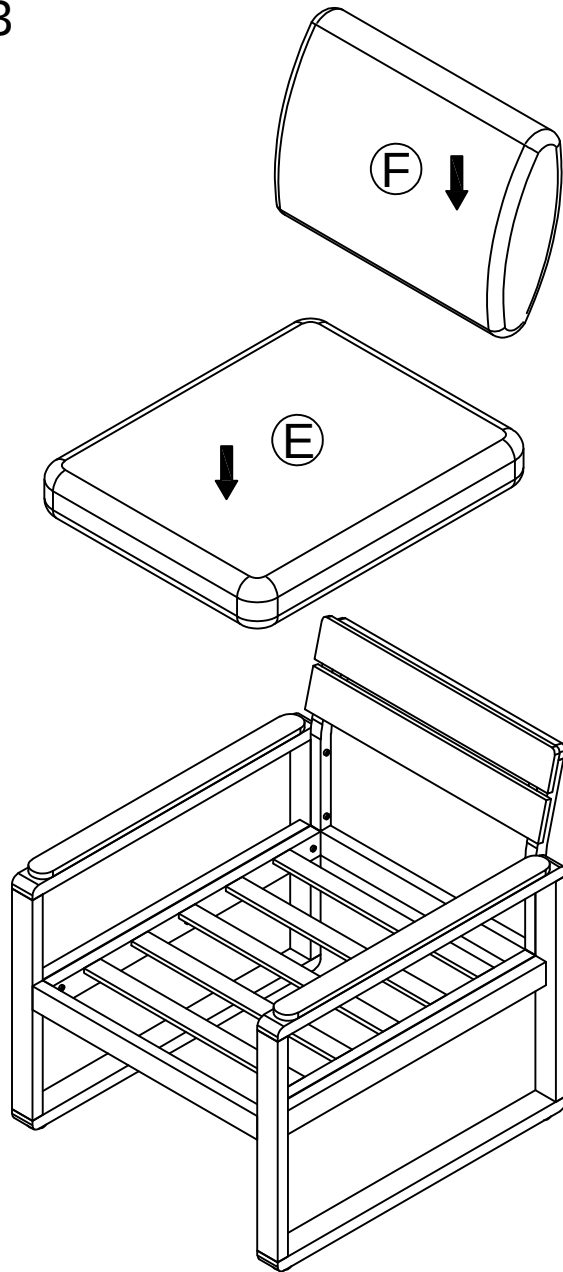

Finished