
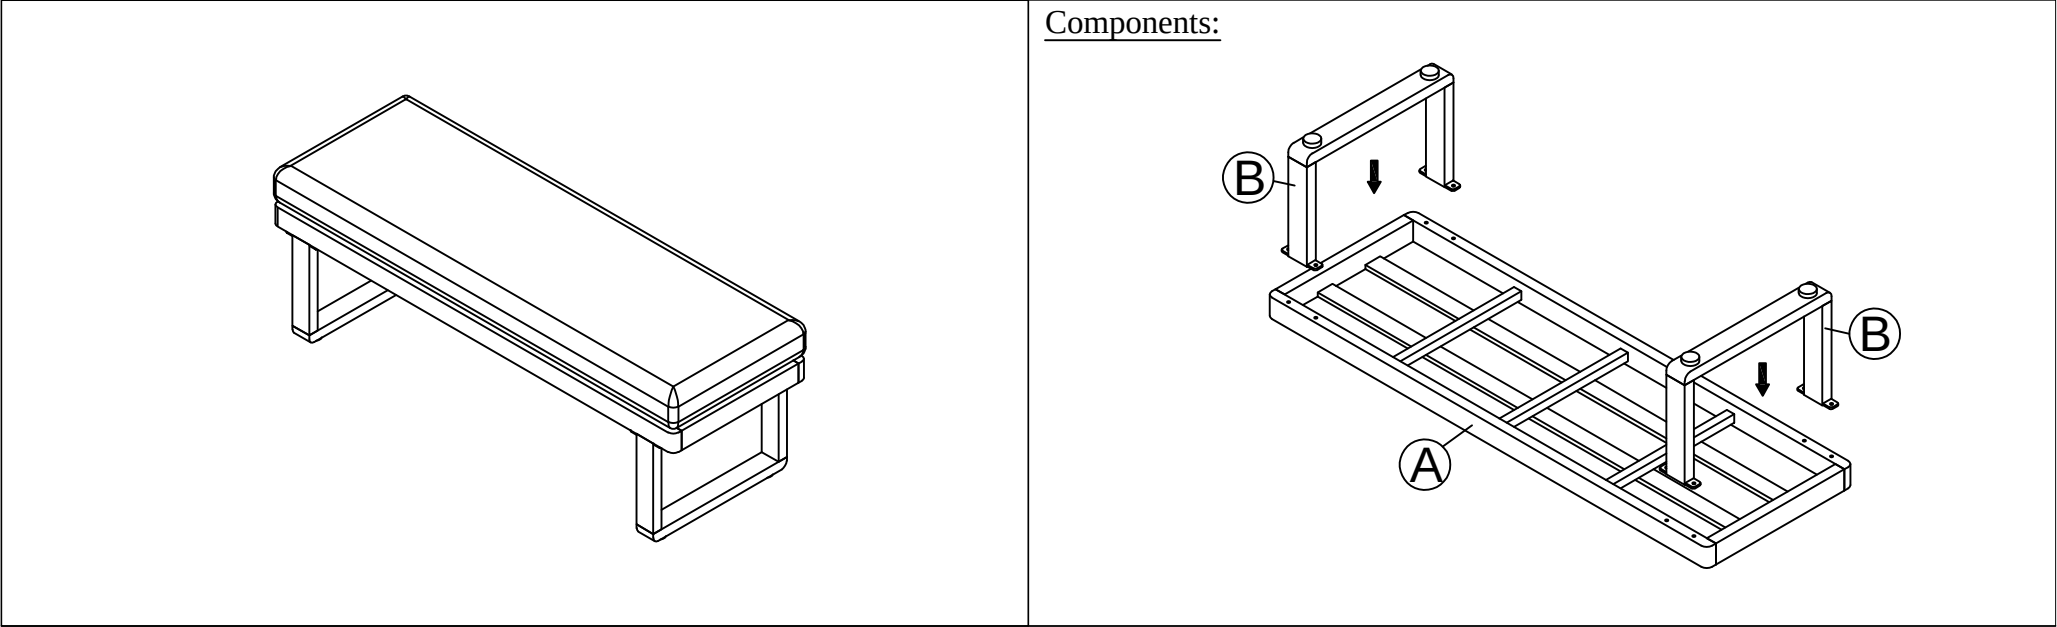


ASSEMBLY INSTRUCTIONS

TOPA LONG OTTOMAN WITH CUSHION




HARDWARES

①		x8	②		x8	③		x1
	Bolt M6x20mm			Rondelle Ø6.5x16x1mm			Allen Key M4mm	


PARST

A

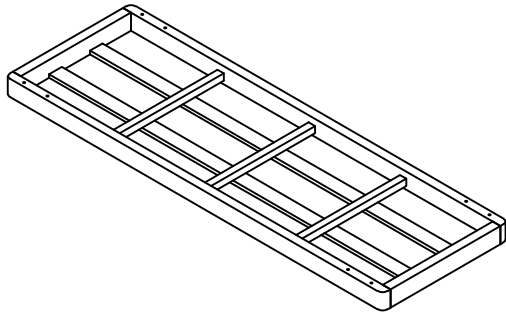


X1

B

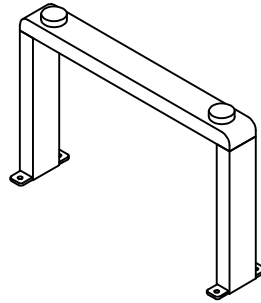


X2


C

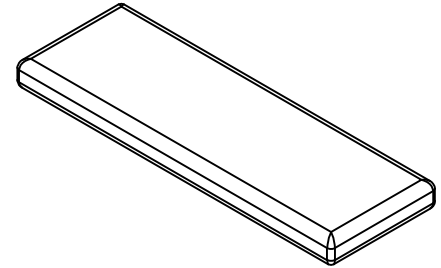


X1

Step 1

①x8	 Bolt M6x20mm	②x8	 Rondelle Ø6.5x16x1mm
③x1	 Allen Key M4mm		
 100%		 100%  100%	

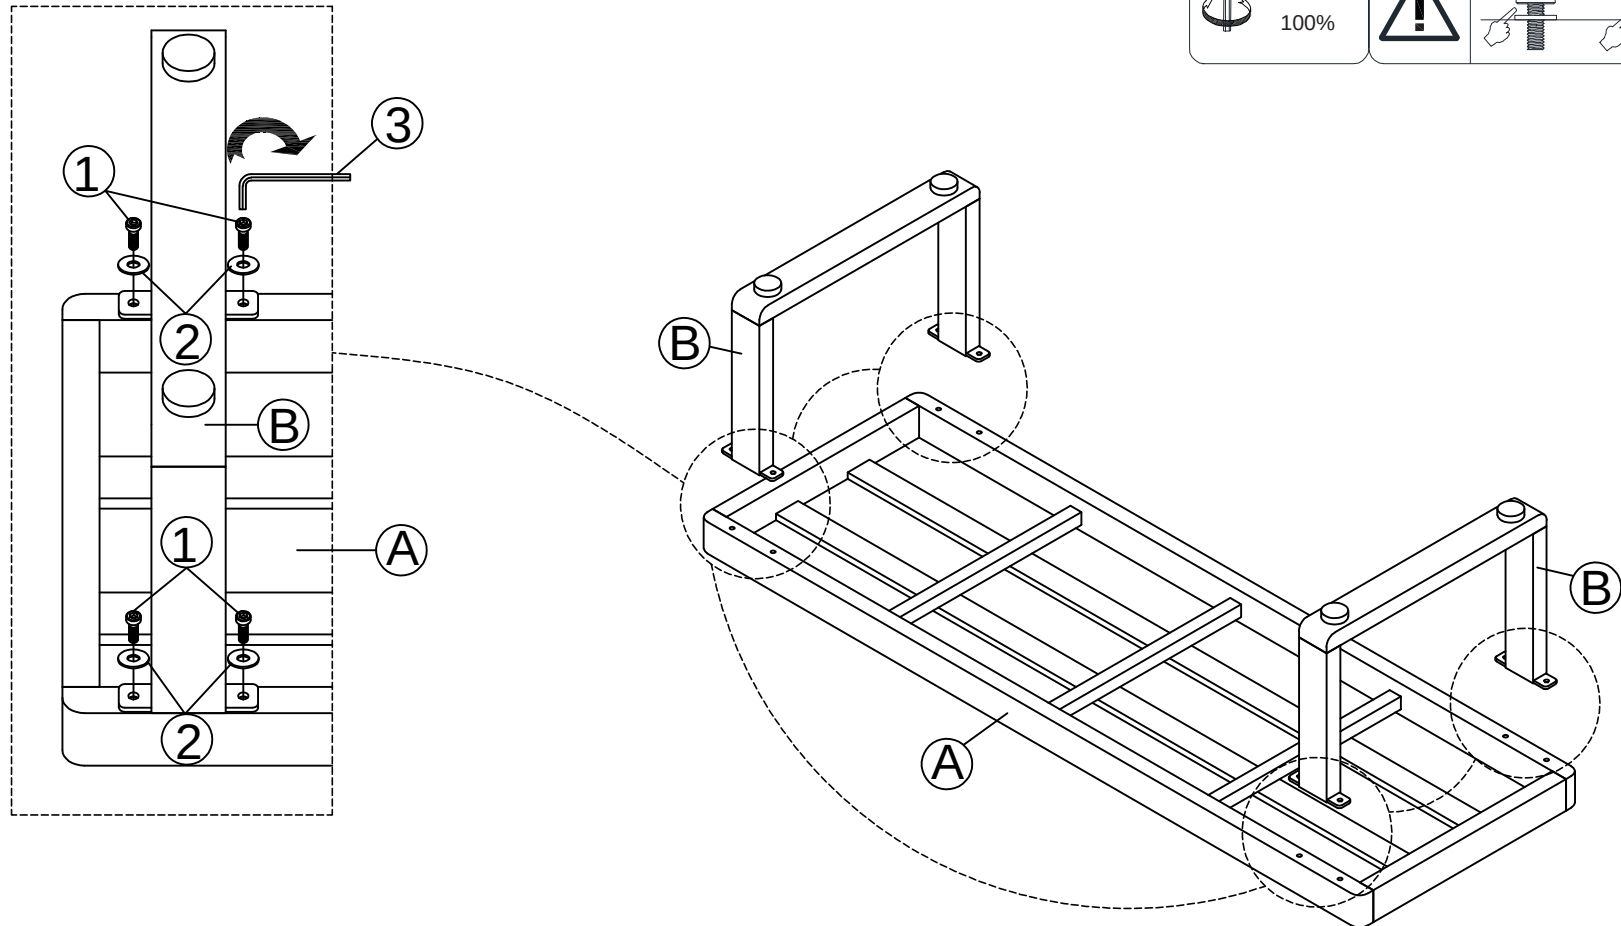

Step 2

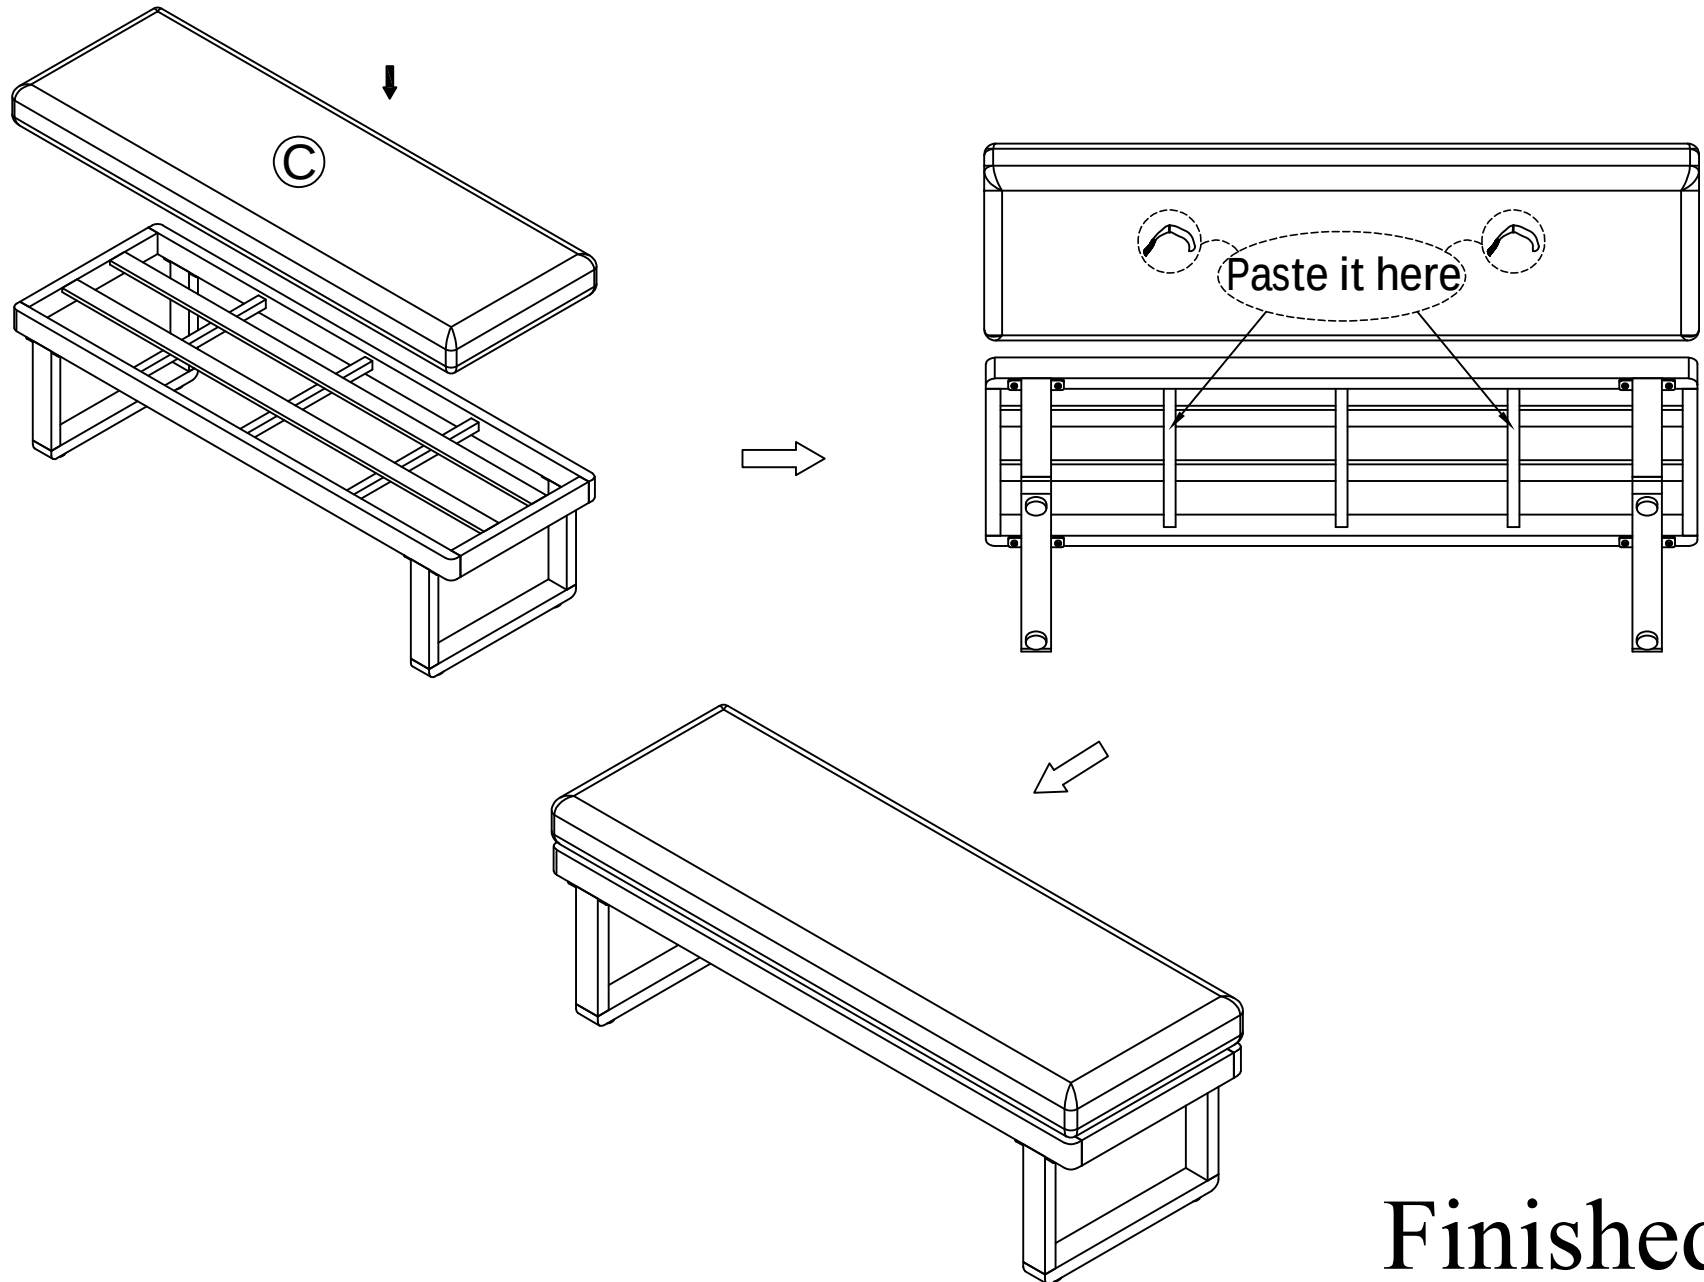

Finished