



ASSEMBLY INSTRUCTIONS





TOPA DINING TABLE 1800 x 900mm

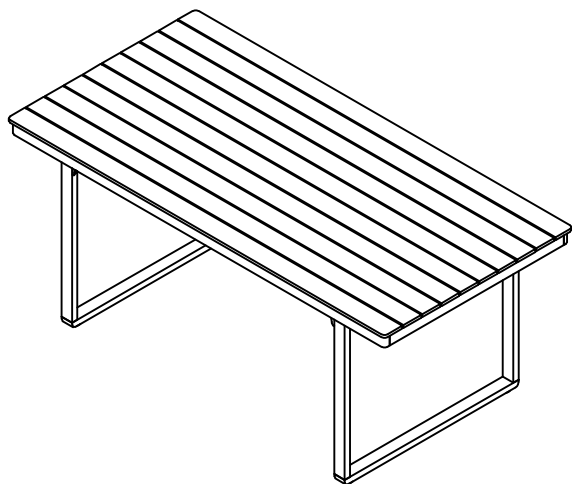

Components:

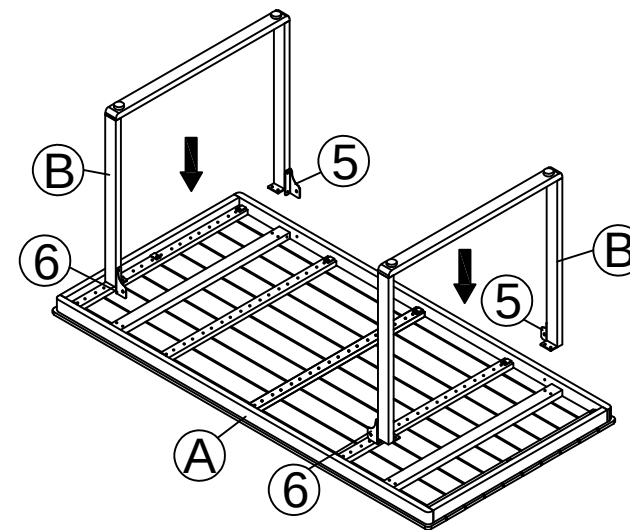


HARDWARES

①		x12	②		x8	③		x20	④		x1
Bolt M6x15mm			Bolt M6x20mm			Rondelle Ø6.5x16x1mm			Allen Key M4mm		
⑤		x2	⑥		x2						
Past right			Past left								


PARST

A

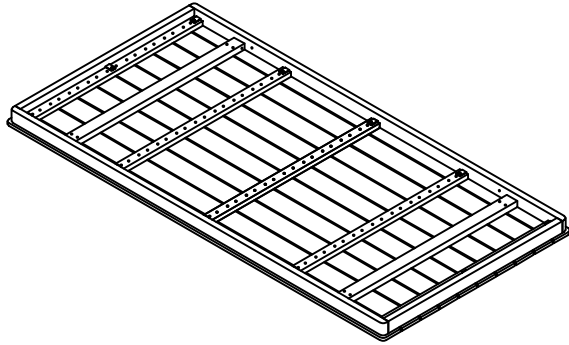





X1



B


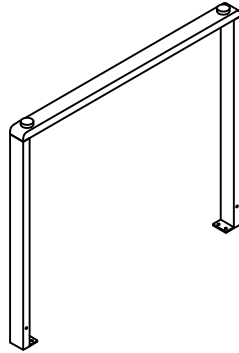



X2

Step 1

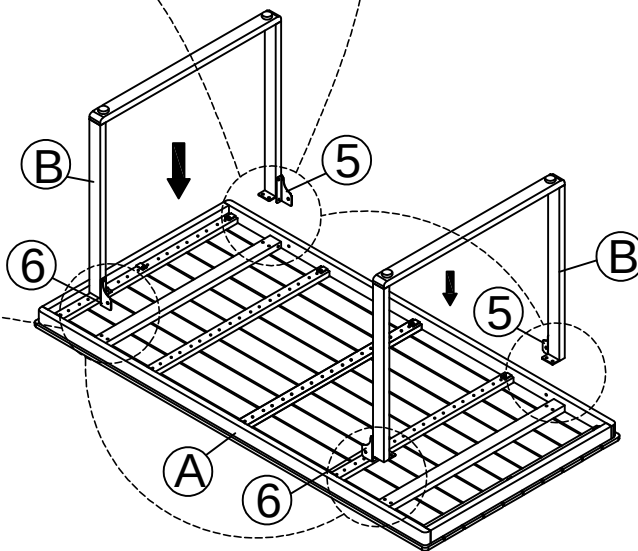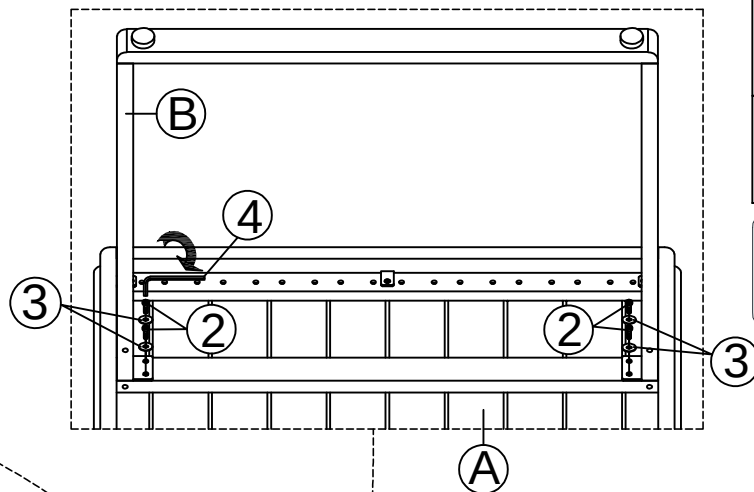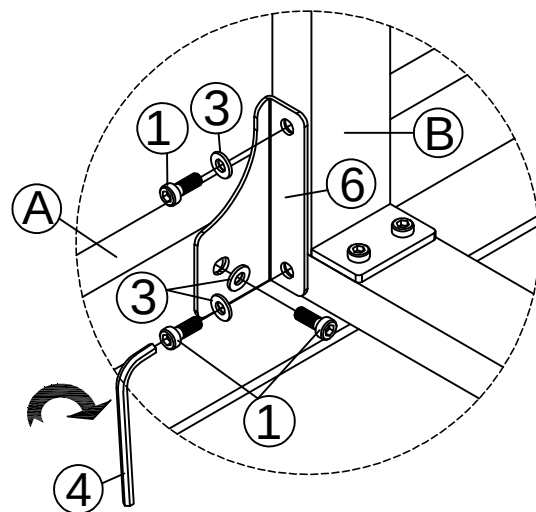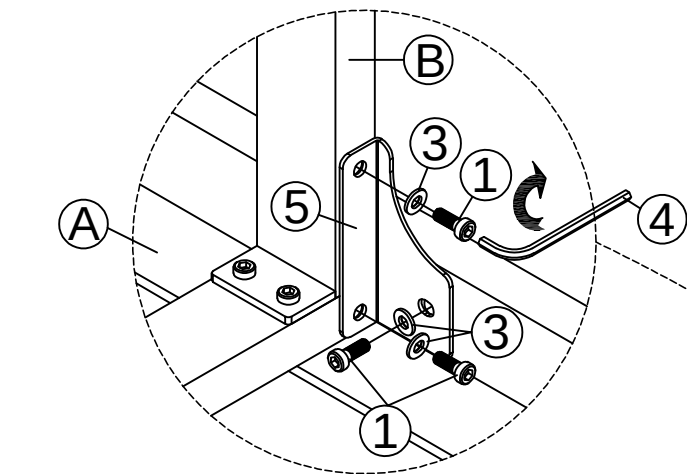

① X12	 Bolt M6x15mm	② X8	 Bolt M6x20mm
③ X20	 Rondelle Ø6.5x16x1mm	④ X1	 Allen Key M4mm
⑤ X2	 Past right	⑥ X2	 Past left

 100%
 
 100%

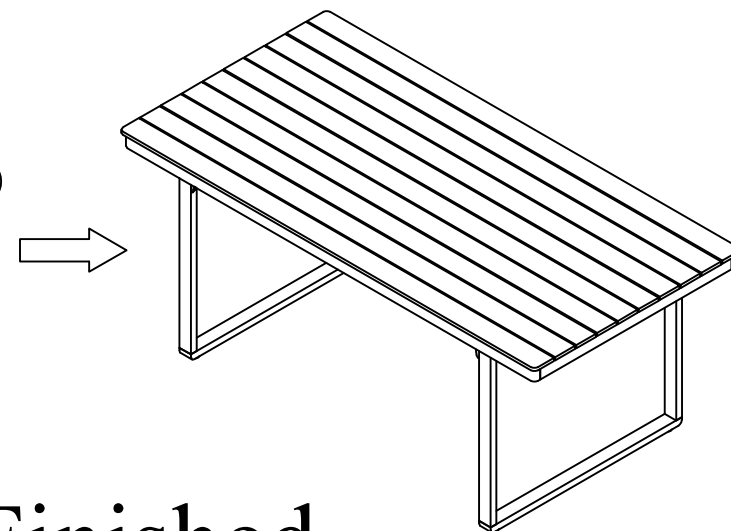

Finished