



ASSEMBLY INSTRUCTIONS




TOPA DINING TABLE 2200 x 1000mm

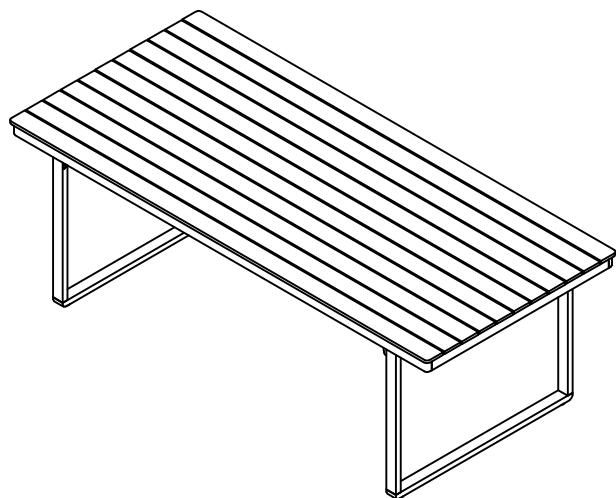

Components:

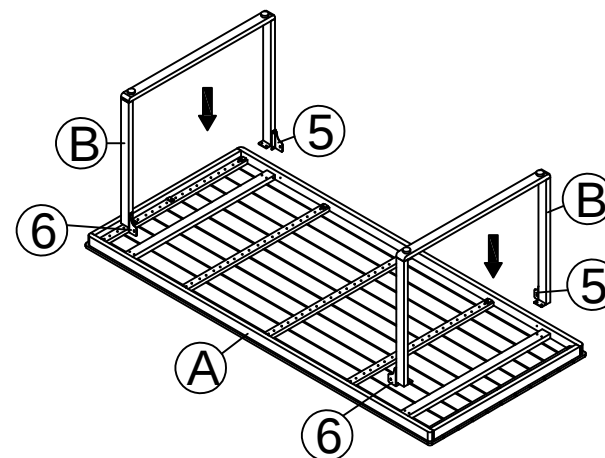


HARDWARES

①	 Bolt M6x15mm	x12	②	 Bolt M6x20mm	x8	③	 Rondelle Ø6.5x16x1mm	x20	④	 Allen Key M4mm	x1
⑤	 Past right	x2	⑥	 Past left	x2						


PARST

A

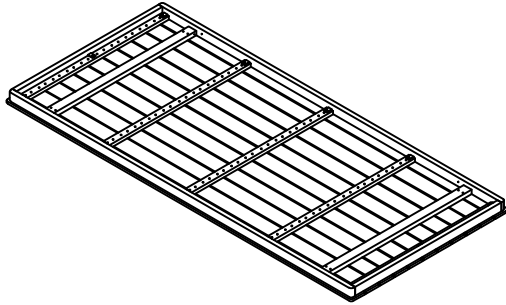





X1





B

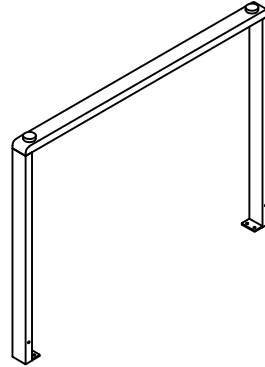


X2

Step 1

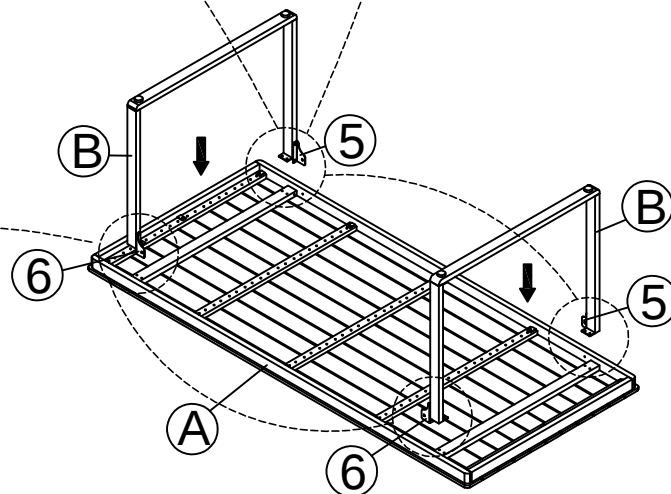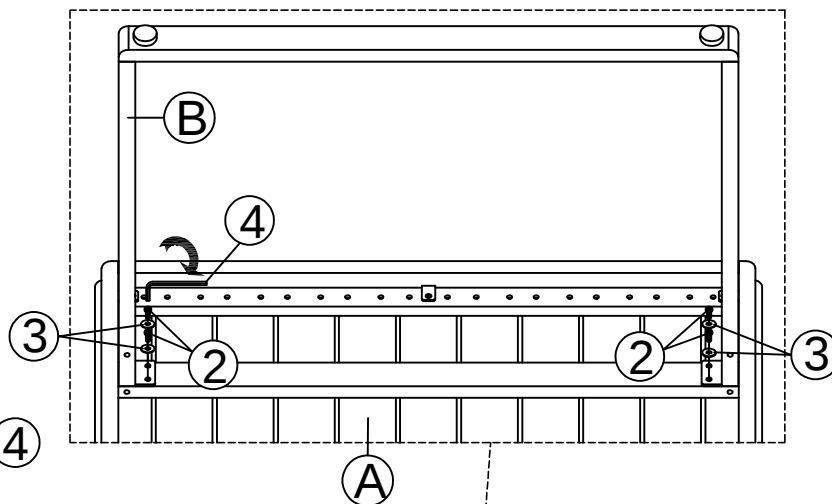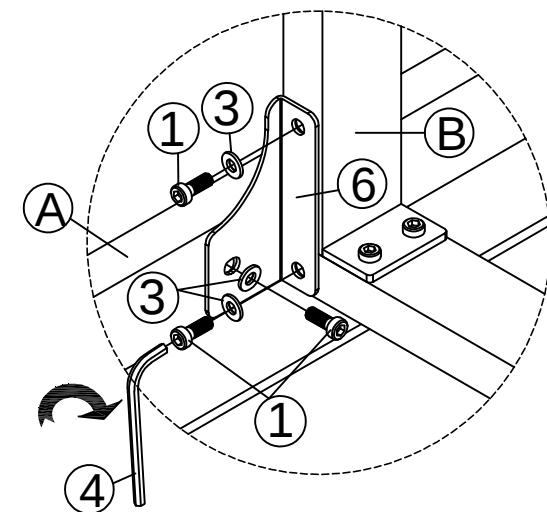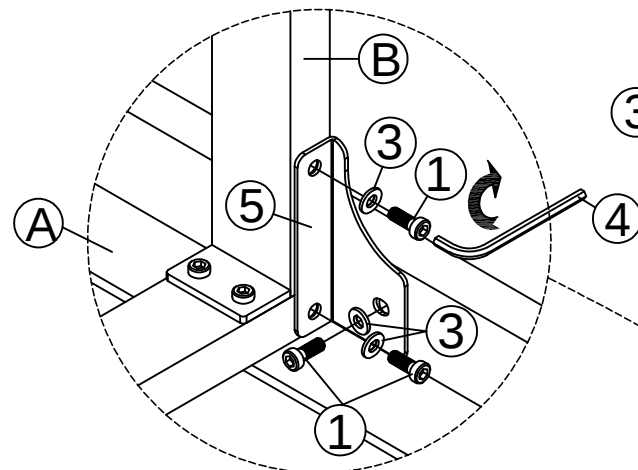

① X12	 Bolt M6x15mm	② X8	 Bolt M6x20mm
③ X20	 Rondelle Ø6.5x16x1mm	④ X1	 Allen Key M4mm
⑤ X2	 Past right	⑥ X2	 Past left
 100%   100%			

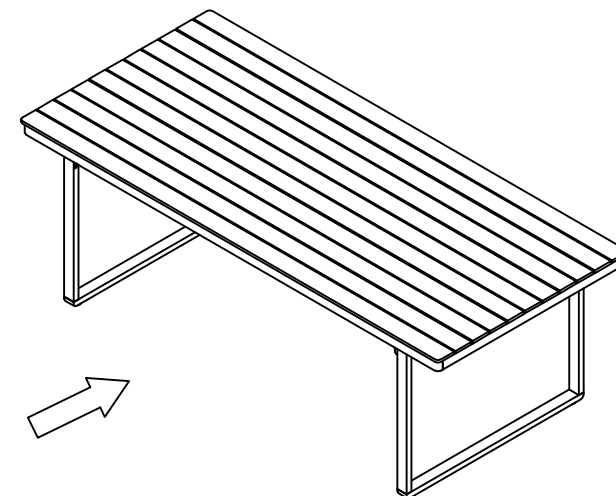

Finished