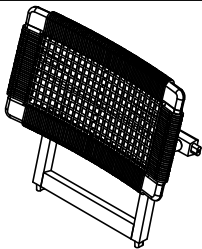
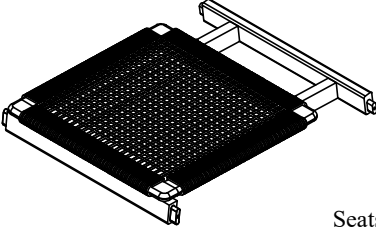
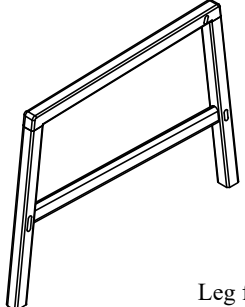
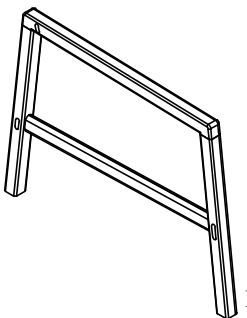
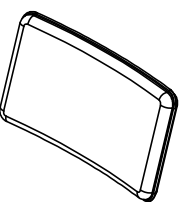
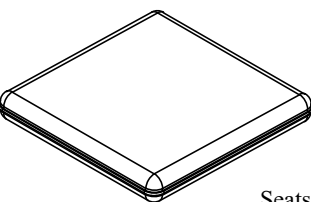



ASSEMBLY INSTRUCTIONS SOFA CHAIR

CODE	PARAS	Q.TY
A	 Backrest	2
B	 Seats	2
C	 Leg frame (R)	2
D	 Leg frame (L)	2
E	 Back cushion	2
F	 Seats cushion	2

HARDWARES

CODE	PICTURES	QTY
1	 Screw M6 x 70 mm	4
2	 Bolt M6 x 70 mm	13
3	 Bond 6 x 15mm	12
4	 Allen Key M4 mm	2


Step 1

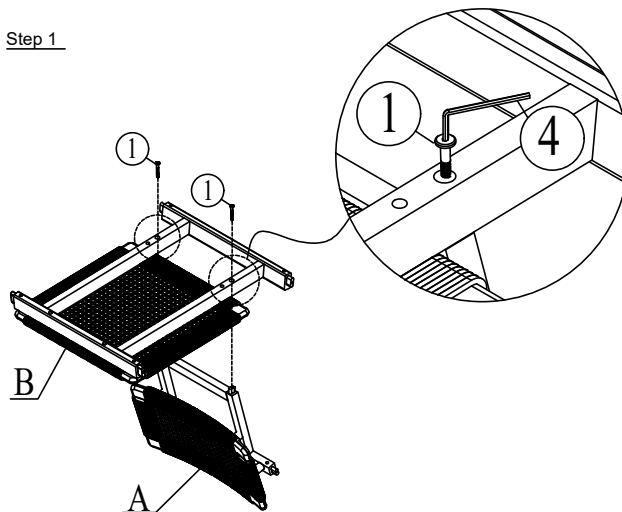

X2

1  2

Step 2

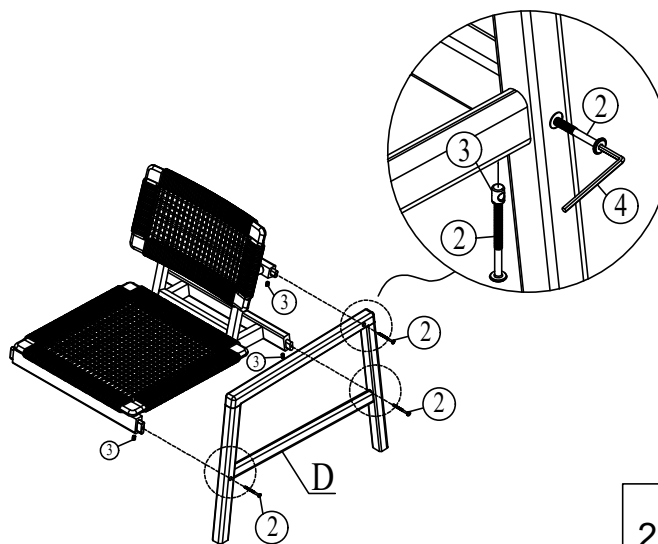


X2

2  3

3  3

Step 3

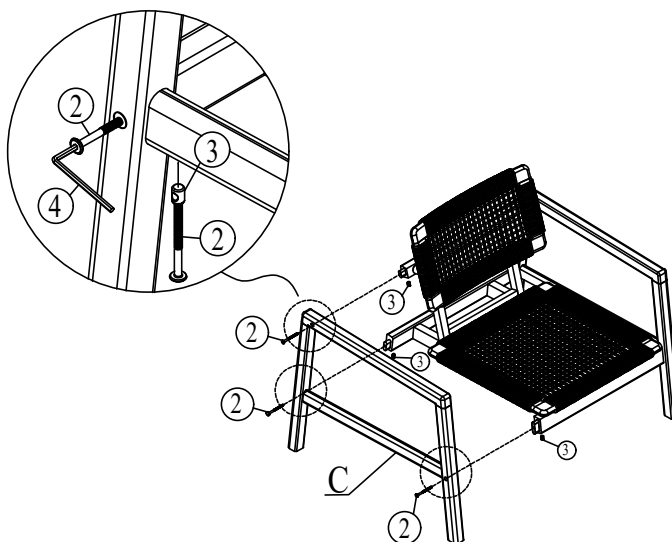


X2


2  3

3  3

Step 4

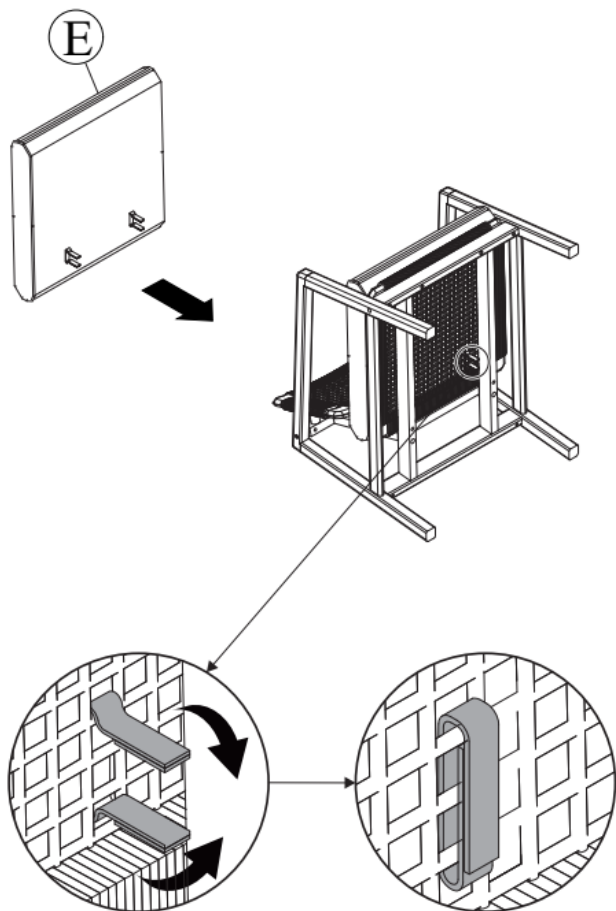

Step 5

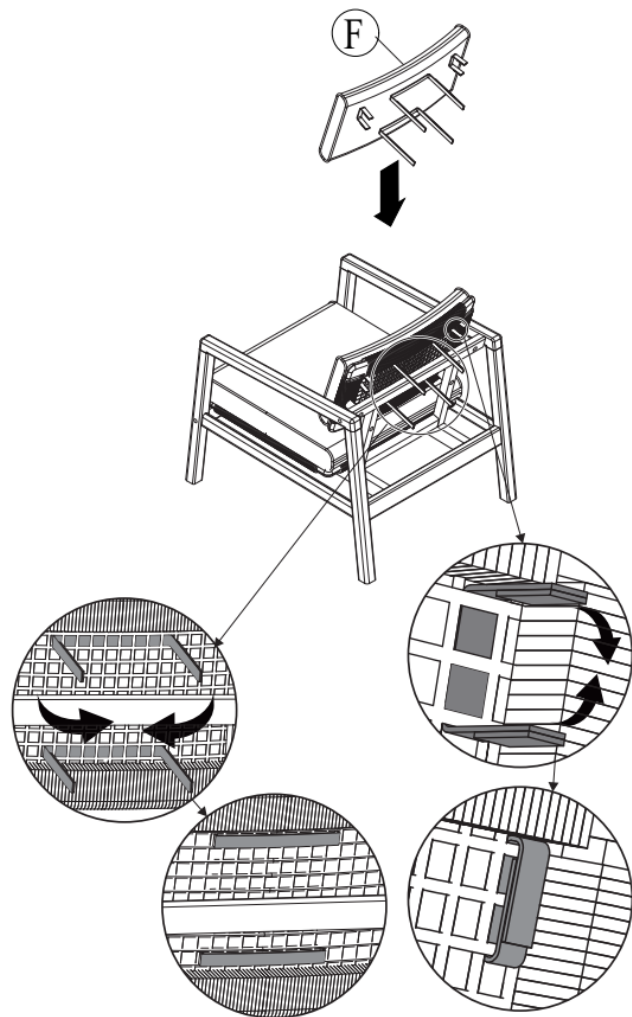

Finished

