
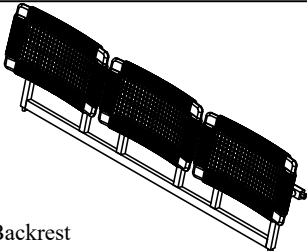
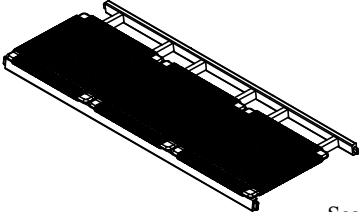
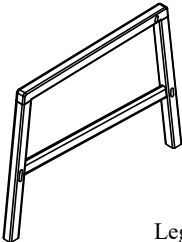
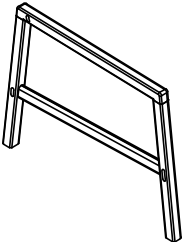
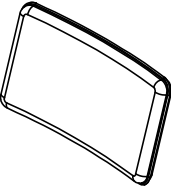
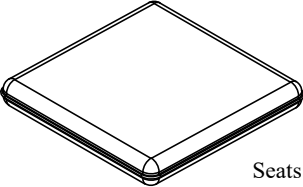
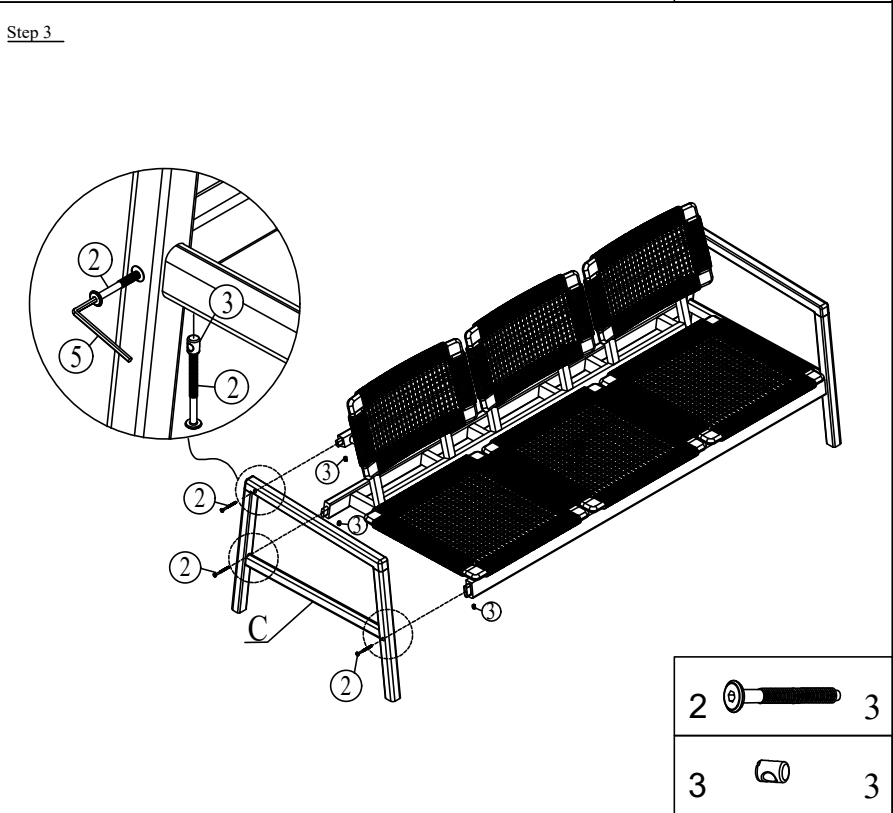
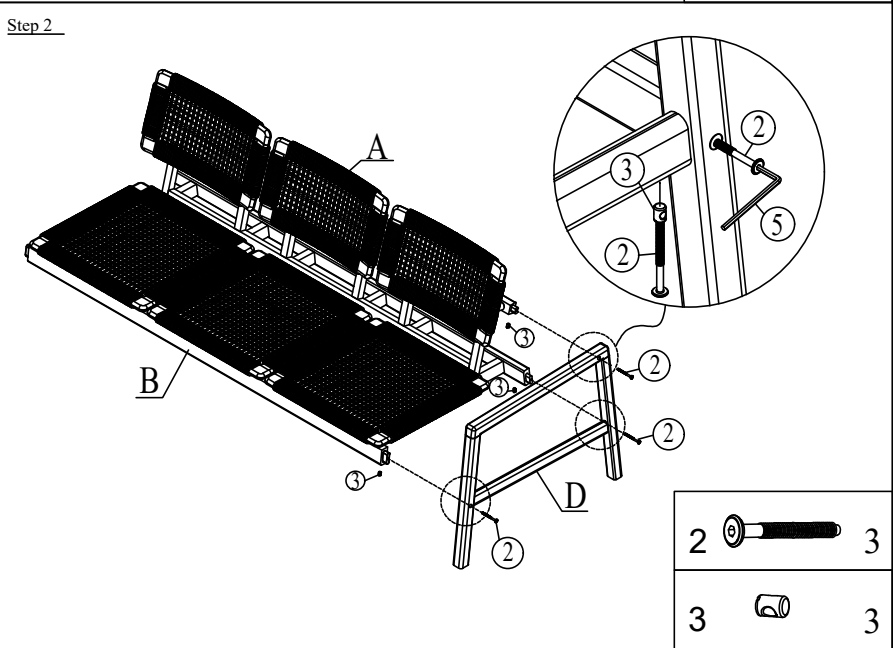




ASSEMBLY INSTRUCTIONS SOFFA 3 SEATER

CODE	PARTS	QTY
A	 Backrest	1
B	 Seats	1
C	 Leg frame (R)	1
D	 Leg frame (L)	1
E	 Middle Leg	2
F	 Back cushion	3
G	 Seats cushion	3


HARDWARES		
CODE	PICTURES	QTY
1	 Screw M6 x 70 mm	6
2	 Bolt M6 x 70 mm	7
3	 Bond 6 x 15 mm	6
4	 Bolt M6 x 45 mm	4
5	 Allen Key M4 mm	1

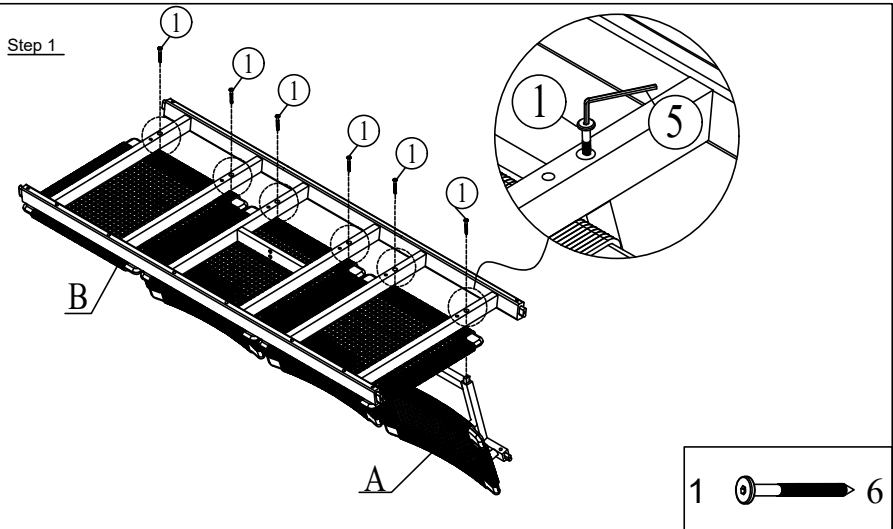


Step 4

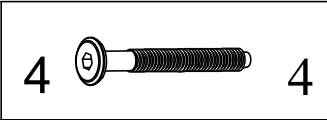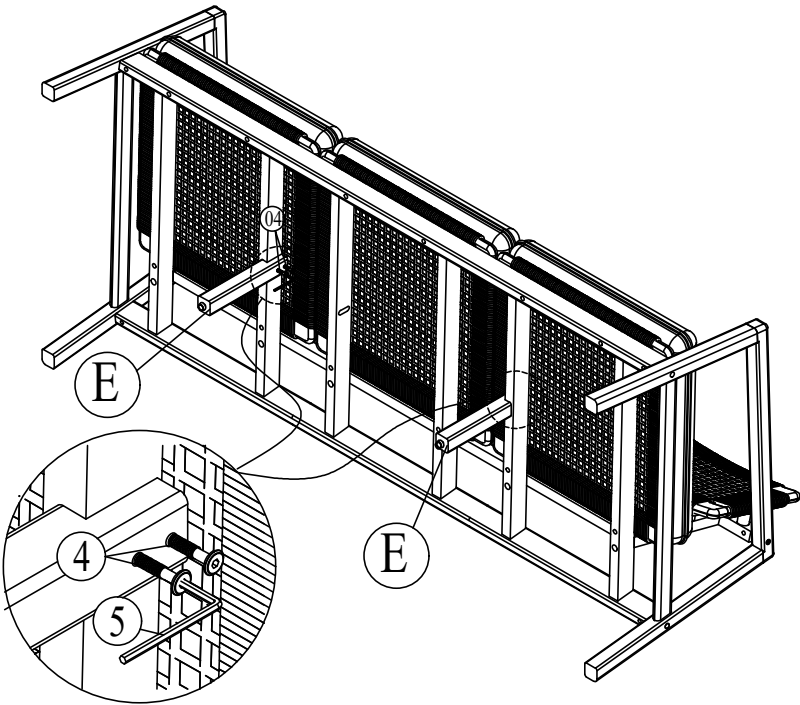

Step 5

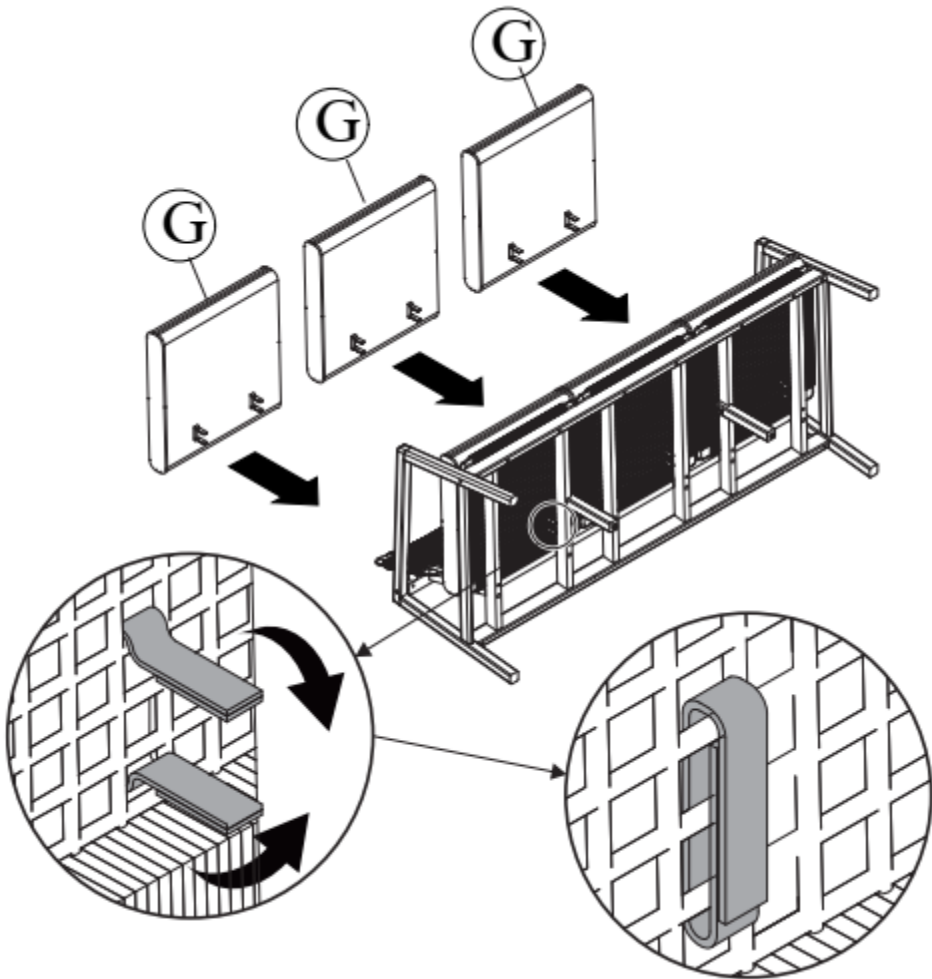

Step 6

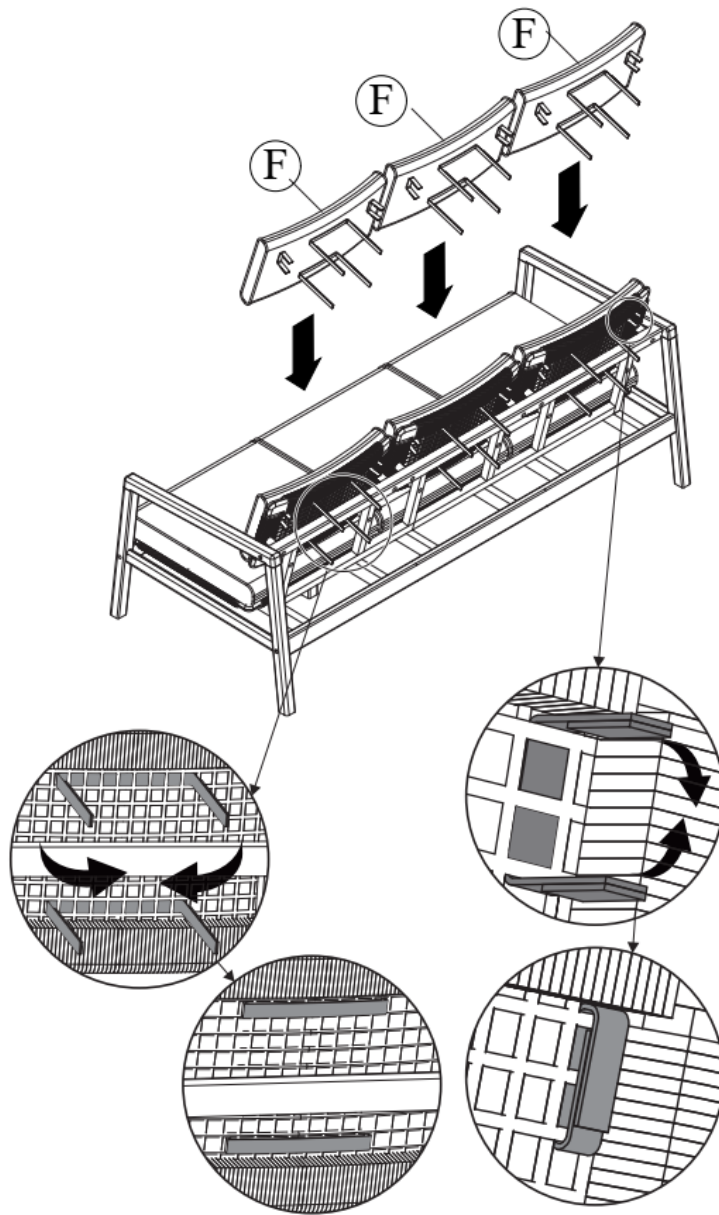

Finished

