



ASSEMBLY INSTRUCTIONS



TOPA CORNER SOFA

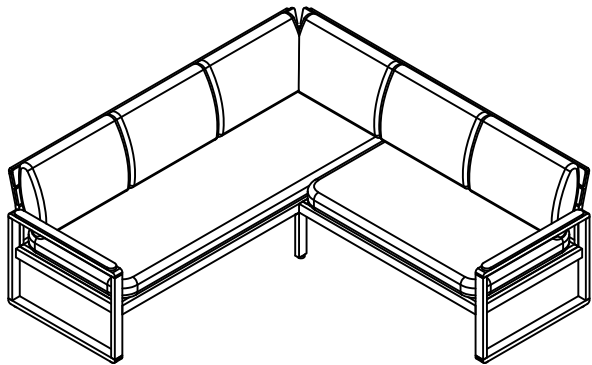

Components:

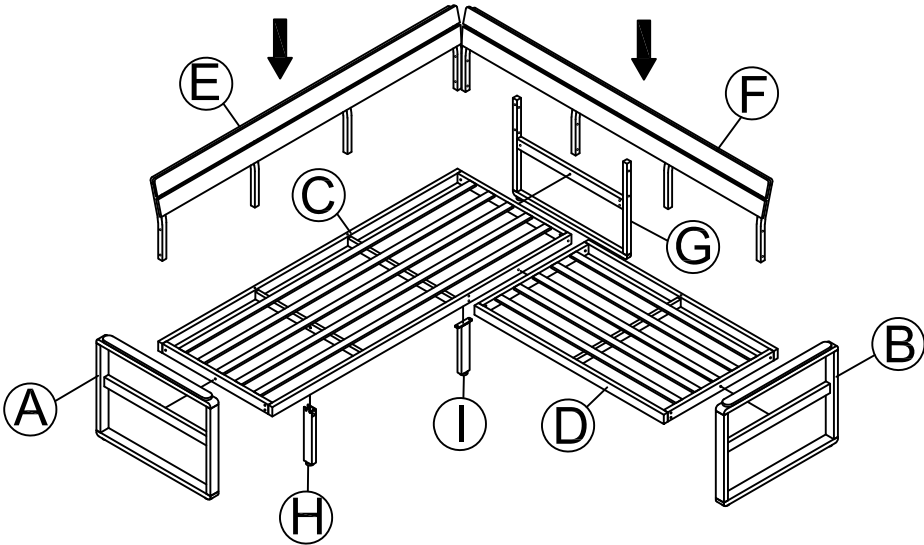


HARDWARES

①		x3	②		x26	③		x4	④		x2
Bolt M6x65mm			Bolt M6x40mm			Bolt M6x20mm			Nut M6x13mm		
⑤		x33	⑥		x2						
Rondelle Ø6.5x16x1mm			Allen Key M4mm								


PARST

A

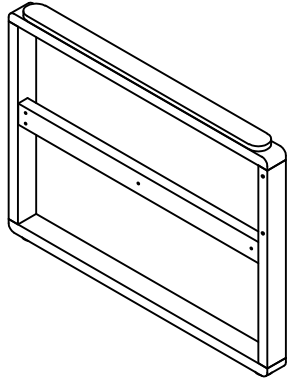


X1

B

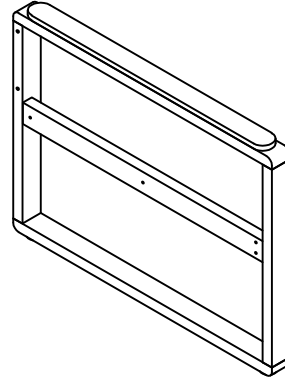


X1

C

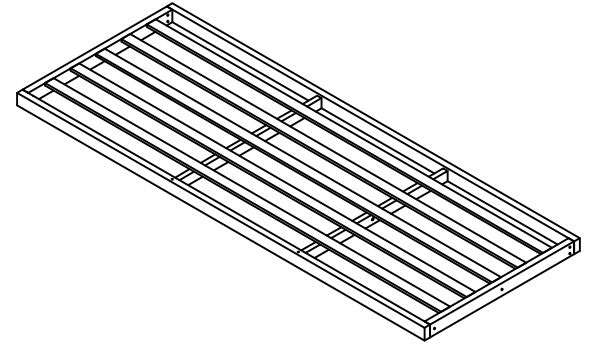


X1

D

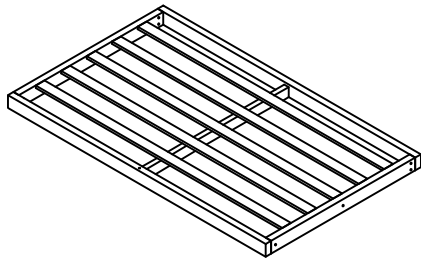


X1

E

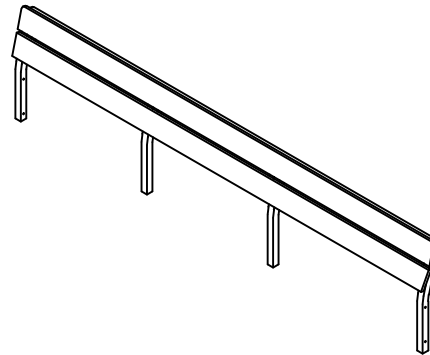

X1


F

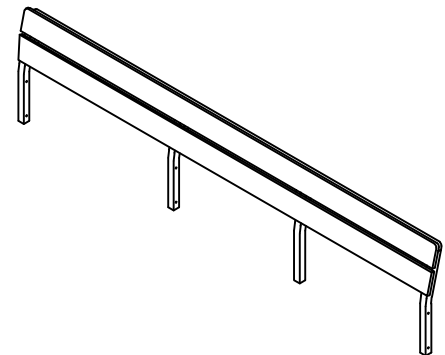

X1


PARST

G

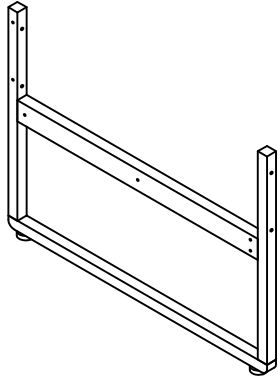


X1

H




X1

I




X1

K

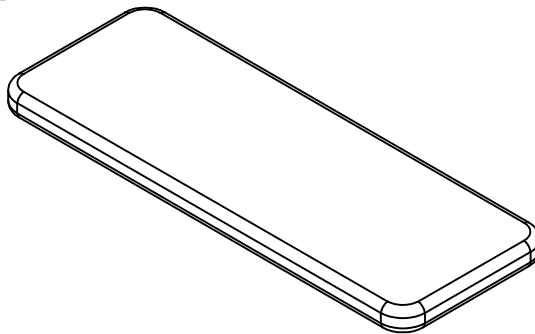


X1

L

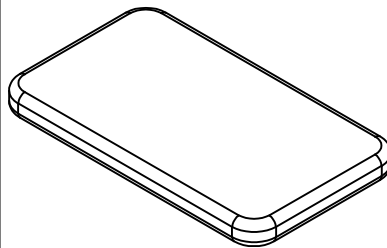


X1

M

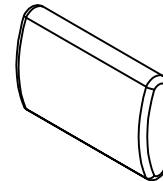




X4


N

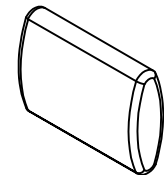




X2

Step 1


②x8	 Bolt M6x40mm	③x4	 Bolt M6x20mm
④x2	 Nut M6x13mm	⑤x12	 Rondelle Ø6.5x16x1mm
⑥x2	 Allen Key M4mm		

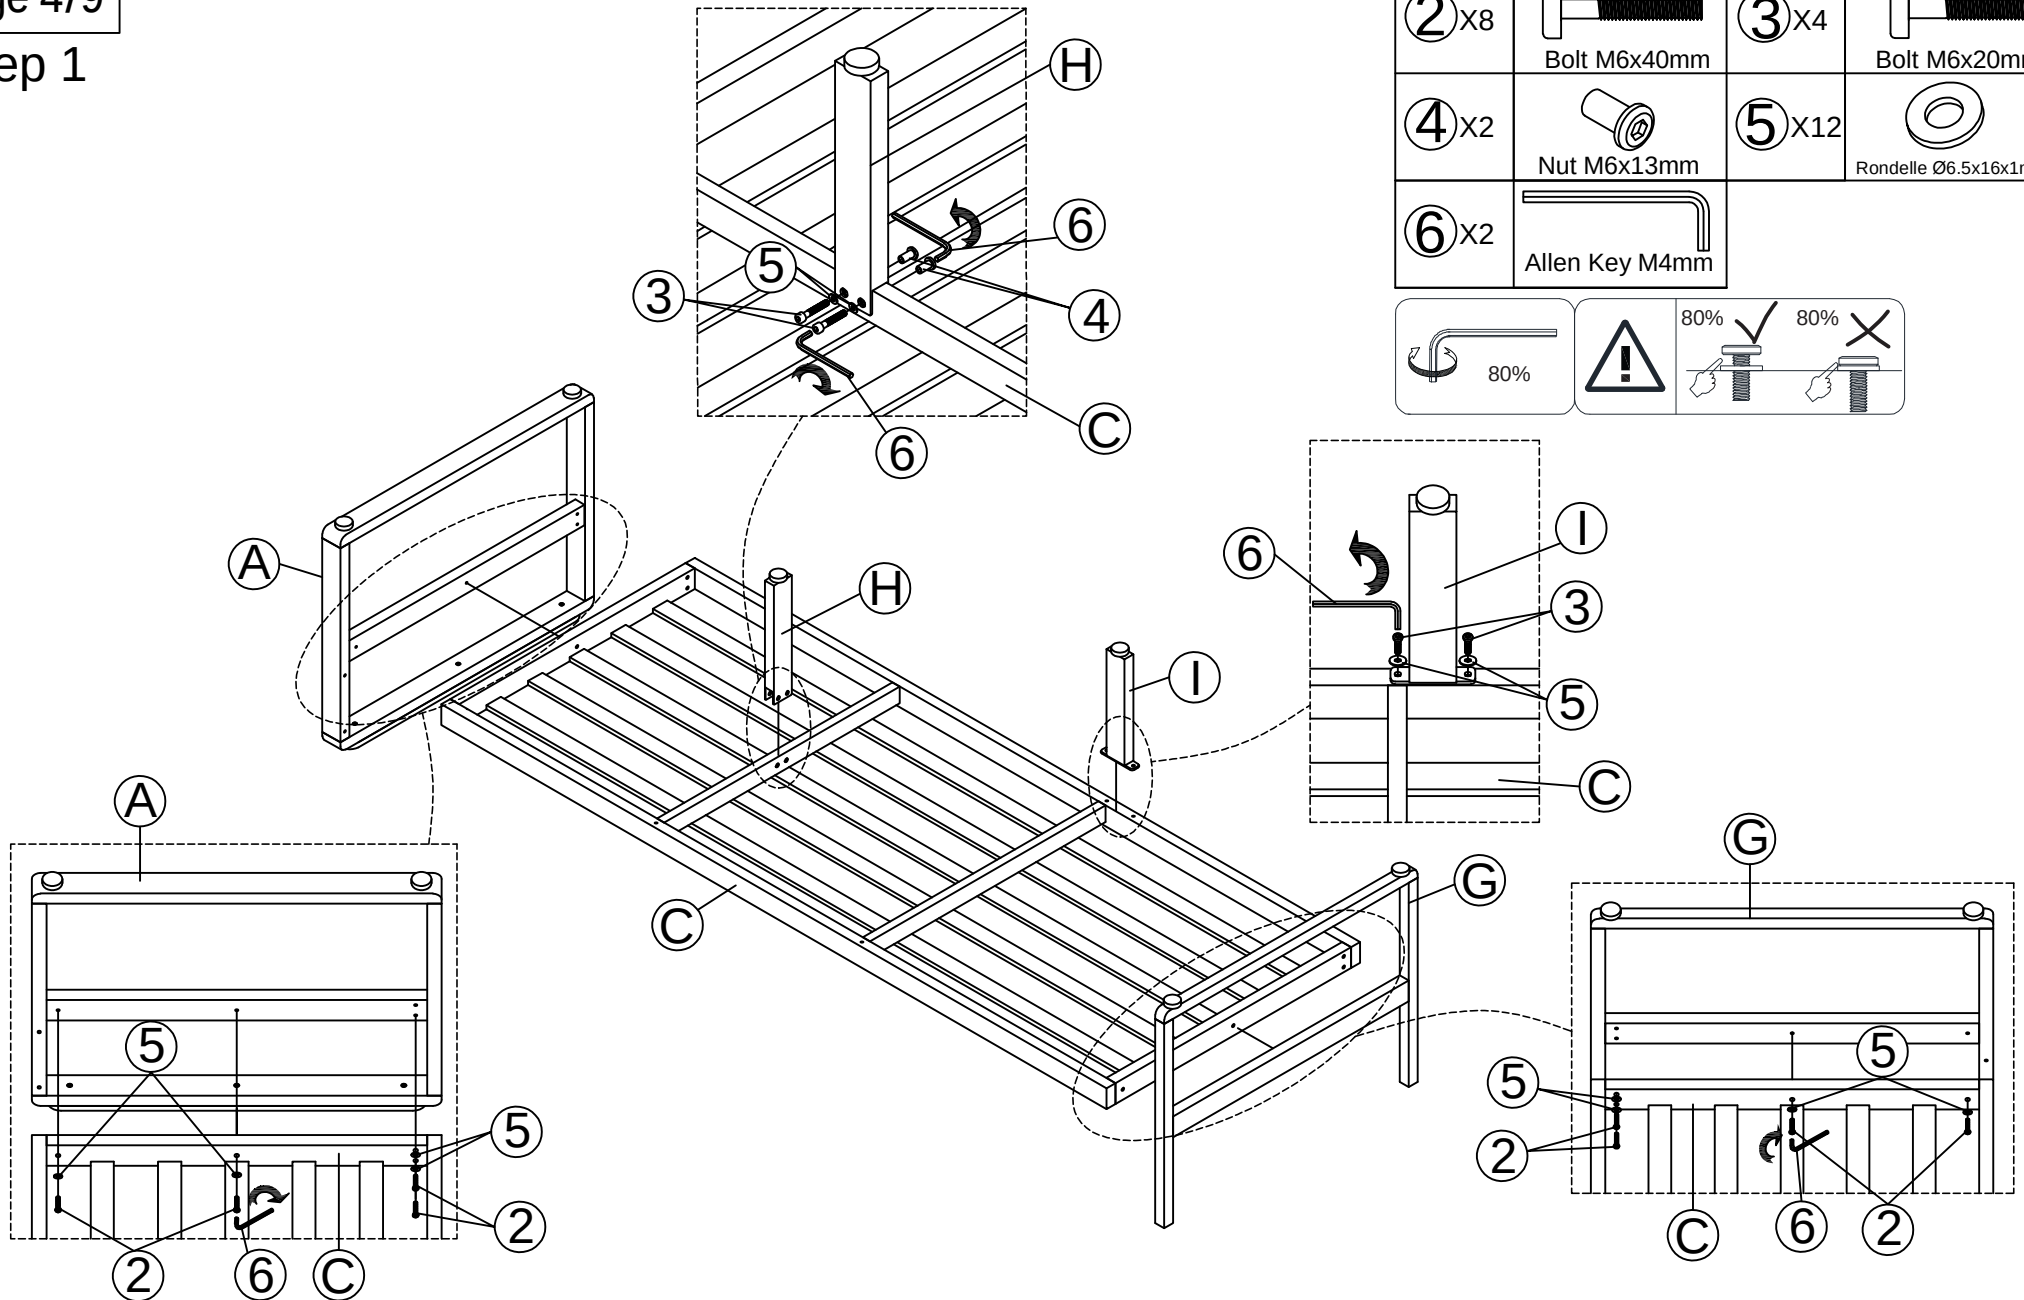


Step 2


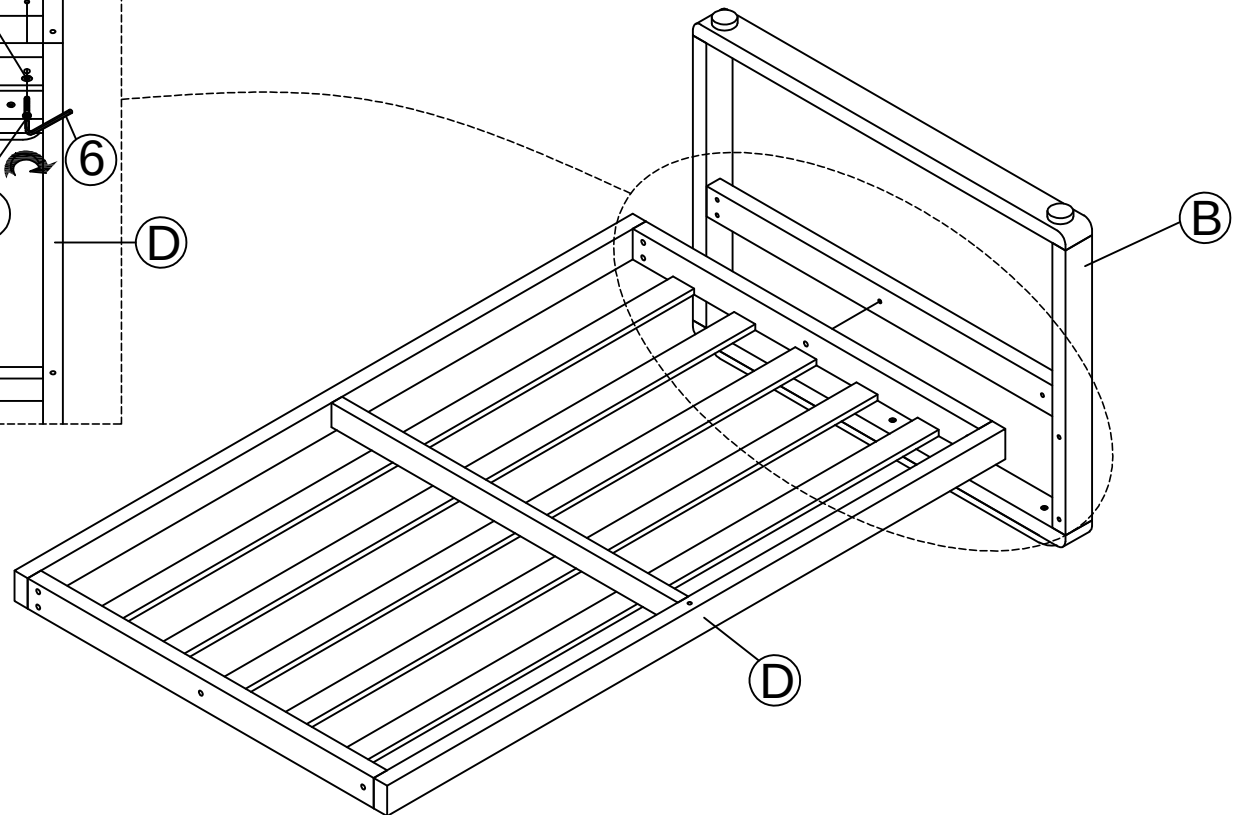
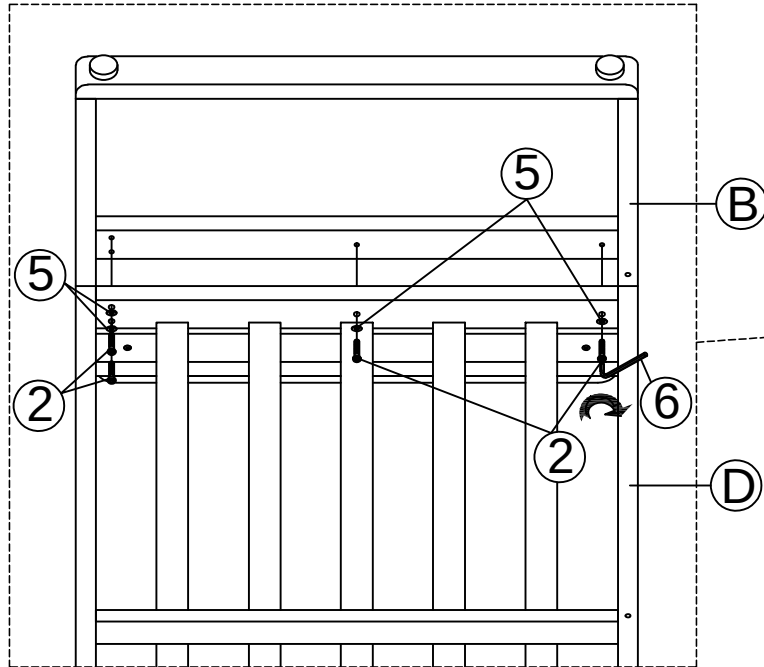
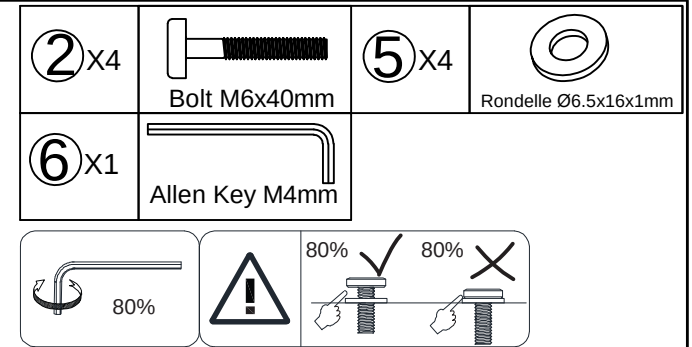






Step 3

②x4	 Bolt M6x40mm	⑤x4	 Rondelle Ø6.5x16x1mm
⑥x1	 Allen Key M4mm		
 80%		  80% 	

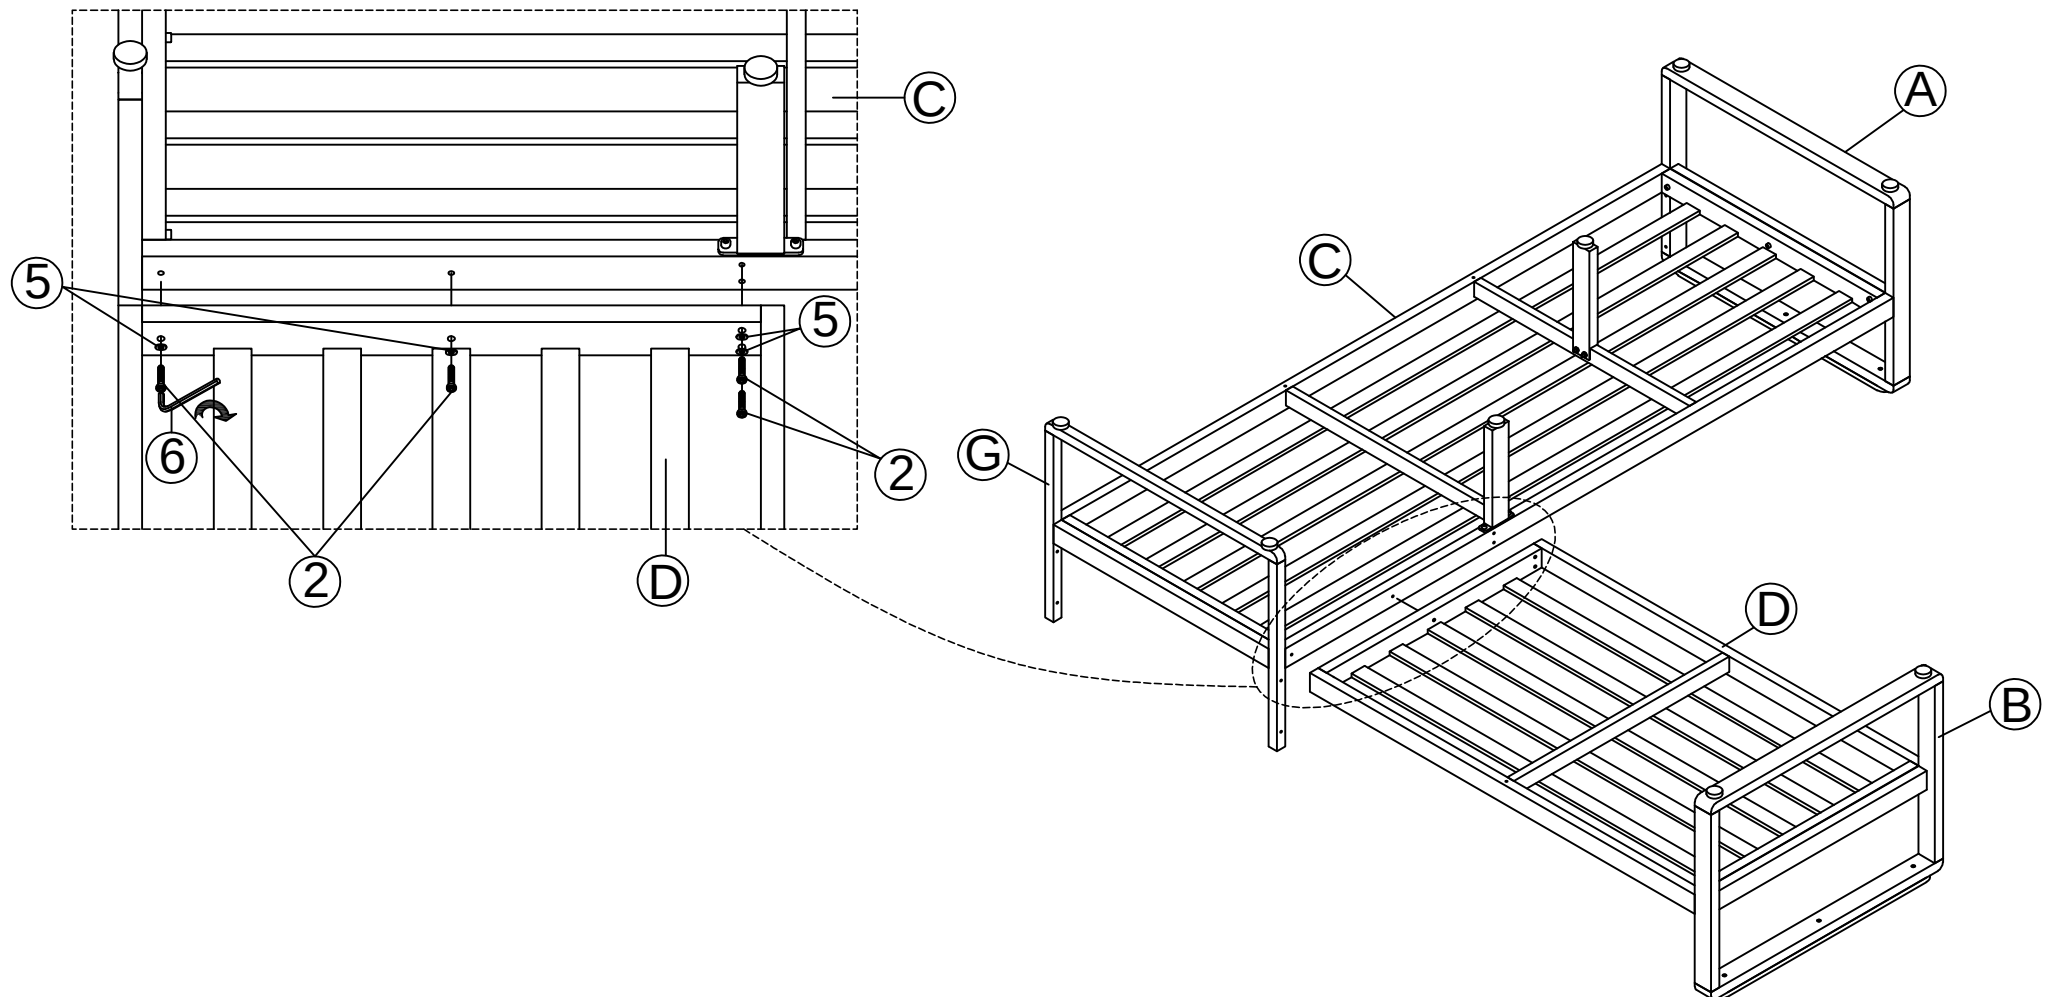




Step 4




①x2	 Bolt M6x65mm	②x4	 Bolt M6x40mm
⑤x6	 Rondelle Ø6.5x16x1mm	⑥x1	 Allen Key M4mm
 80%   80% ✓  80% ✗			

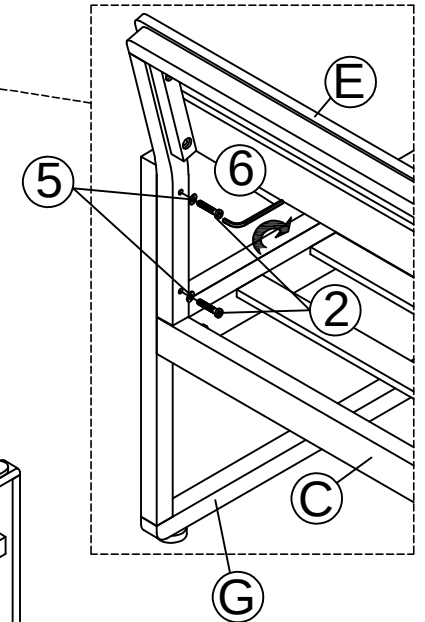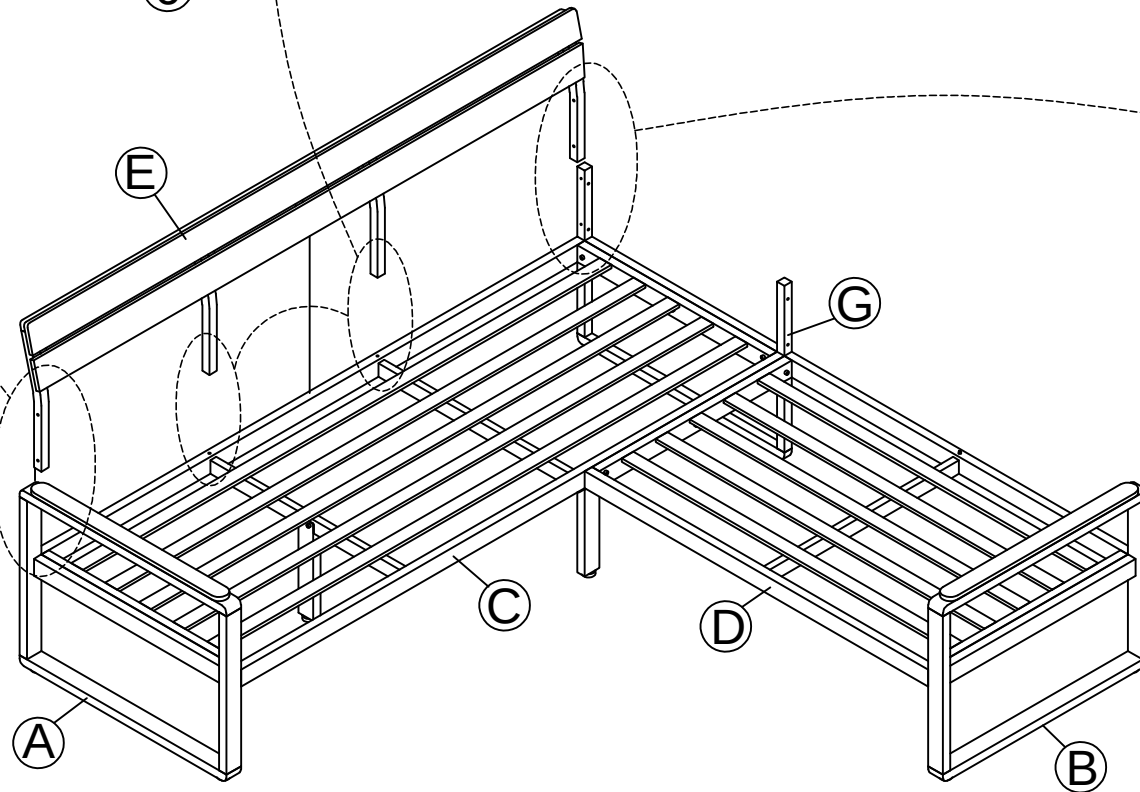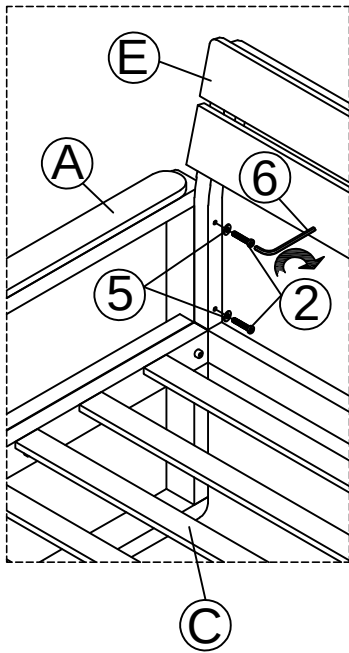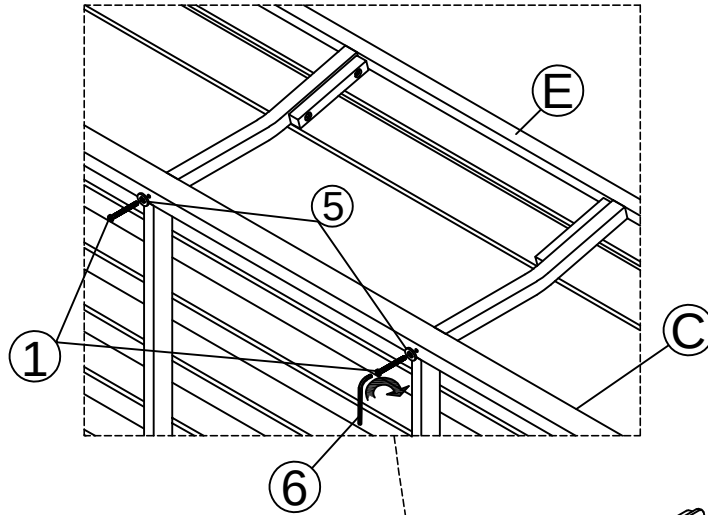



Step 5

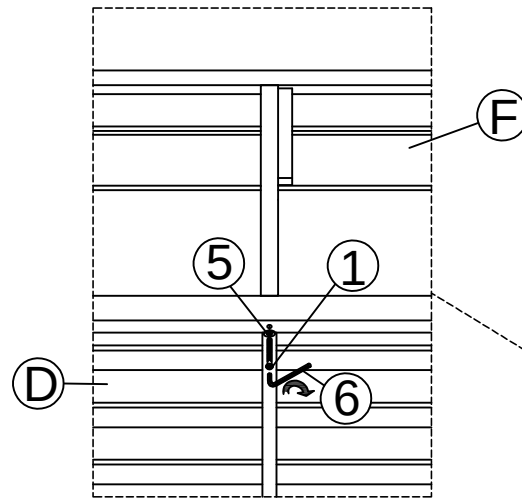

①x1	 Bolt M6x65mm	②x6	 Bolt M6x40mm
⑤x7	 Rondelle Ø6.5x16x1mm	⑥x1	 Allen Key M4mm
 100%  			

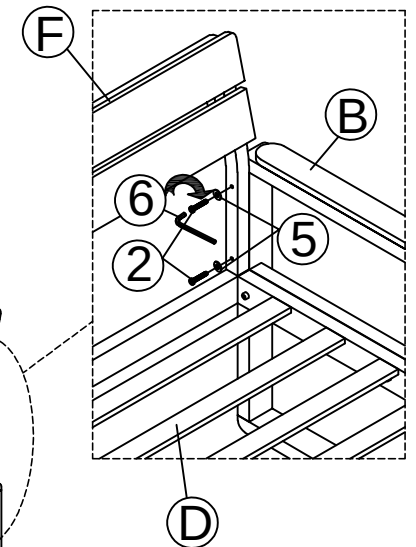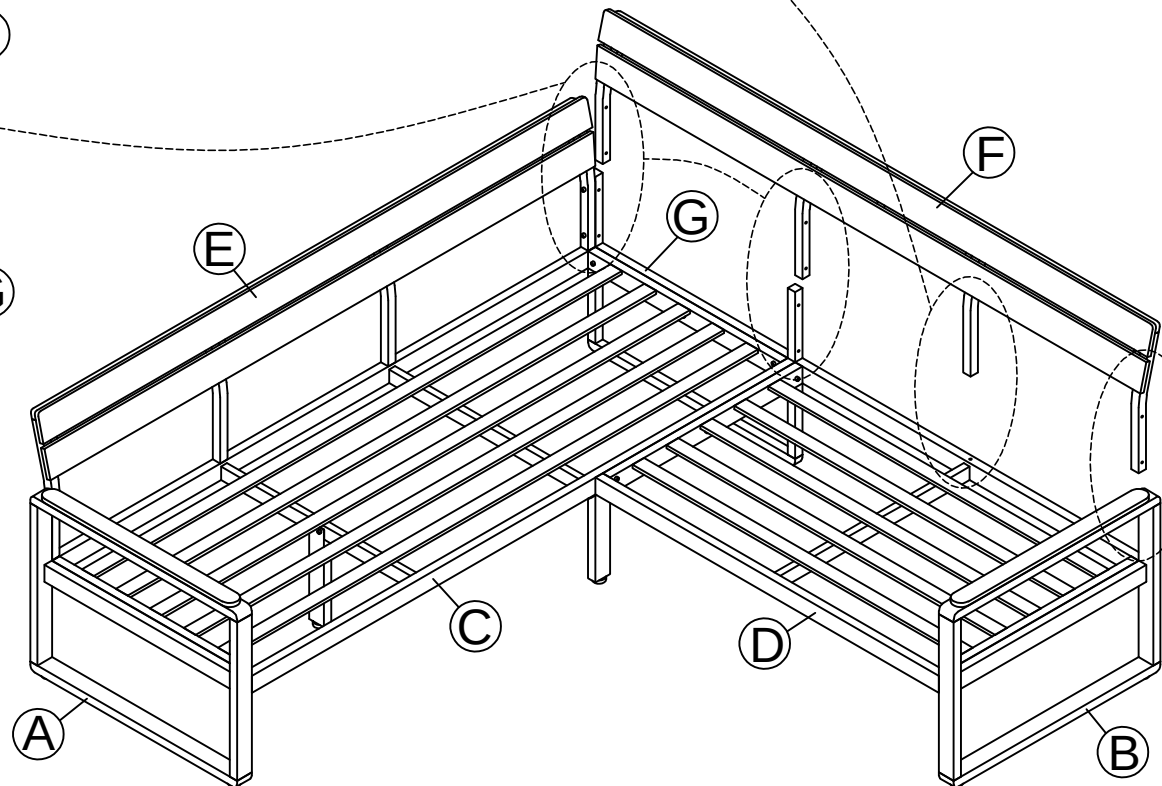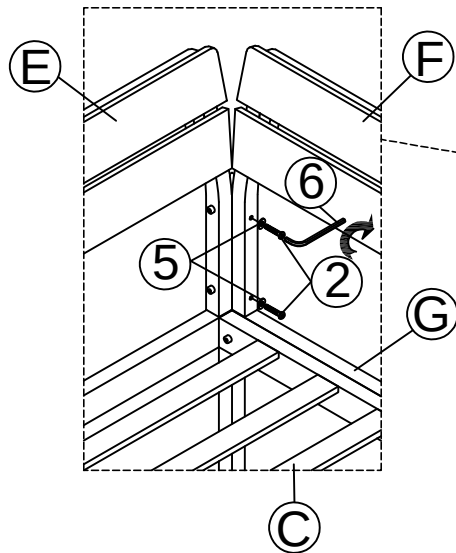

Step 6

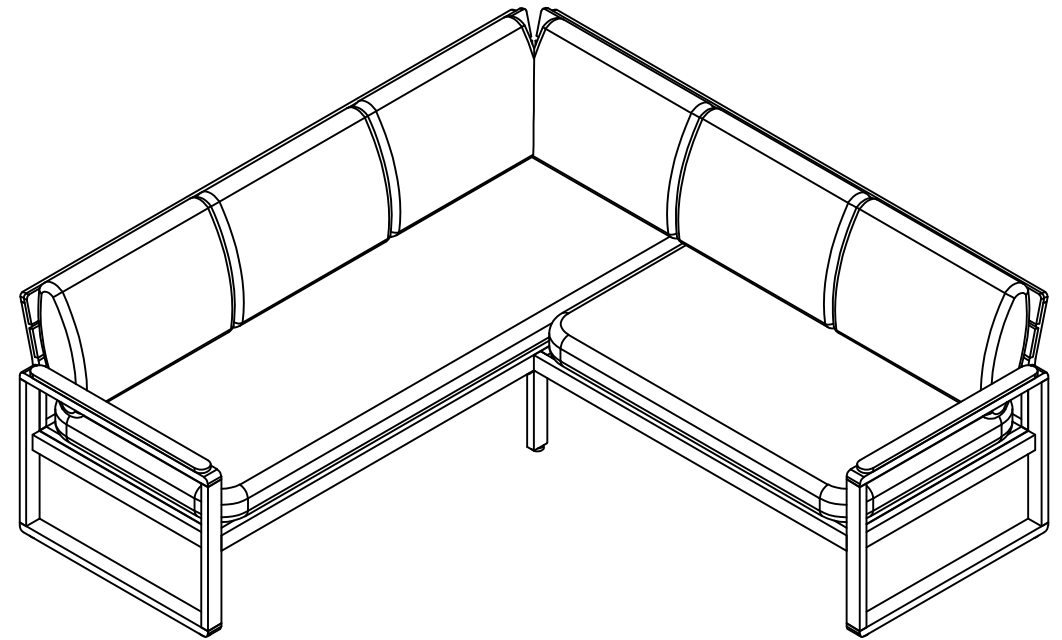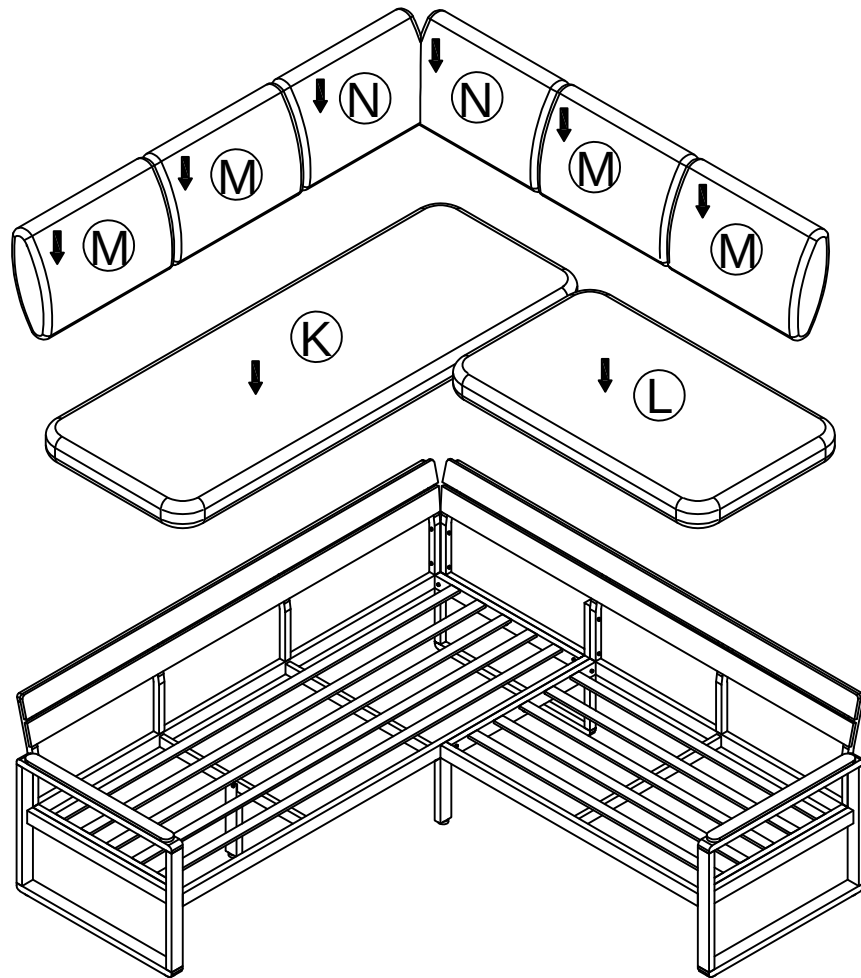

Finished