
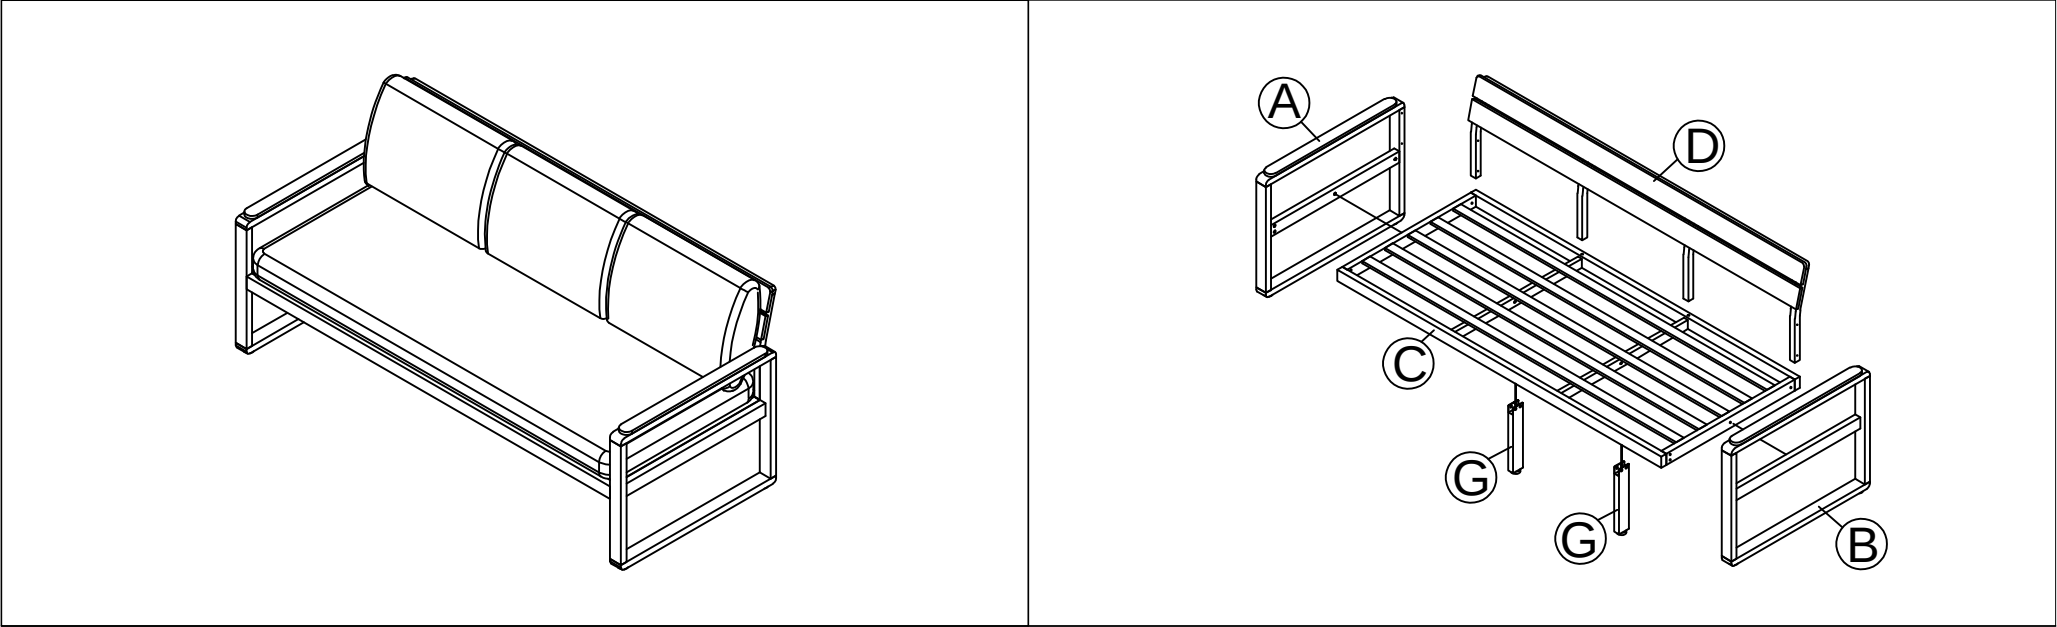




ASSEMBLY INSTRUCTIONS
TOPA TRIPLE SOFA




HARDWARES

①	 Bolt M6x20mm	x4	②	 Bolt M6x40mm	x12	③	 Bolt M6x65mm	x2	④	 Rondelle Ø6.5x16x1mm	x18
⑤	 Nut M6x13mm	x4	⑥	 Allen Key M4mm	x2						


PARST

A

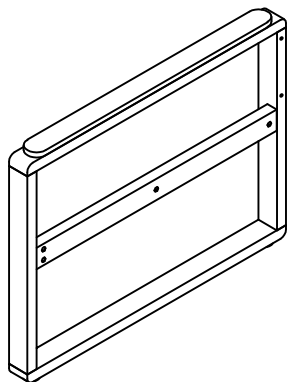


X1

B

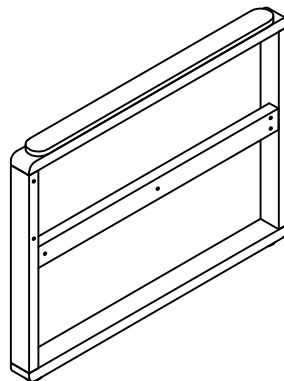


X1

C

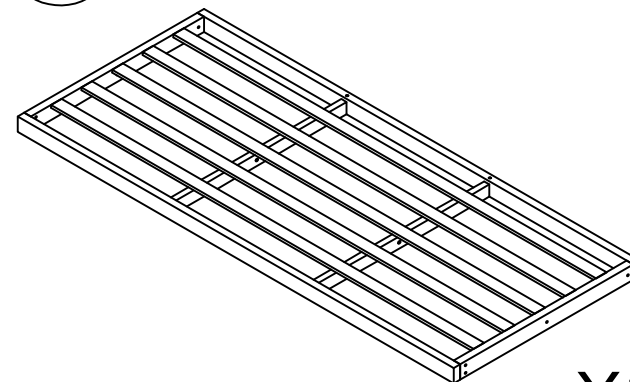


X1

D

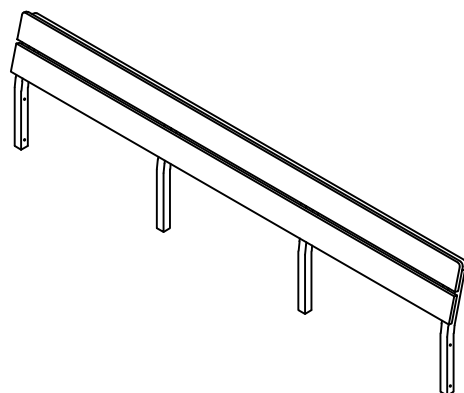


X1

E

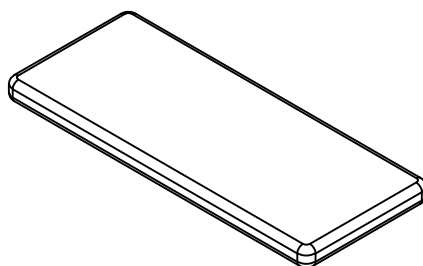


X1

F

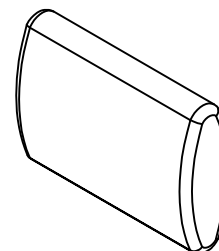


X3

G






X2




Step 1

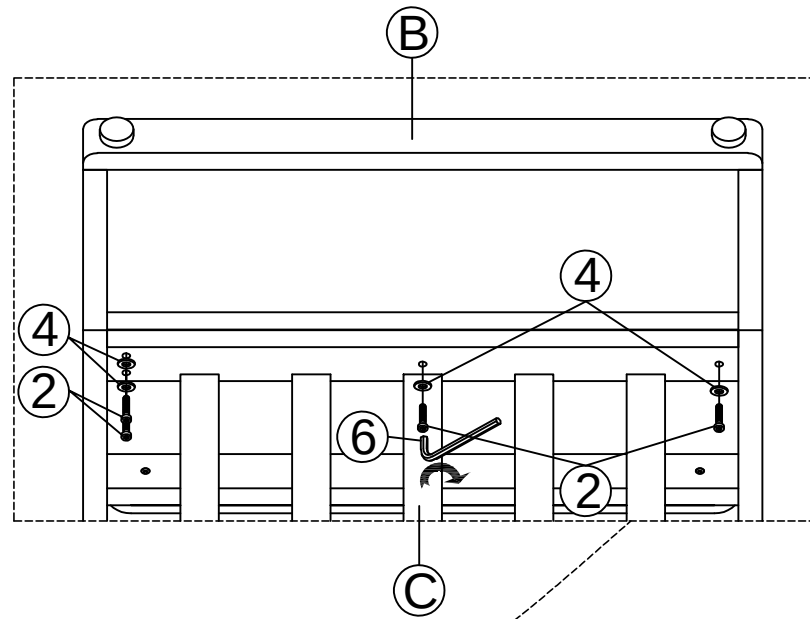



①x4	Bolt M6x20mm	②x8	Bolt M6x40mm	④x12	Rondelle Ø6.5x16x1mm
⑤x4	Nut M6x13mm	⑥x2	Allen Key M4mm		
80% 80% ✓ 80% ✗					

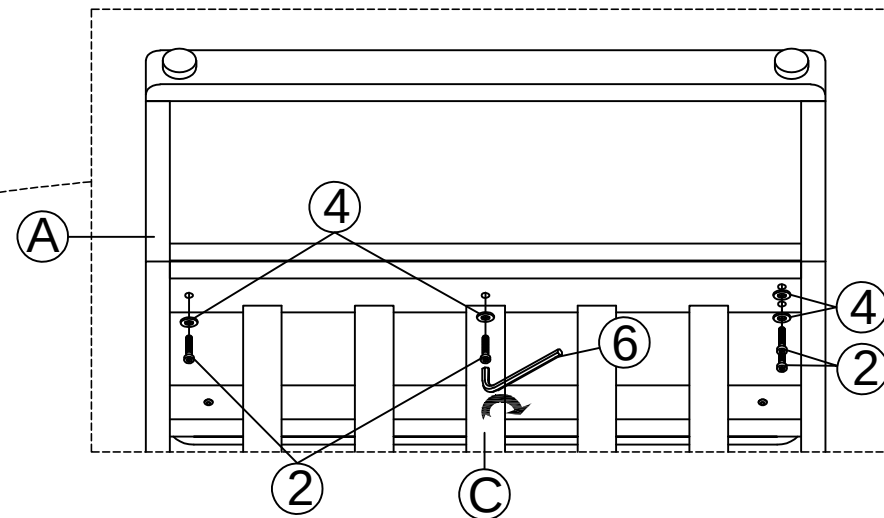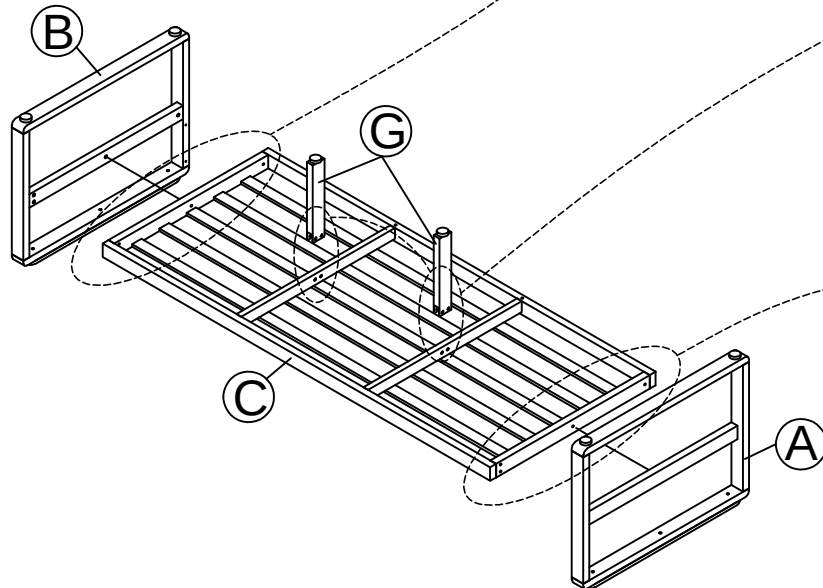
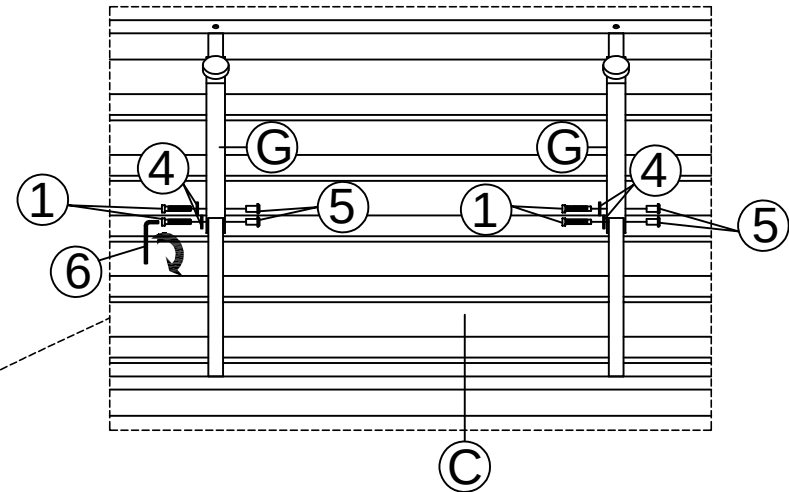


Step 2


②x4		③x2	
	Bolt M6x40mm		Bolt M6x65mm
④x6		⑥x1	
	Rondelle Ø6.5x16x1mm		Allen Key M4mm





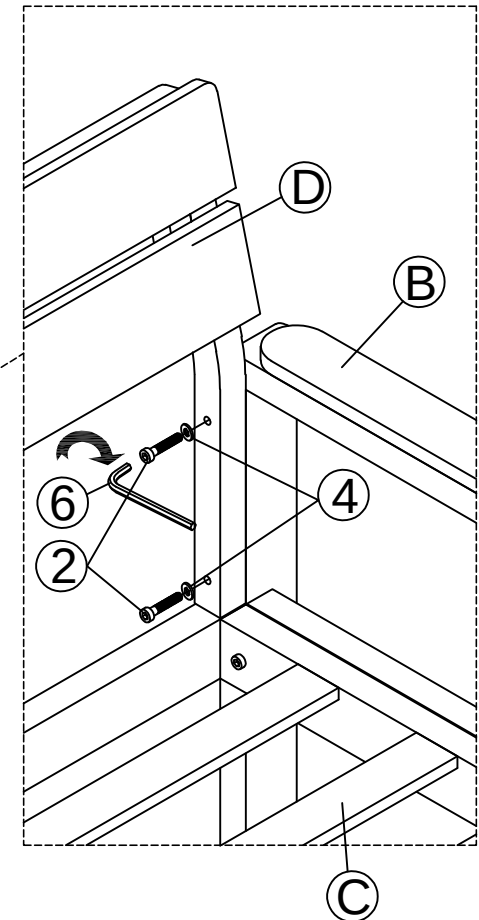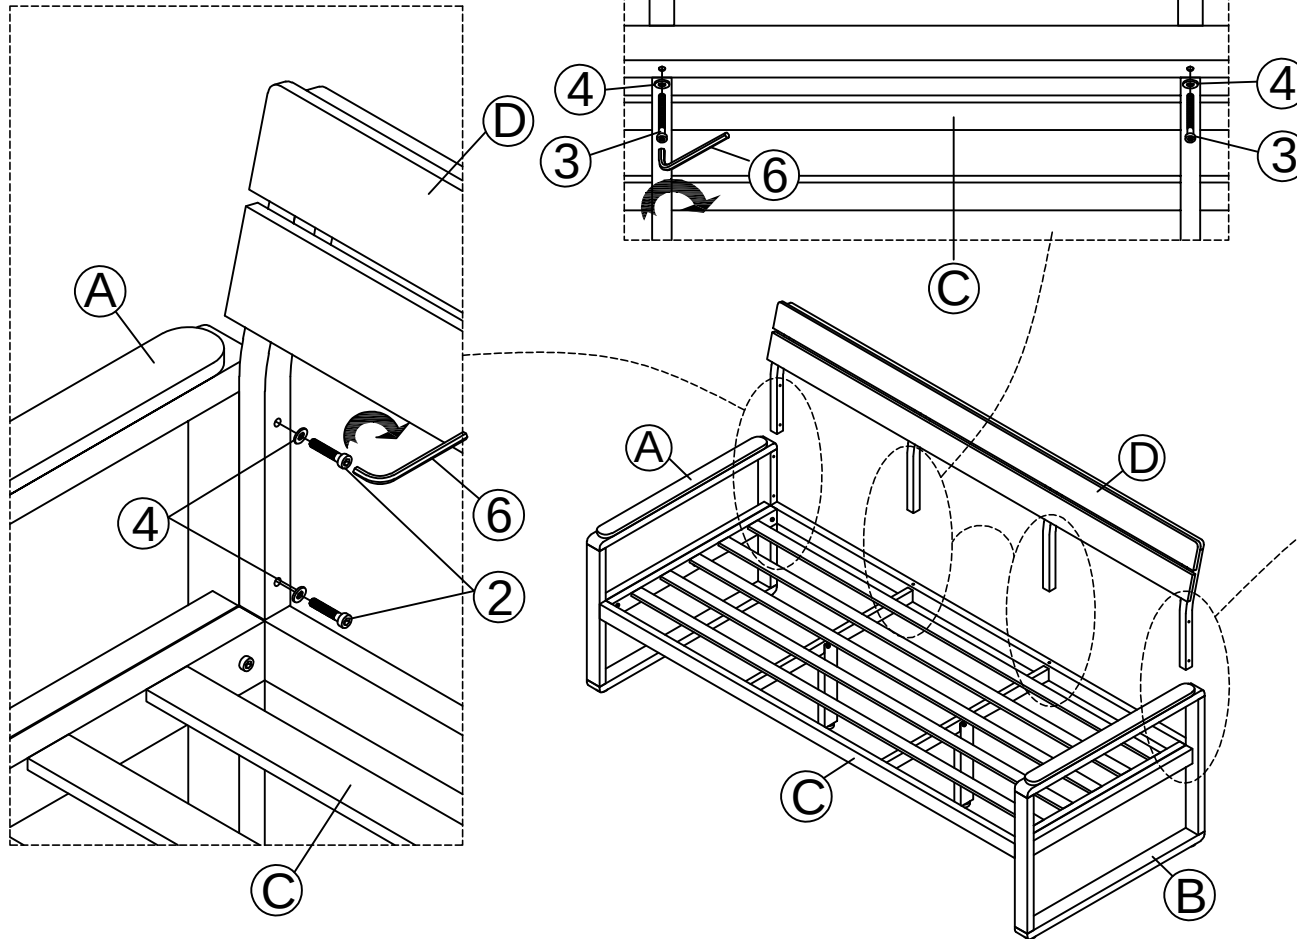

Step 3

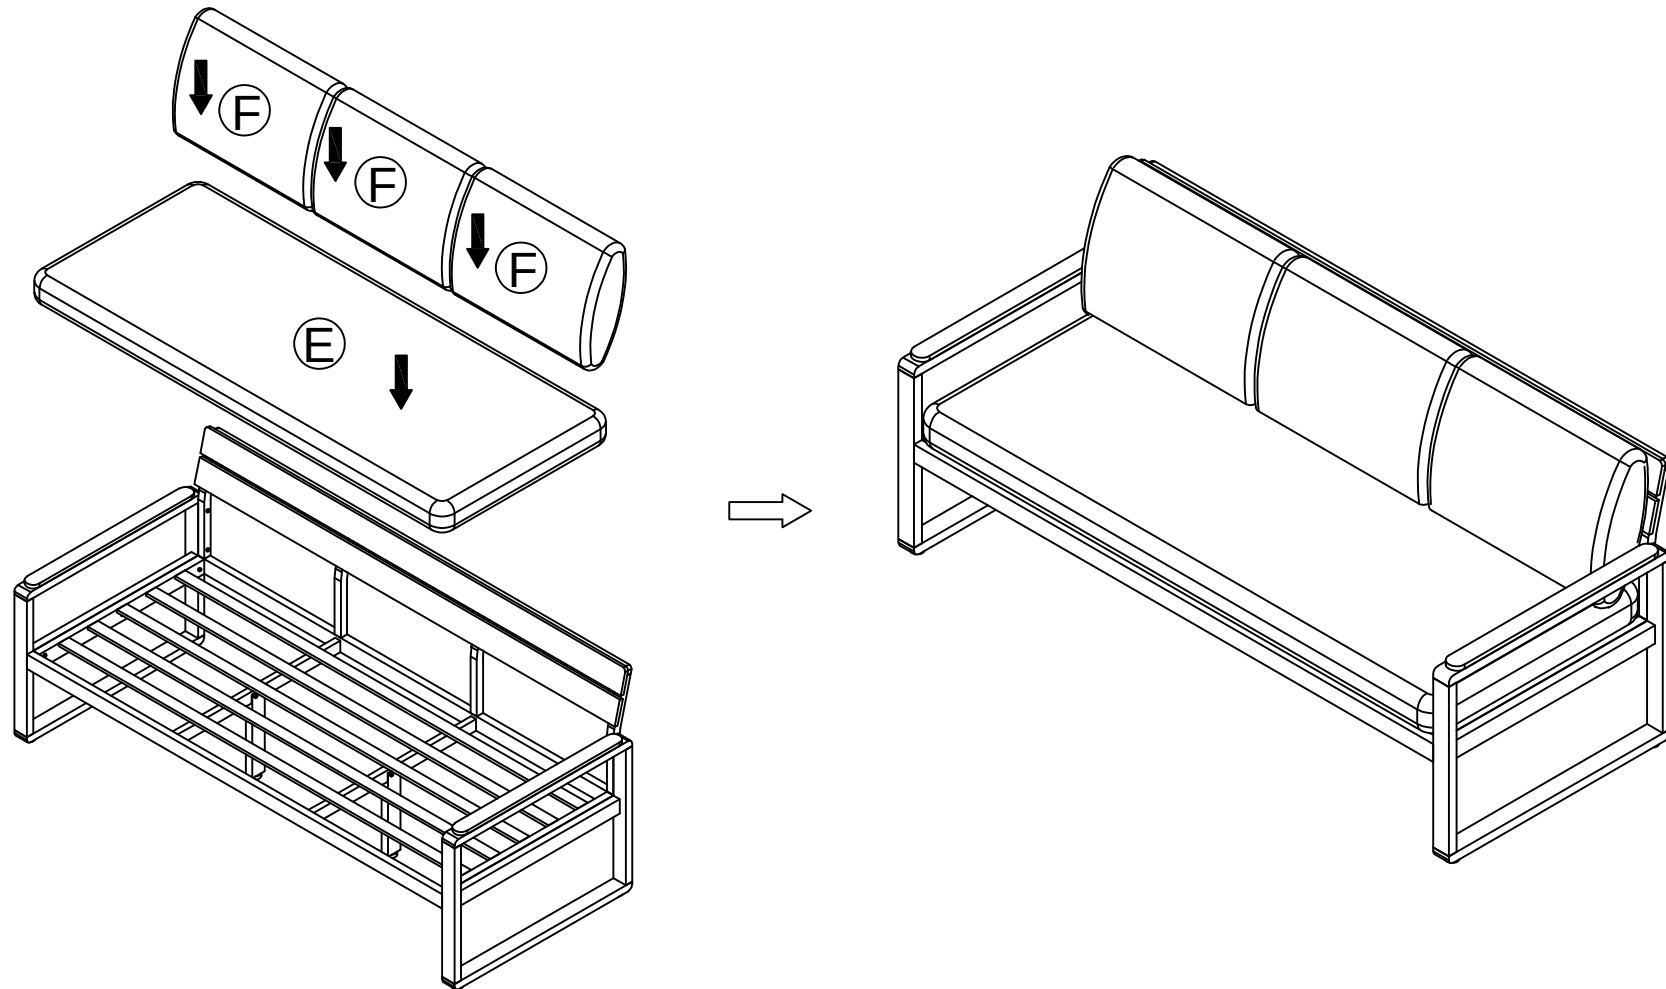

Finished