


### НЕОБХОДИМЫЕ ИНСТРУМЕНТЫ



### СПИСОК ДЕТАЛЕЙ

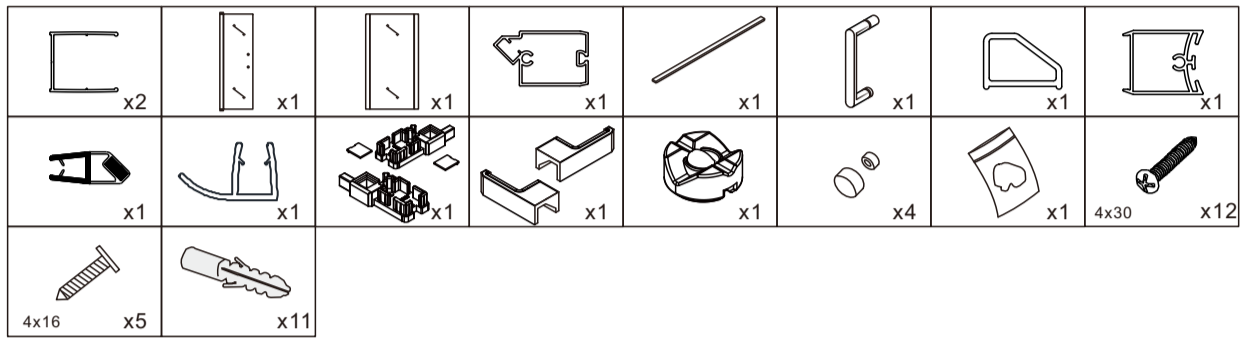

○ Душевые углы, шторы, двери, перегородки ABBER производятся из закалённого стекла

**1**

Diagram showing dimensions A and B for the shower enclosure.

Размеры (мм)	B (мм)
600	586-601
700	686-701
800	786-801
900	886-901
1000	986-1001

Размеры (мм)	A (мм)
700	684-699
800	784-799
900	884-899
1000	984-999
1100	1084-1099
1200	1184-1199

**2**

Diagram showing the installation of the top rail (A) and bottom rail (B) to the wall. It includes circular callouts showing the use of a drill (Φ6) and a rubber mallet to secure the rails.

**3**

Diagram showing the installation of the door handle and door hinge. It includes circular callouts showing the placement of the handle and hinge on the door panel.

**4**

Diagram showing the installation of the side rails and door panels. It includes circular callouts showing the use of a screwdriver and a rubber mallet to secure the side rails.

**5**

Diagram showing the installation of the door stop and door latch. It includes circular callouts showing the use of a screwdriver to secure these components.

**6**

Diagram showing the final installation of the door panel and the application of the door seal. It includes circular callouts showing the use of scissors to trim the seal and a rubber mallet to secure the panel.

