

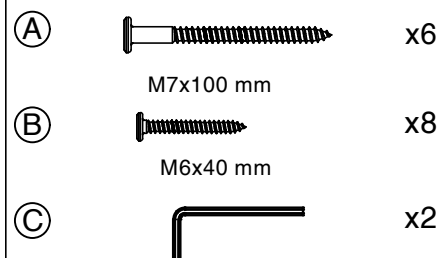



ASSEMBLY INSTRUCTIONS

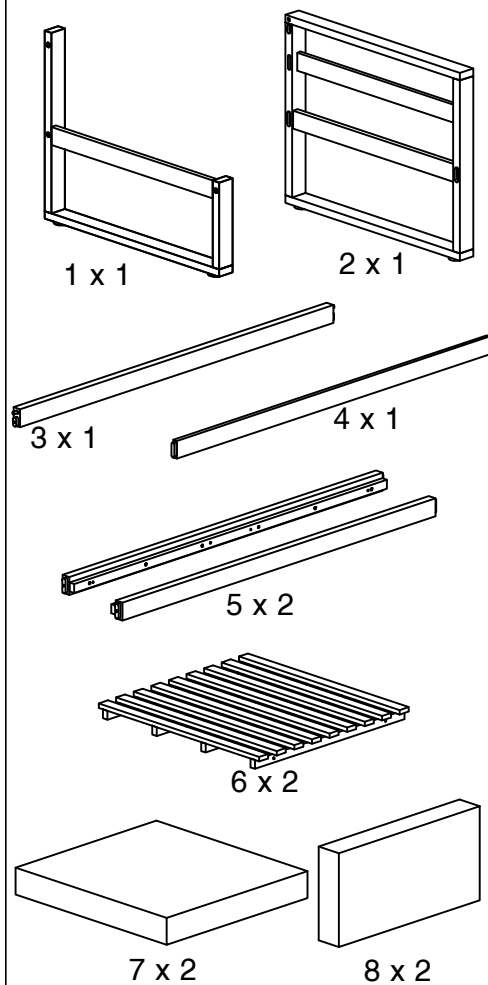


STEP 1

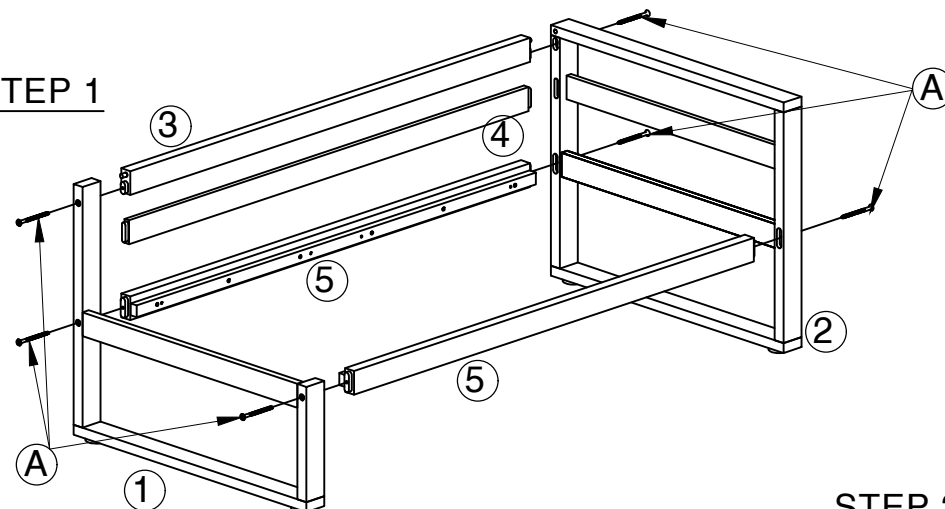



STEP 3

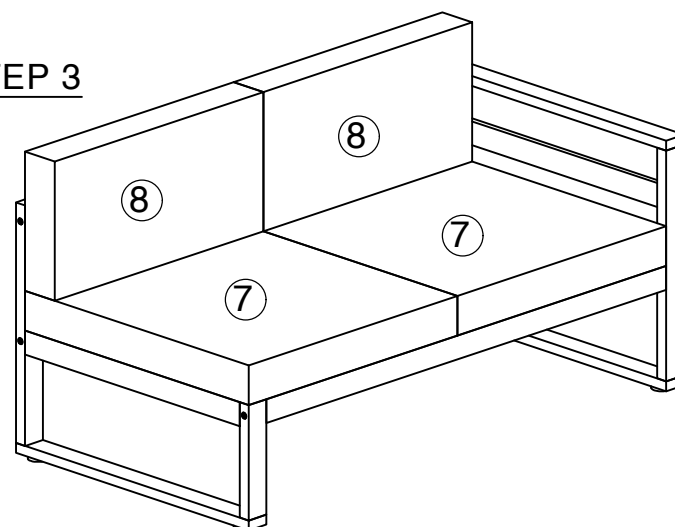


STEP 2

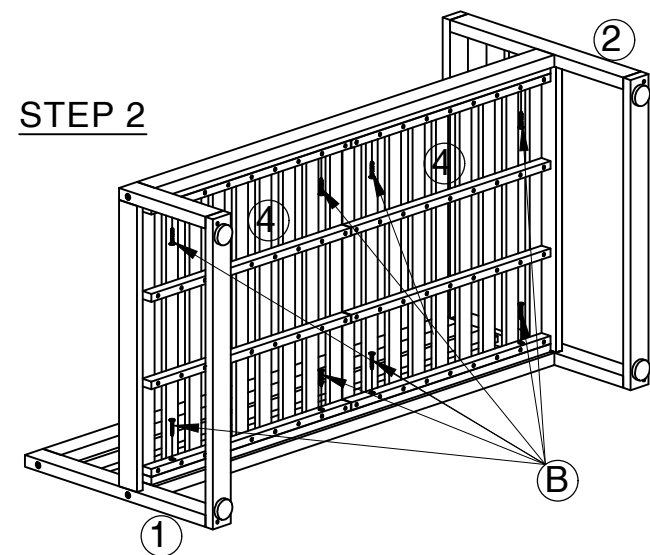


ASSEMBLY INSTRUCTIONS

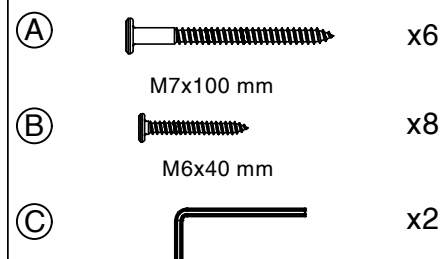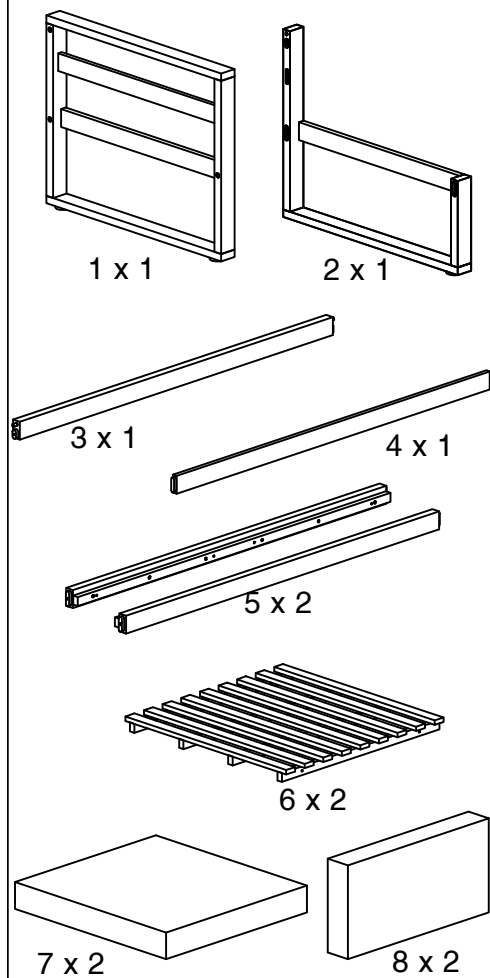


STEP 1

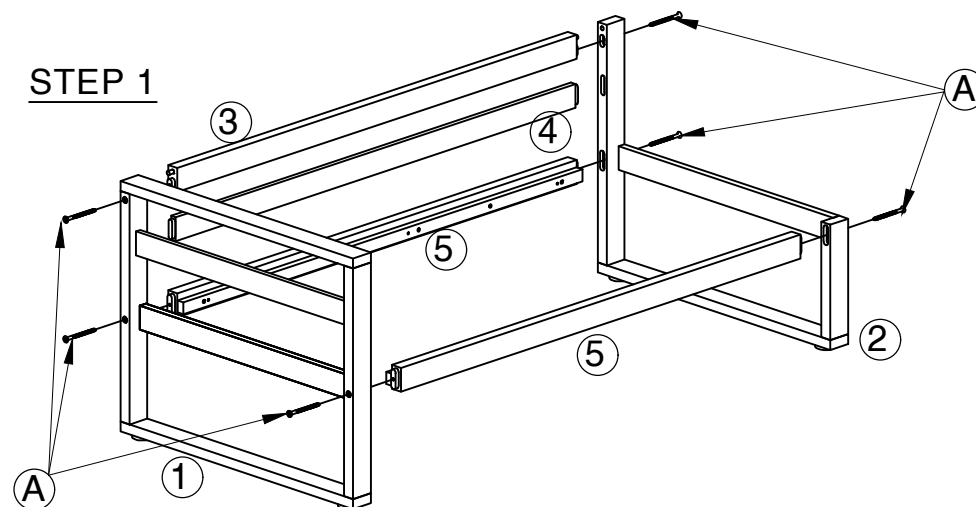



STEP 3

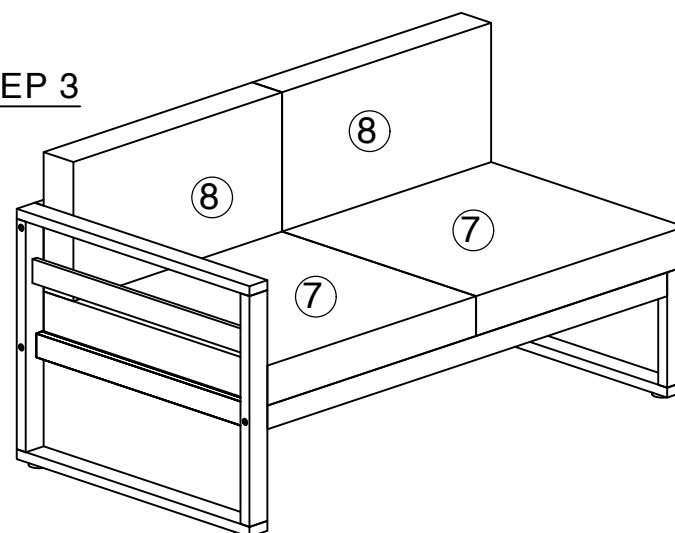


STEP 2

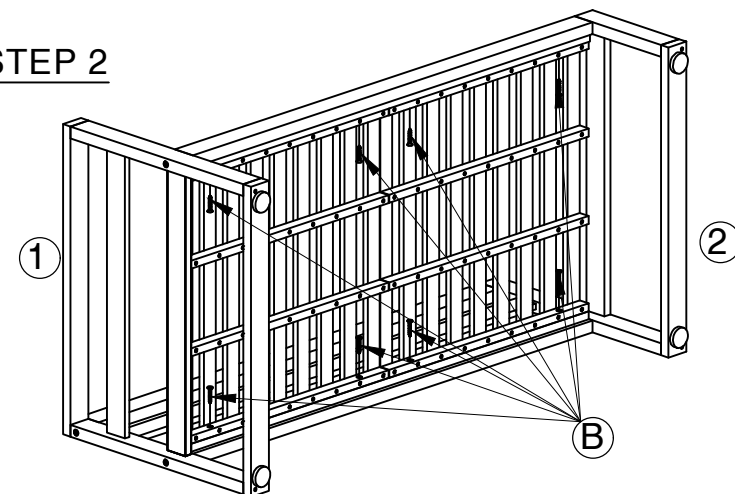


ASSEMBLY INSTRUCTIONS

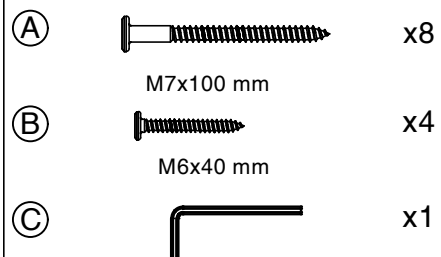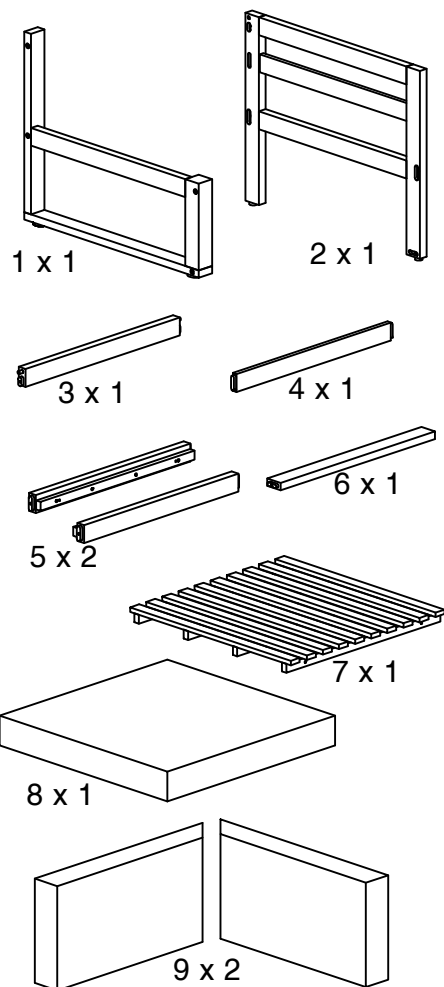


STEP 1

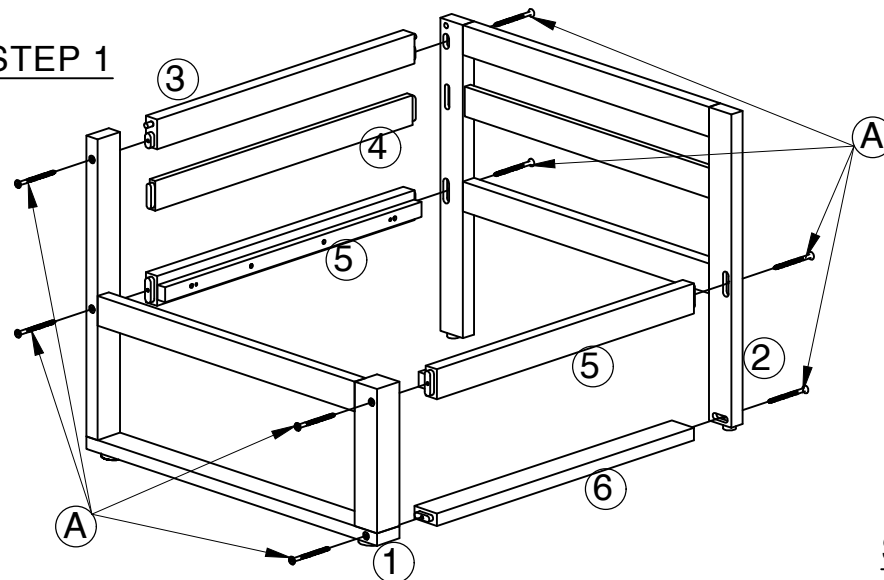



STEP 3

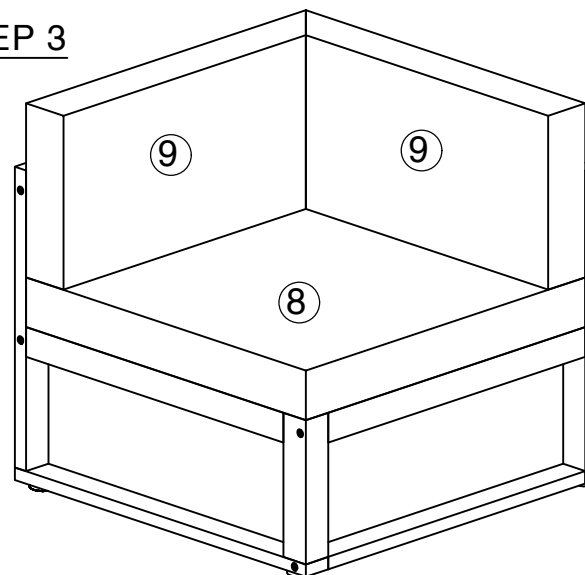


STEP 2

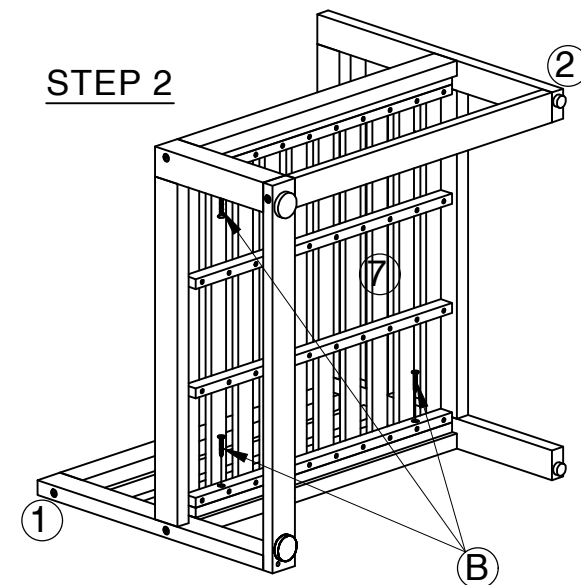


ASSEMBLY INSTRUCTIONS

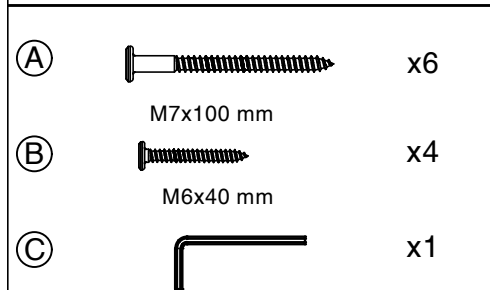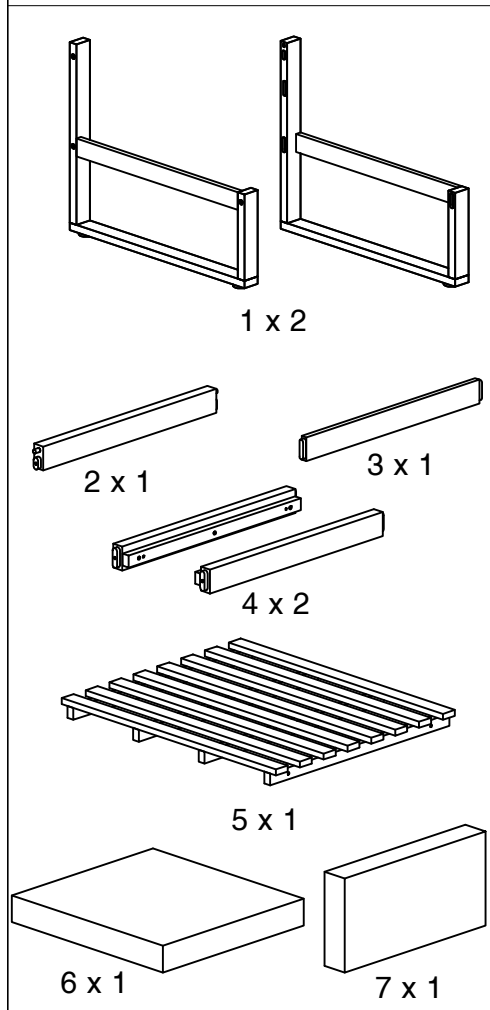


STEP 1

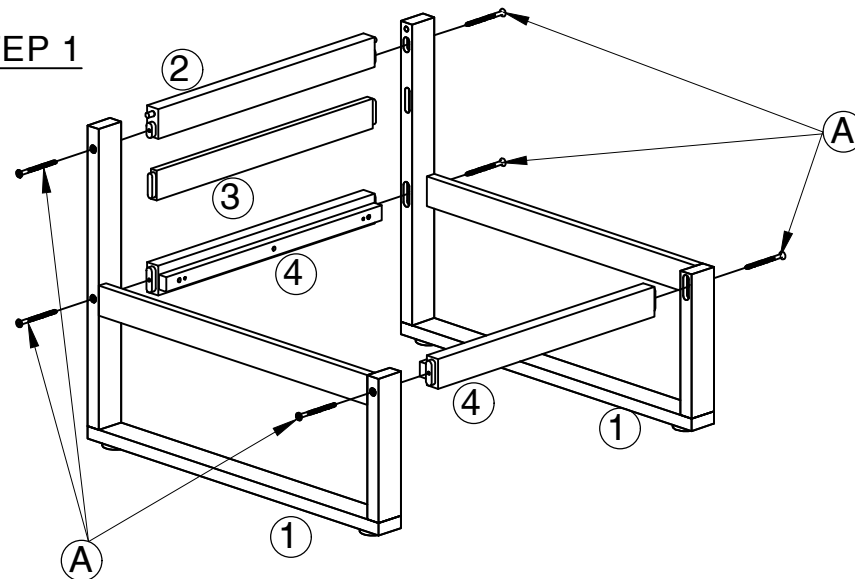


STEP 3

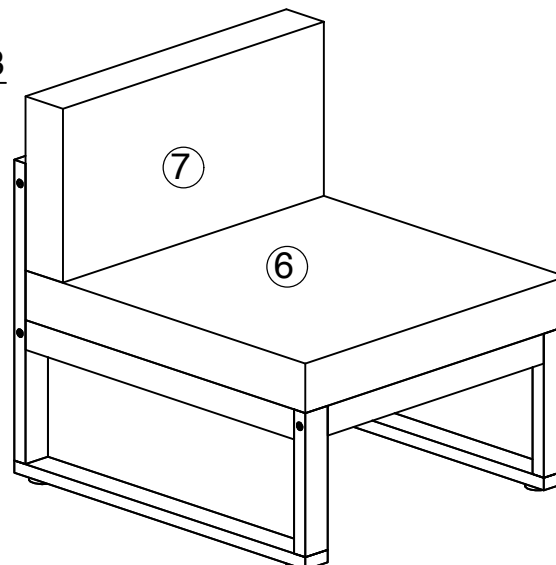


STEP 2

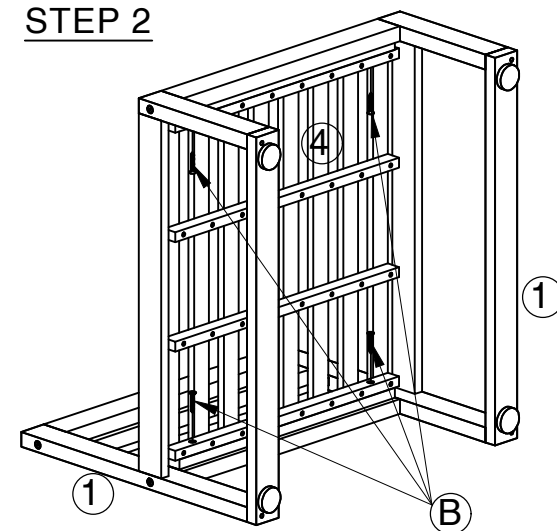


ASSEMBLY INSTRUCTIONS

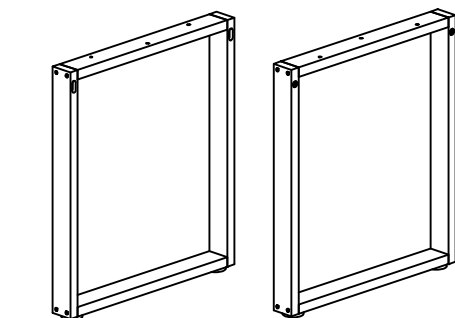

1 x 2

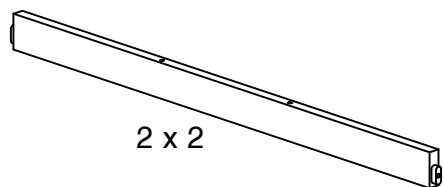


2 x 2

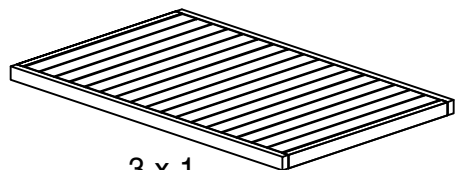


3 x 1


STEP 1

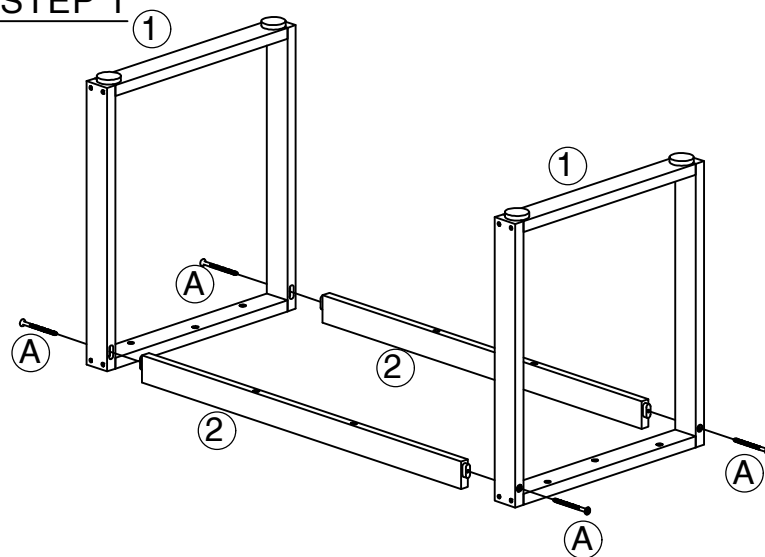

STEP 3

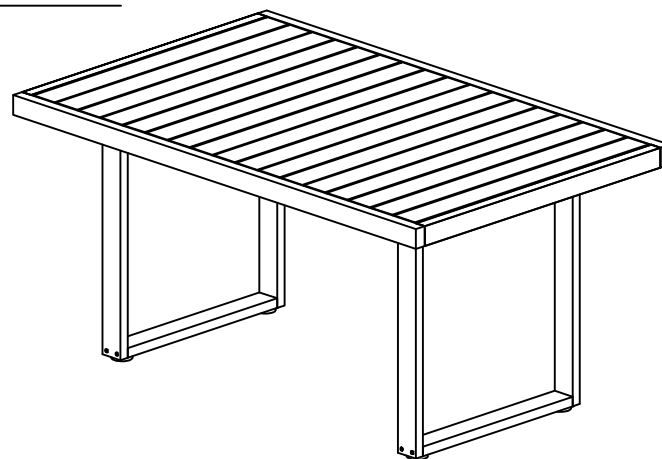

STEP 2

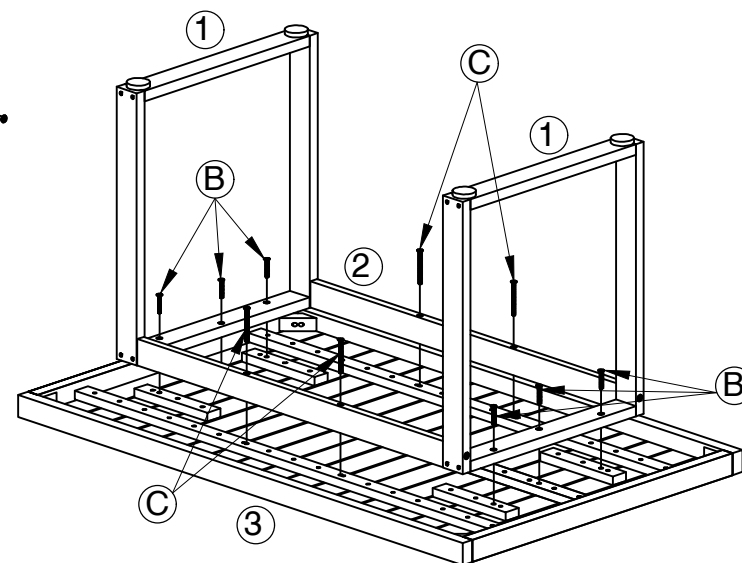

- | | | |
|-----|---|----|
| (A) |  | x4 |
| | M7x90 mm | |
| (B) |  | x6 |
| | M6x40 mm | |
| (C) |  | x4 |
| | M6x75 mm | |
| (D) |  | x2 |